



Sansa e250 Memory Chip Replacement

Replacing the memory chip on your Sandisk Sansa e250 mp3 player.

Written By: Lauren



 **TOOLS:**

- [Tweezers \(1\)](#)

Step 1 — Sansa e250



- Use a #0 Phillips head screwdriver to remove the four small black screws from the back of the device.
- *(i)* To ensure you don't lose any tiny parts during the replacement process, place parts on the white magnetic sheet.
- Once the screws have been removed, proceed to take off back cover.

Step 2



- Now, proceed to lift the battery out and remove it.

Step 3




- Use a #0 Phillips screwdriver to remove the four small silver screws from the outside corners of the battery housing.

Step 4



- Now gently pry the front cover off. A Black Spudger can be used to assist in the removal of the cover.

Step 5

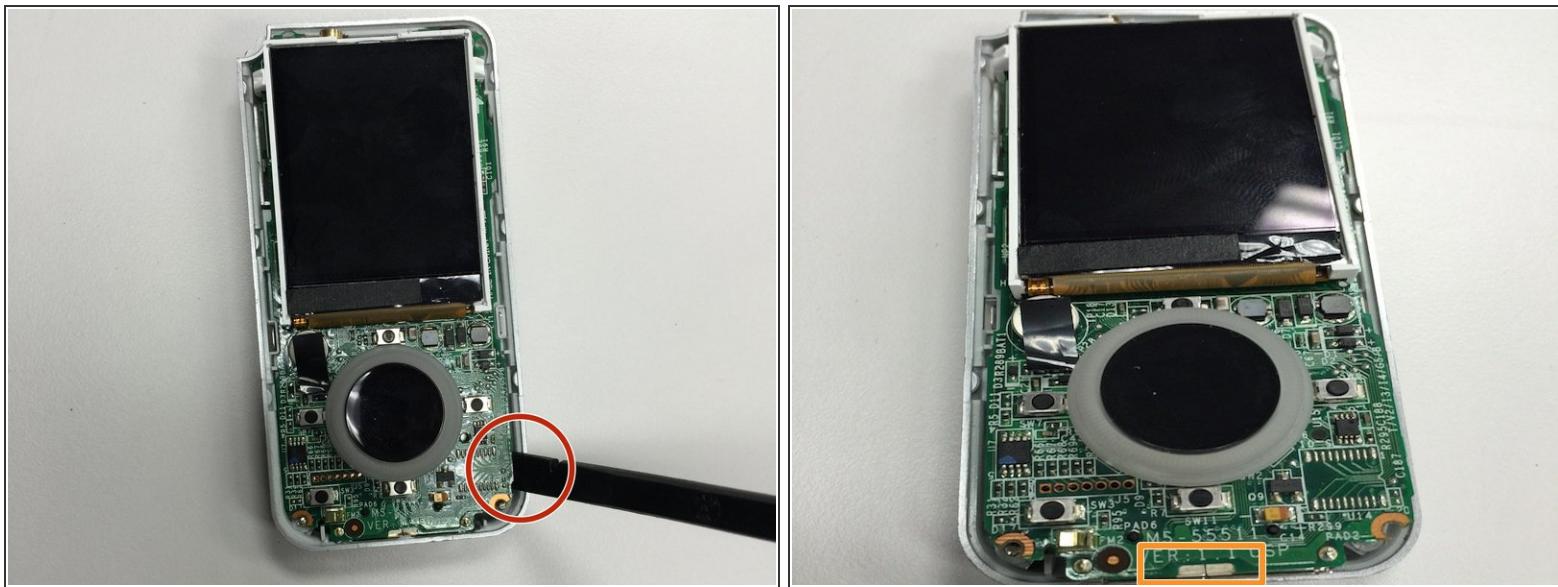

- Gently separate the mainboard from the battery housing. This may be difficult around the headphone jack. Use a spudger if necessary.
- Pull the motherboard out and down away from the top of the phone.

Step 6 — Memory Chip



- Peel off the small foam rectangle on the back of the mainboard and set to the side.
- Peel off the black tape and set off to the side.

Step 7



- Gently pry up the memory chip and replace it with the new one.

To reassemble your device, follow these instructions in reverse order.