



Sanyo VPC S1275 Case Replacement

Written By: Ariana Martinez



This document was generated on 2019-09-29 04:27:56 AM (MST).


INTRODUCTION

Use this guide to remove or replace the case.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)

Step 1 — Battery

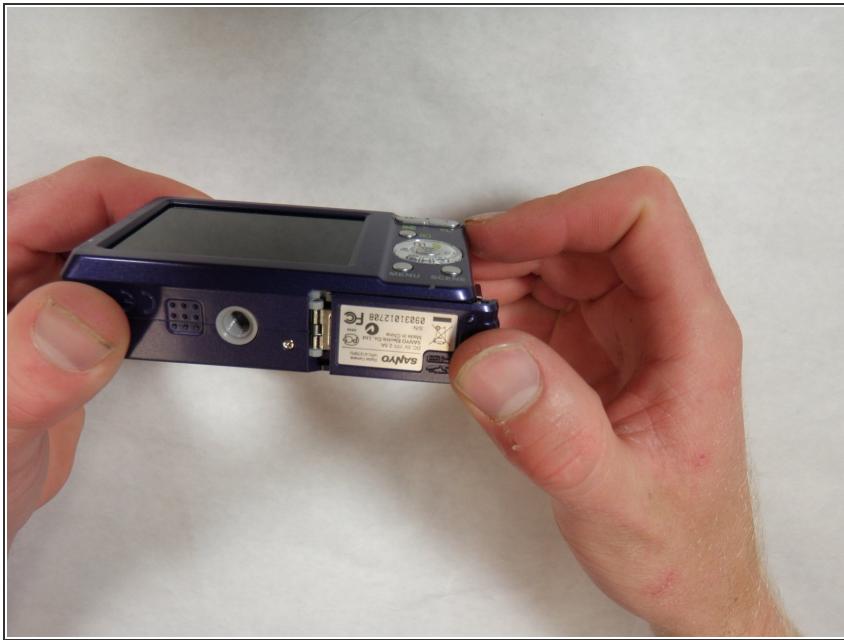

- Place your thumb on the right side of the camera over the battery door.
- Slide the battery door to the right until the door lifts up.

Step 2



- Remove and recycle old batteries.

Step 3 — Case



- Remove the following six screws using the Phillips #00 screwdriver:
 - Two screws on the left side of the camera.
 - Two screws on the right side of the camera.
 - Two screws on the bottom of the camera.

Step 4




- Open the battery slot on the bottom of the camera by sliding the door to the right.
- Remove the single 4 mm screw on the bottom right using the Phillips #00 screwdriver.

Step 5




- Insert a spudger in the seam at the bottom of the camera.
- Gently separate the rear case from the front of the camera.

Step 6

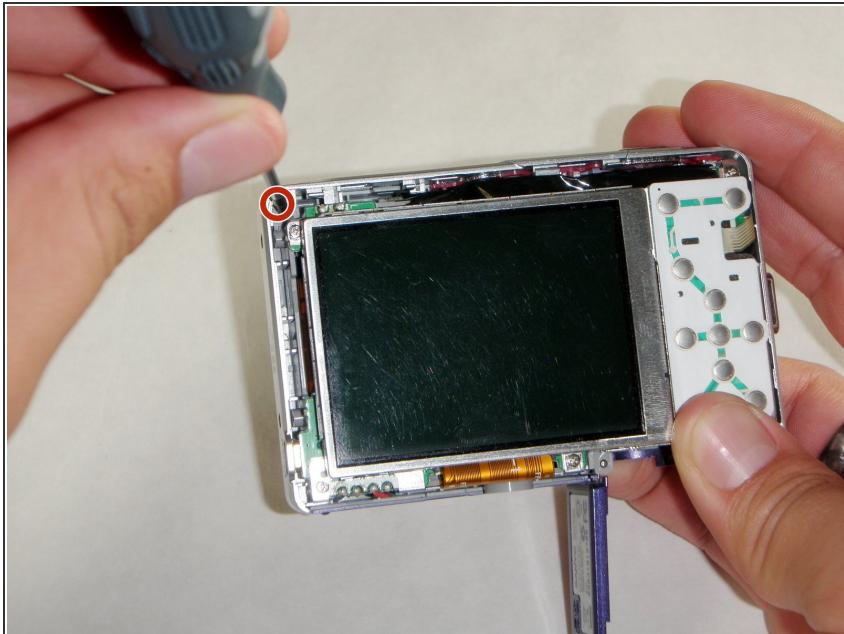

- *(i)* This step is only needed for the case and logic board replacement
- Using the Phillips #00 screwdriver, remove the single screw attached to the front casing in the top left corner. The front case should easily separate.

Step 7

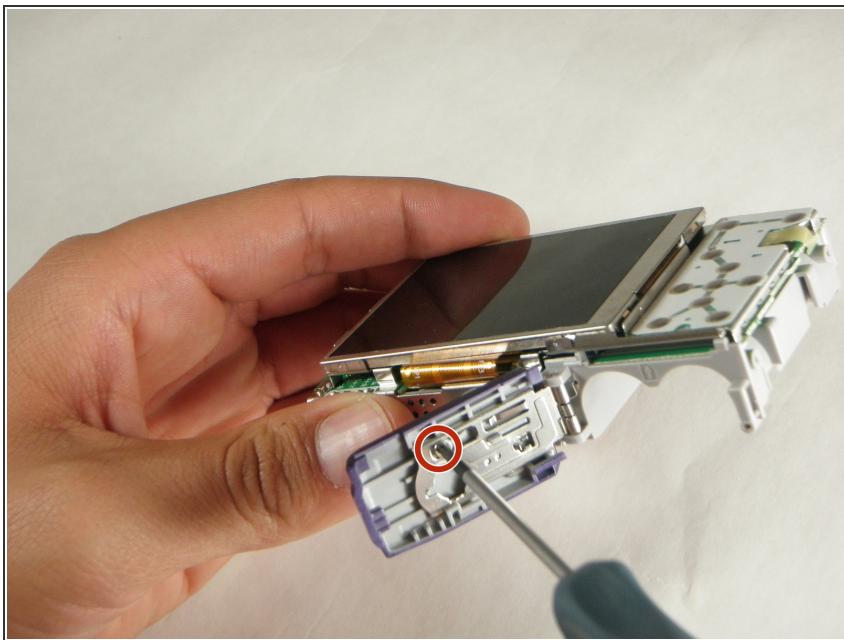

i This step is only needed for the case replacement.

- Using the Phillips #00 screwdriver, remove the screw on the inside of the battery door.
- Slide the battery door off of the hinge.

To reassemble your device, follow these instructions in reverse order.