




# Sanyo VPC S1275 LCD Screen Replacement

Written By: Evan Perez

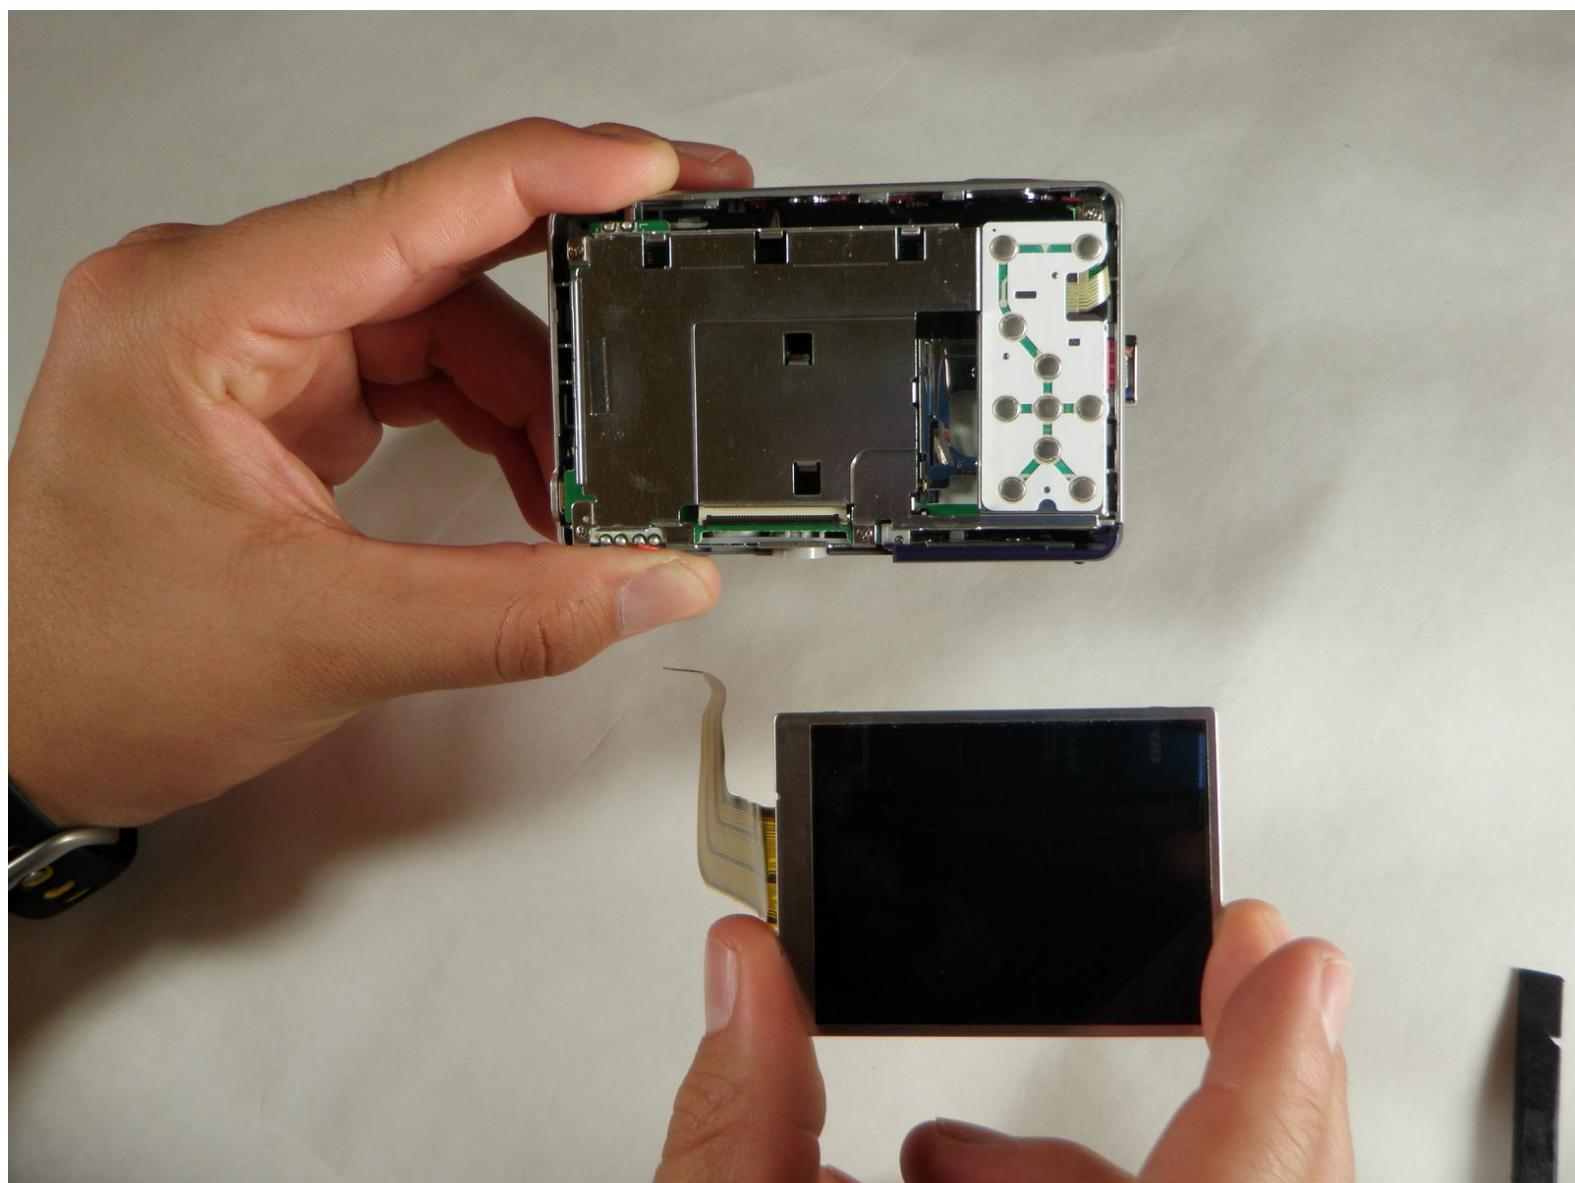


## INTRODUCTION

Use this guide to gain entry to LCD screen and replace it if necessary.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — Battery

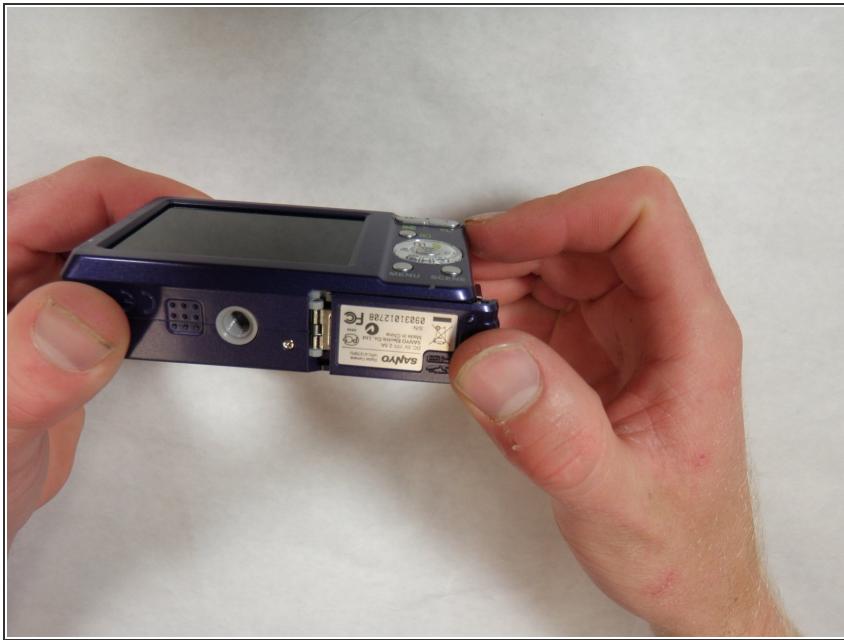

- Place your thumb on the right side of the camera over the battery door.
- Slide the battery door to the right until the door lifts up.

## Step 2



- Remove and recycle old batteries.

## Step 3 — Case



- Remove the following six screws using the Phillips #00 screwdriver:
  - Two screws on the left side of the camera.
  - Two screws on the right side of the camera.
  - Two screws on the bottom of the camera.

## Step 4




- Open the battery slot on the bottom of the camera by sliding the door to the right.
- Remove the single 4 mm screw on the bottom right using the Phillips #00 screwdriver.

## Step 5




- Insert a spudger in the seam at the bottom of the camera.
- Gently separate the rear case from the front of the camera.

## Step 6

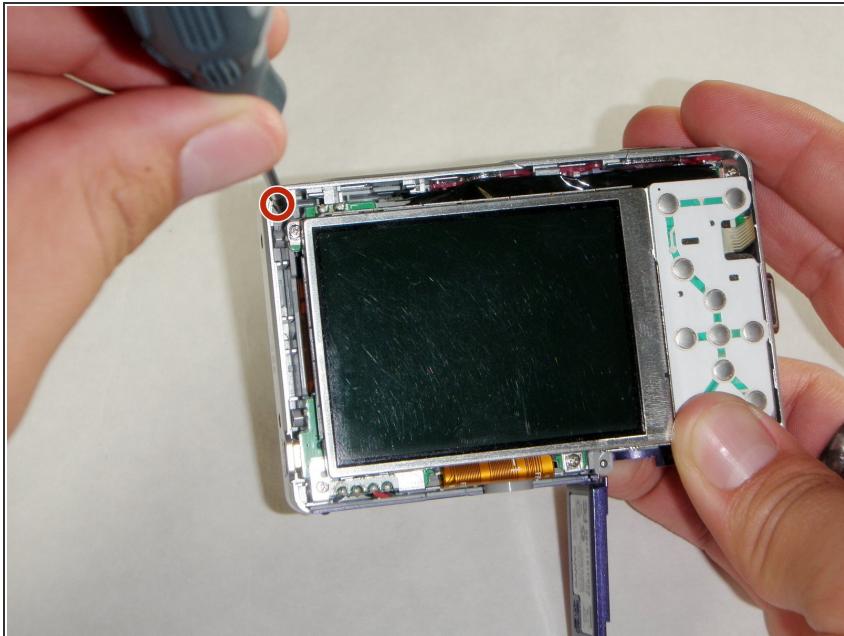

- *(i)* This step is only needed for the case and logic board replacement
- Using the Phillips #00 screwdriver, remove the single screw attached to the front casing in the top left corner. The front case should easily separate.



## Step 7

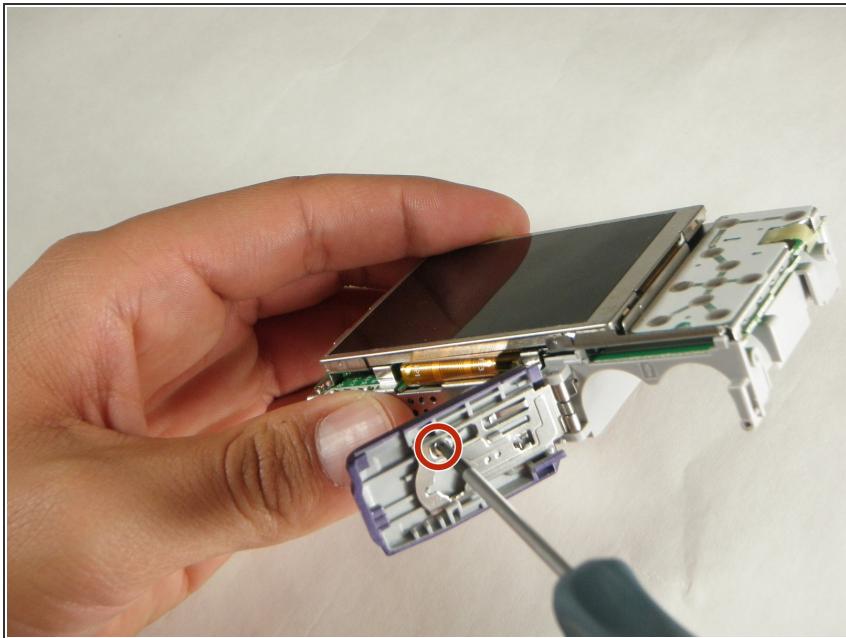

*(i)* This step is only needed for the case replacement.


- Using the Phillips #00 screwdriver, remove the screw on the inside of the battery door.
- Slide the battery door off of the hinge.

## Step 8 — LCD Screen

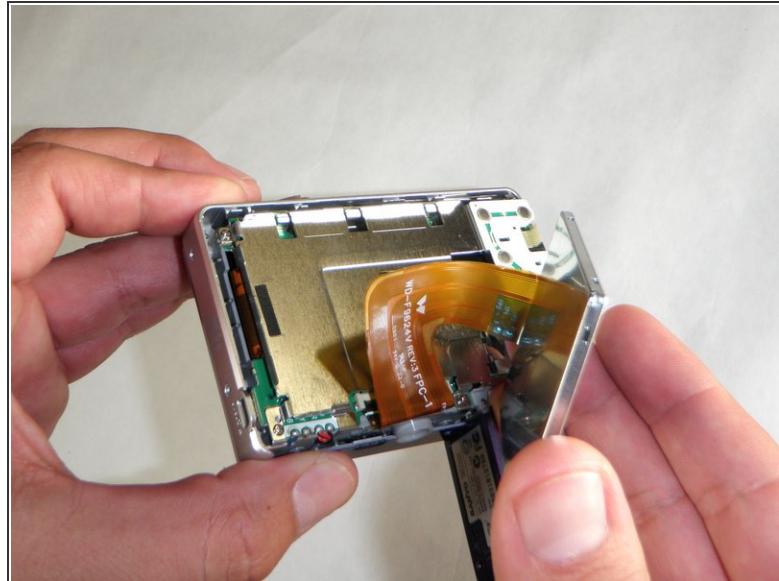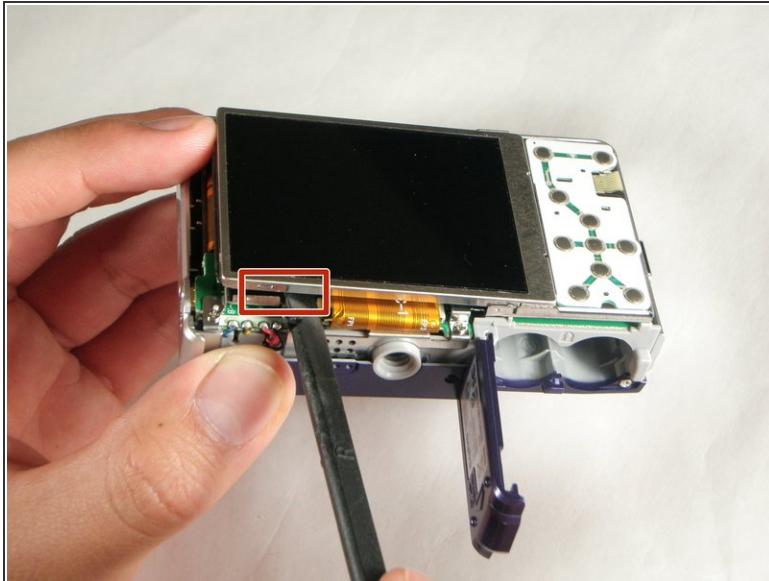

- Using the spudger, carefully lift up the LCD screen, making sure to keep the ribbon cable intact.
- Place the LCD screen on a non-abrasive surface.

## Step 9

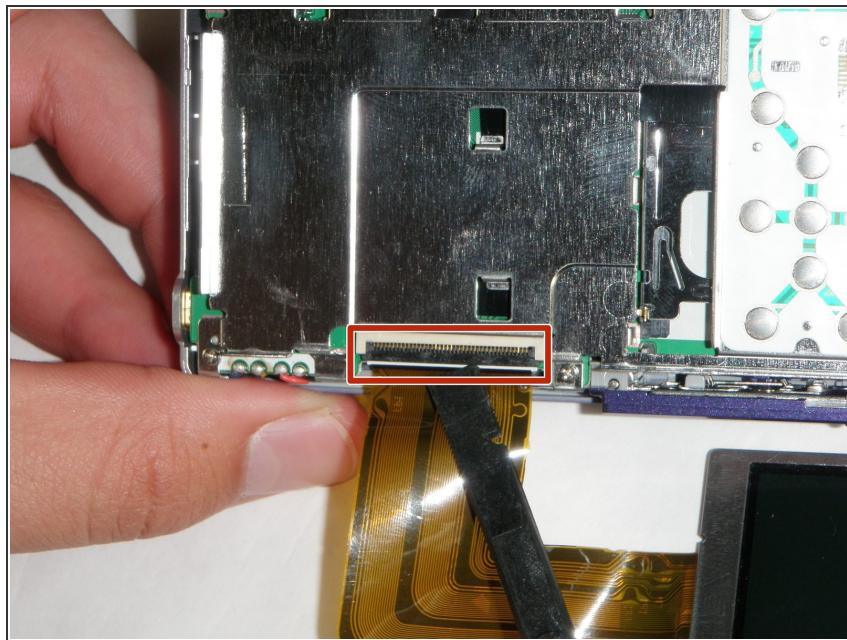

- Using the spudger lift the black flap up to release the ribbon cable.
- The LCD screen will now be completely detached from the camera.

To reassemble your device, follow these instructions in reverse order.