



# Screen Disassembly for Yoga 710

How to disassemble the screen without breaking it.

Written By: ForestLiu

## INTRODUCTION

You would only gain an experience on disassembling this kind of screen through destroying a screen if you can not make it well.

## Step 1 — Screen Disassembly for Yoga 710



- Differing from the screen of iPad which is adhered by glue on the perimeter area, this kind of touch panel screen is usually adhered by adhesive on its back, making it incapable for the opening picks in this case.
- Heating by heat gun and slowly pry the screen from the bottom side. Pry as slowly as possible to make the glue apart.
- Taobao is not always omnipotent that the seller is usually unwilling to attach a guide of how to disassemble a screen when they sell a screen assembly part for specific product, not even point out some key points (say, two adhesive tapes). The buyer has to try himself and wastes time he could have not to if he has a guide.
- The location of adhesive tape. Choose one of the adhesive tape and heat in direction of bottom to top with heat gun to degum.

## Step 2



- We start from the bottom side, where we can heat from the back side and pry up the screen by holding the area close to adhesive tape.

To reassemble your device, follow these instructions in reverse order.