




Sega Dreamcast GD-ROM Replacement

Written By: Thorr686

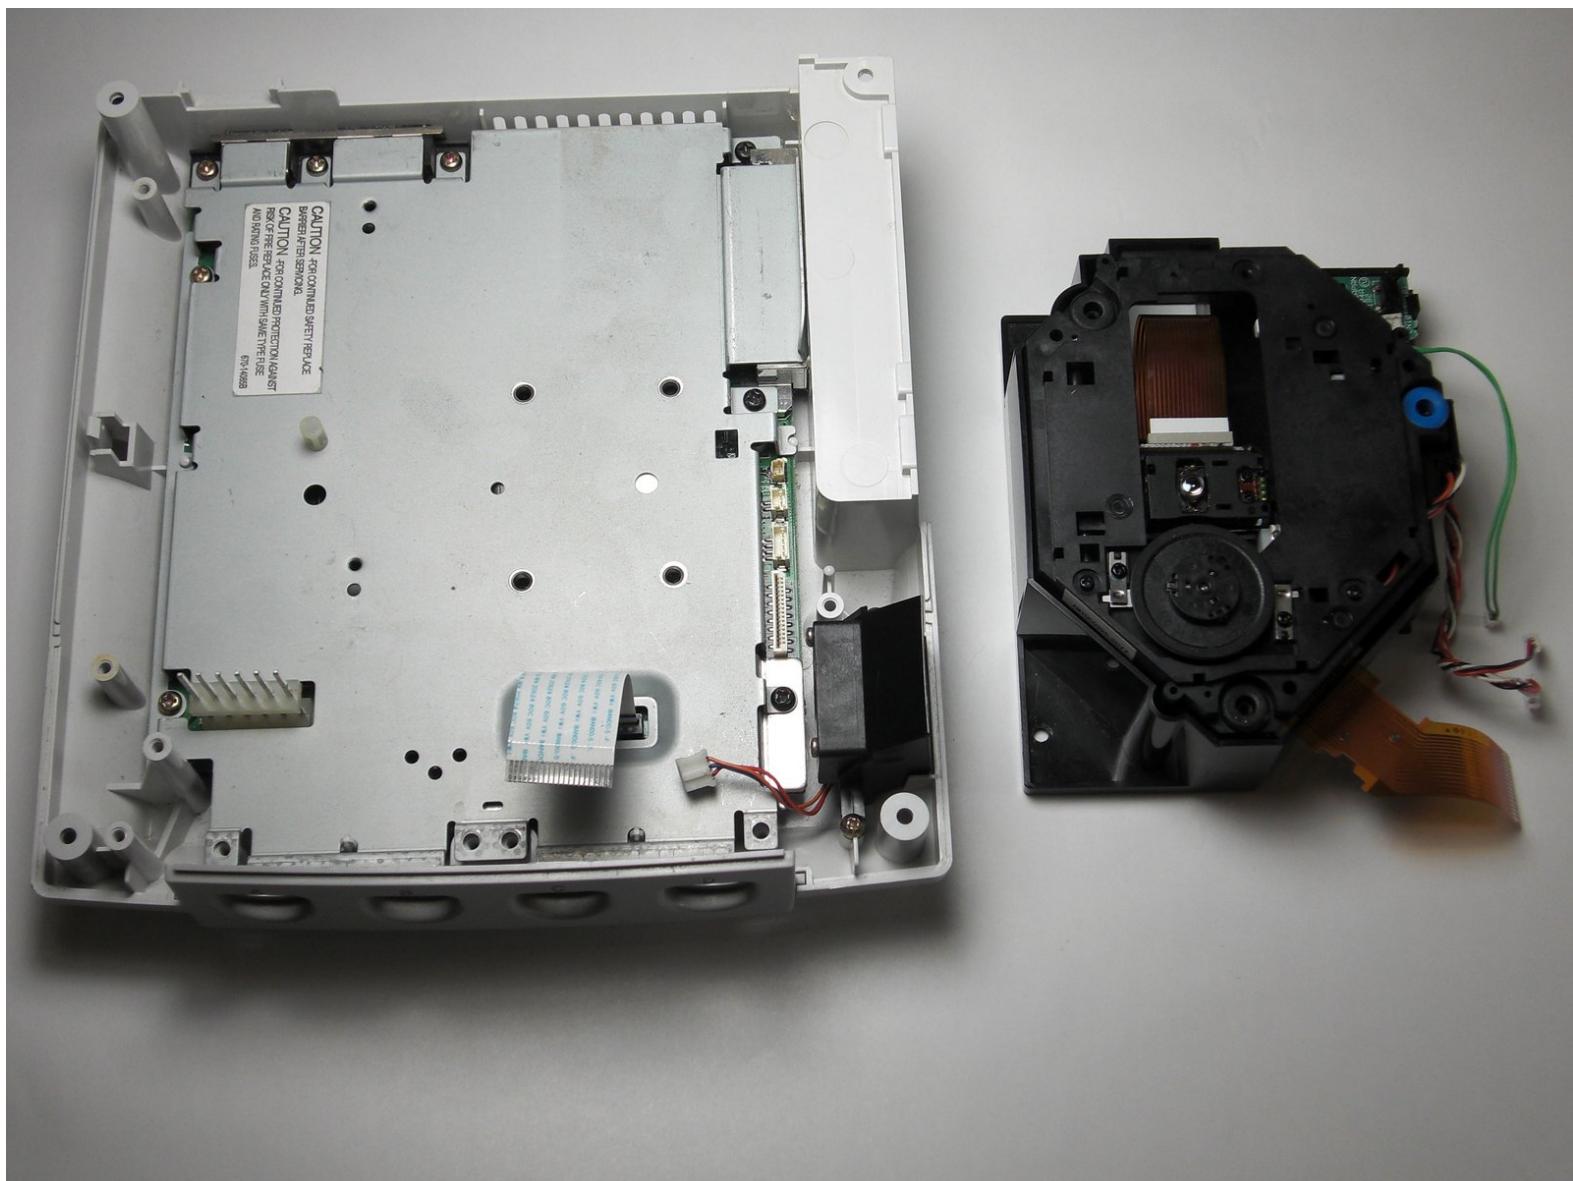

INTRODUCTION

This guide details how to replace a failed GD-ROM drive with a new working drive.

Be sure to replace the GD-ROM with one corresponding to your model number. Refer to the [Top Cover Disassembly Guide](#) for instructions on where to find your model number.

Problem with this guide: The photos incorrectly show the power supply has been removed.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)

Step 1 — Expansion Bay



⚠ Verify that the console is disconnected from the AC outlet before you begin.

- **Flip the console** over on its back.
- **Take note of your model number**, in case replacement parts are needed.

Step 2



- **Remove the expansion bay** by applying pressure to the small clip on the expansion bay while prying it away from the console.

Step 3 — Top Cover



- Locate and remove all four black 12mm Phillips #02 screws from the underside of the console.
- Note: Remove the expansion bay to locate the fourth screw*


Step 4



! Internal components can be loose. Be careful that they do not fall out when removing the cover.


- Turn the console right side up.
- Remove the top cover** by gently lifting the upper portion of the console.

Step 5 — GD-ROM

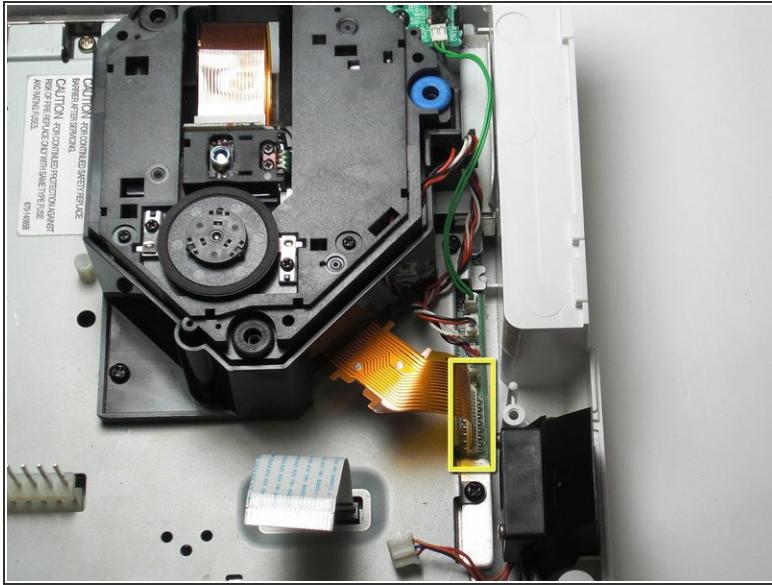



- **Detach the orange cable** by giving it a gentle pull while wiggling the cable back and forth until it loosens from the logic board.

Step 6

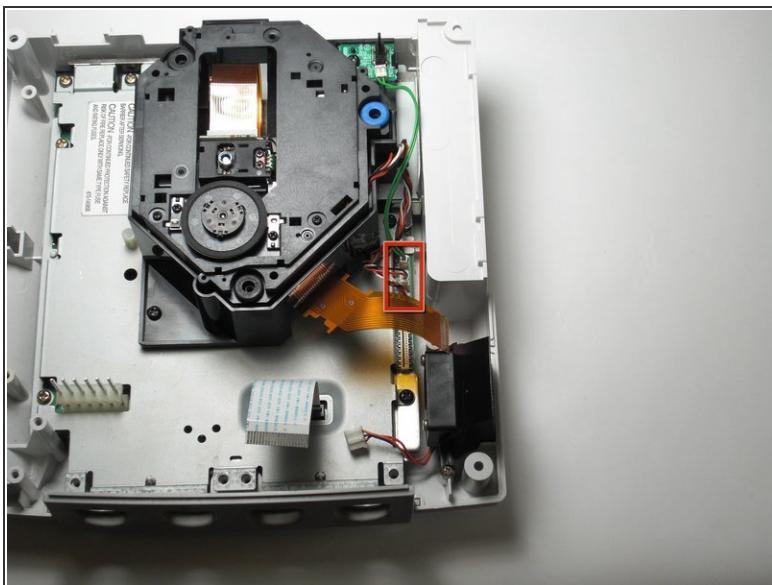

- **Detach the cables** by gently pulling the three GD-ROM cables to remove them from the logic board.


Step 7

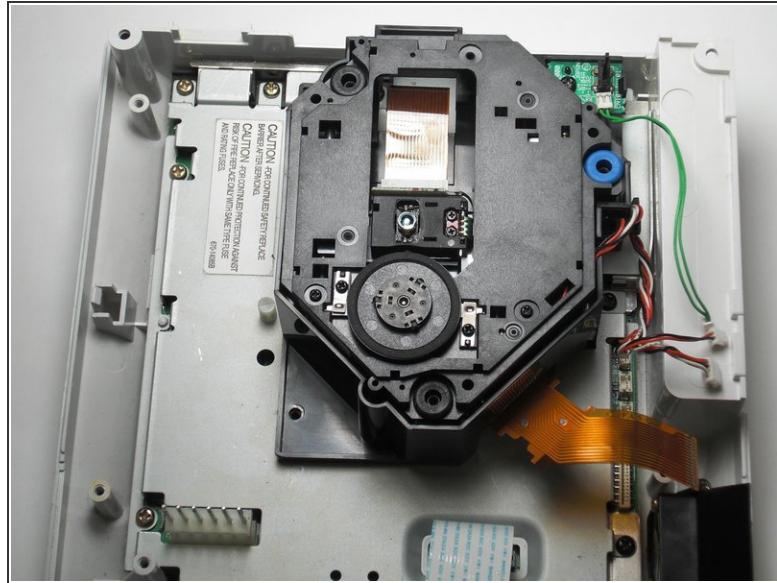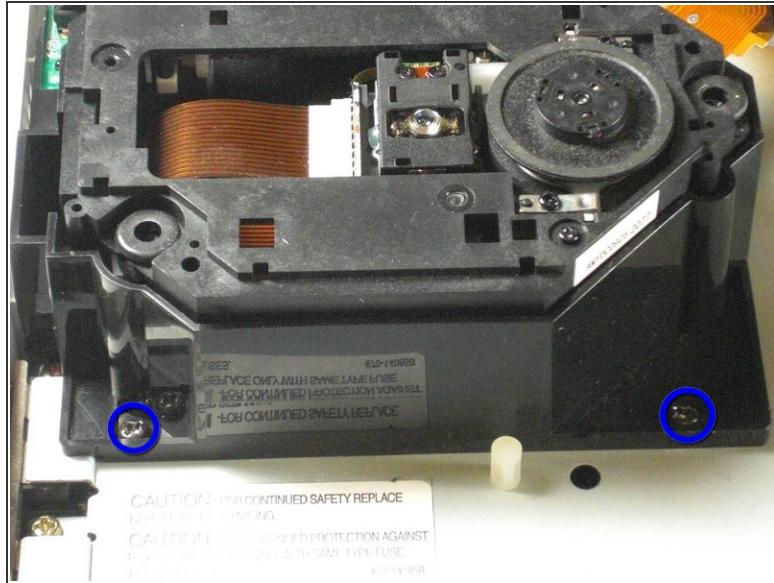

- Remove the two black 12mm Philips #02 screws located on the left side of the GD-ROM bracket.

(i) The console is rotated 90 degrees counter-clockwise in the first photo. The second photo depicts the normal position.


Step 8

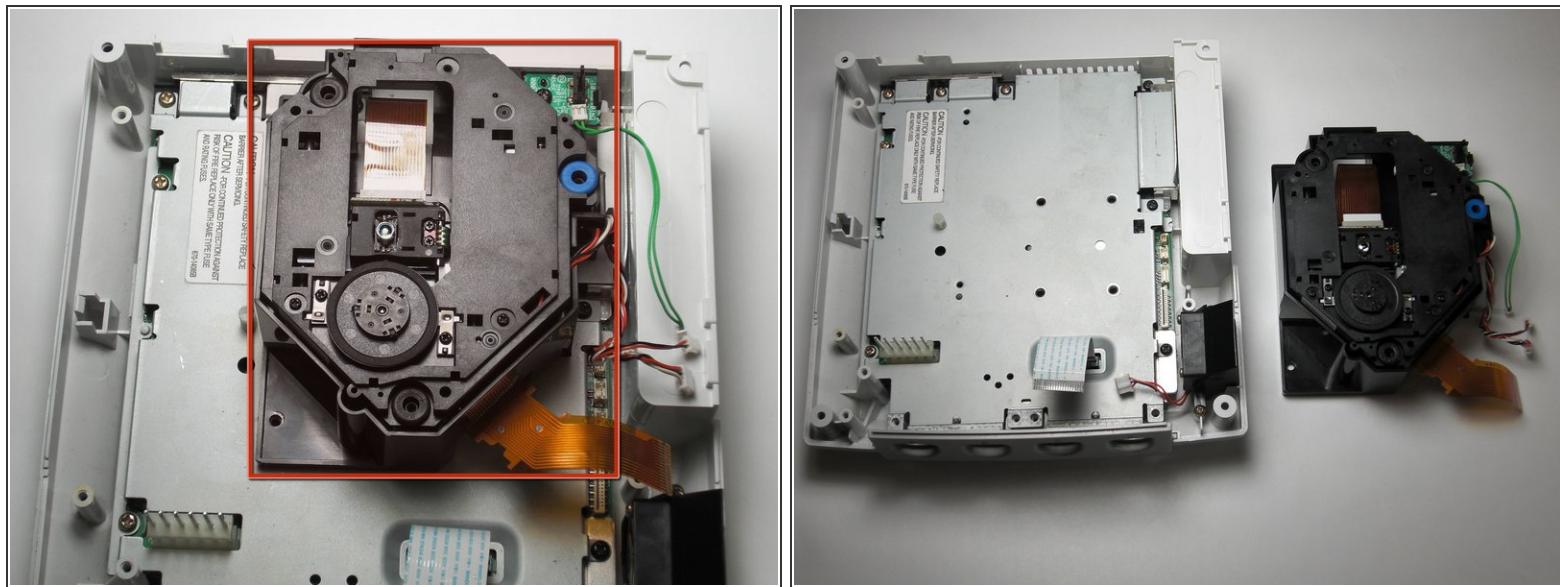

⚠ When lifting the GD-ROM, be careful that the top half of the casing does not detach from its base.


- **Remove the GD-ROM** by gently lifting it from its base.

Step 9 — GD-ROM

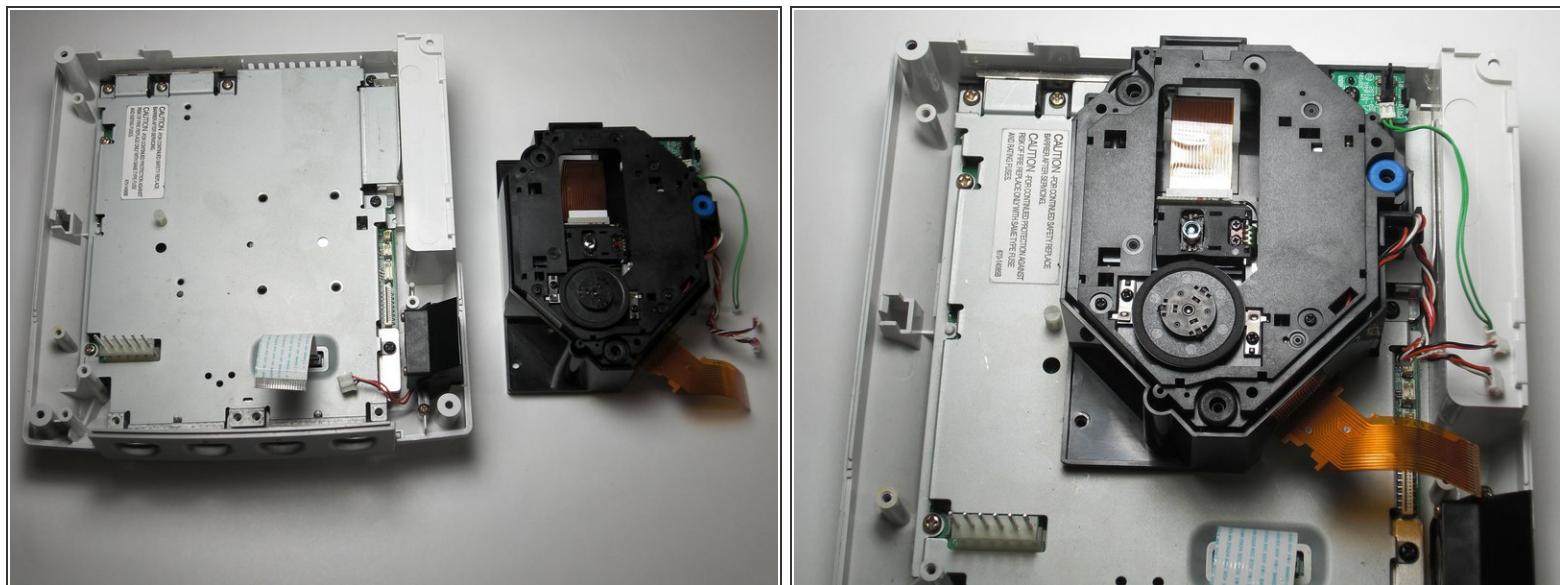

- **Replace the bad GD-ROM** drive with a functional one.

Step 10

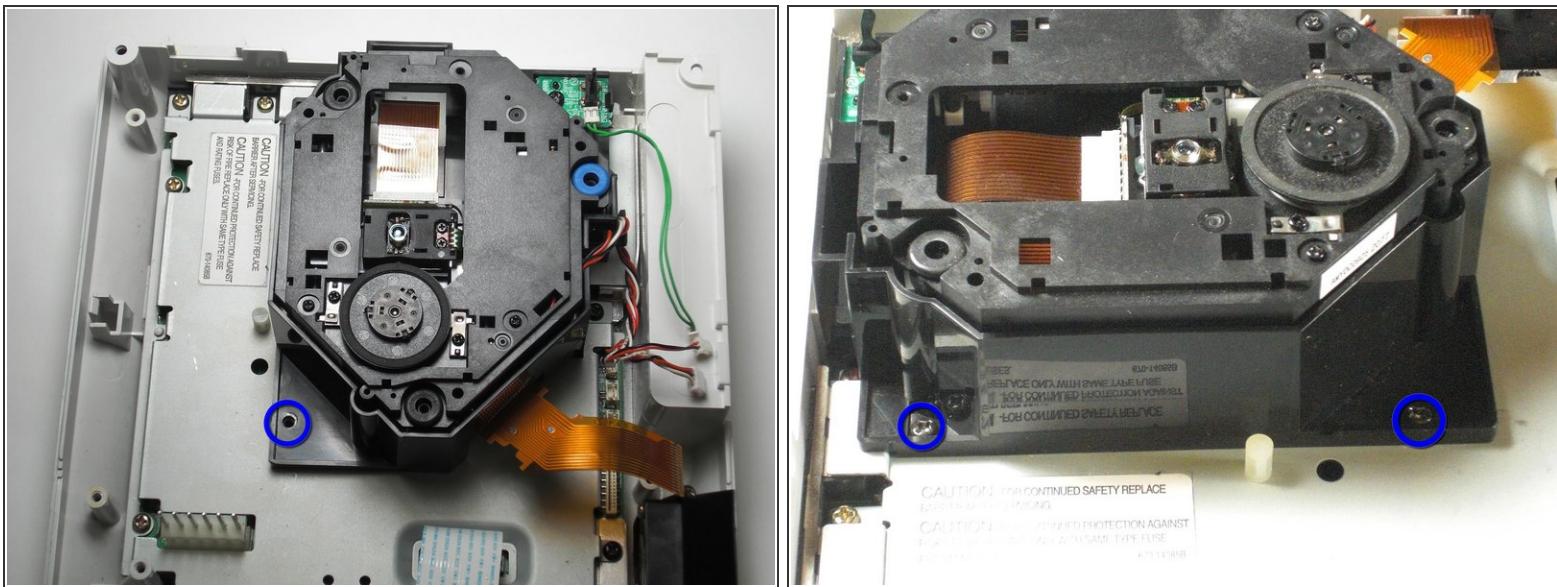

- Secure the new GD-ROM drive to the console with the Philips #2 screws.

Step 11



- Connect the three **GD-ROM cables** to the logic board.
- Connect the **GD-ROM data ribbon** to the logic board.