



# Sega Dreamcast Top Cover Replacement

Written By: wkwong



This document was generated on 2019-09-19 07:12:45 AM (MST).

## INTRODUCTION

A guide to remove the Top Cover of the Sega Dreamcast.

### TOOLS:

- Phillips #2 Screwdriver (1)

## Step 1 — Expansion Bay



**⚠ Verify that the console is disconnected from the AC outlet before you begin.**

- **Flip the console over on its back.**
- **Take note of your model number**, in case replacement parts are needed.

## Step 2



- **Remove the expansion bay** by applying pressure to the small clip on the expansion bay while prying it away from the console.

## Step 3 — Top Cover



- **Locate and remove all four black 12mm Phillips #02 screws** from the underside of the console.
- **Note:** Remove the expansion bay to locate the fourth screw

## Step 4



**⚠** Internal components can be loose. Be careful that they do not fall out when removing the cover.

- Turn the console right side up.
- **Remove the top cover** by gently lifting the upper portion of the console.

To reassemble your device, follow these instructions in reverse order.