



Sega Game Gear Battery Replacement

Written By: Chan Leong



INTRODUCTION

How to replace batteries

Step 1 — Battery



- Place your device upside down and locate the two battery compartments.

Step 2



- Press on the tabs at the bottom of the battery covers then lift up to remove.
- Remove batteries if they are present.