




Sega Game Gear Case Replacement

How to open the Sega Game Gear case.

Written By: Lauren Thurston

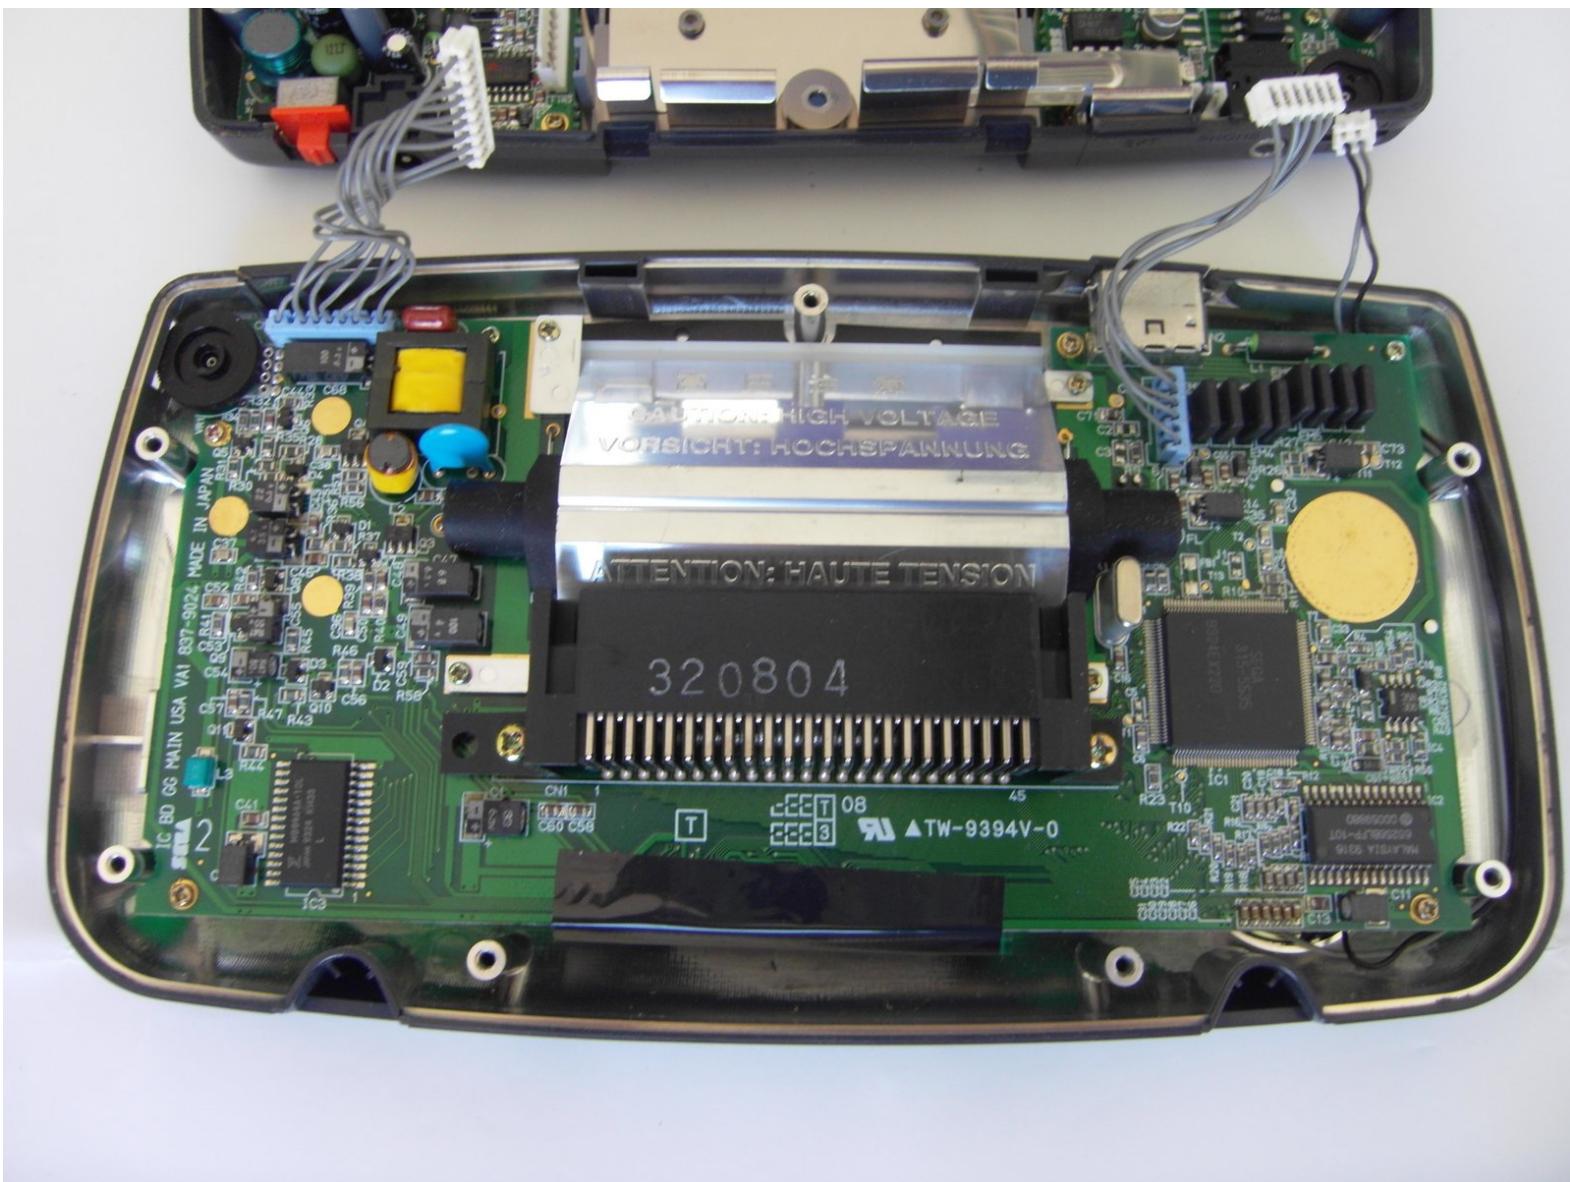

INTRODUCTION

How to open the Sega Game Gear case.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Gamebit 4.5mm](#) (1)

Bit available in the 64 bit kit

Step 1 — Battery



- Place your device upside down and locate the two battery compartments.

Step 2



- Press on the tabs at the bottom of the battery covers then lift up to remove.
- Remove batteries if they are present.

Step 3 — Case



- Remove the following screws:
 - Seven Phillips screws
 - One 4.5 mm Gamebit screw

Step 4



- Use tweezers to take all other screws out.



Step 5



- Gently open the case by unfolding it over the top of the Sega Game Gear.

 Do not pull the back of the case away, as cables are connected between both sides.

Step 6

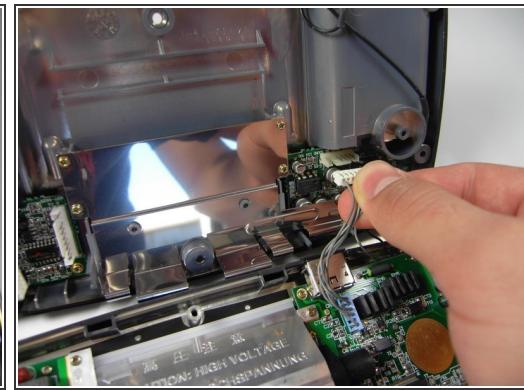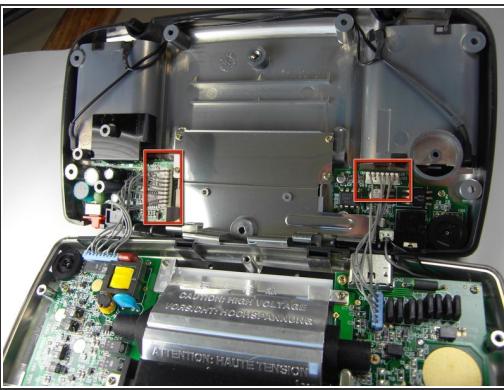

- Carefully unplug the 2 white-tipped connectors on the top cover.

To reassemble your device, follow these instructions in reverse order.