



# Sega Genesis Outer Case Replacement

Written By: Erik Bjornstrom



## INTRODUCTION

This repair guide will take you through all the steps for removing the outer case of the Sega Genesis.

### TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)

## Step 1 — Outer Case




- Remove the six screws from the underside of the console with a Phillips #1 screwdriver.

## Step 2



- Flip the Sega Genesis upright.


## Step 3

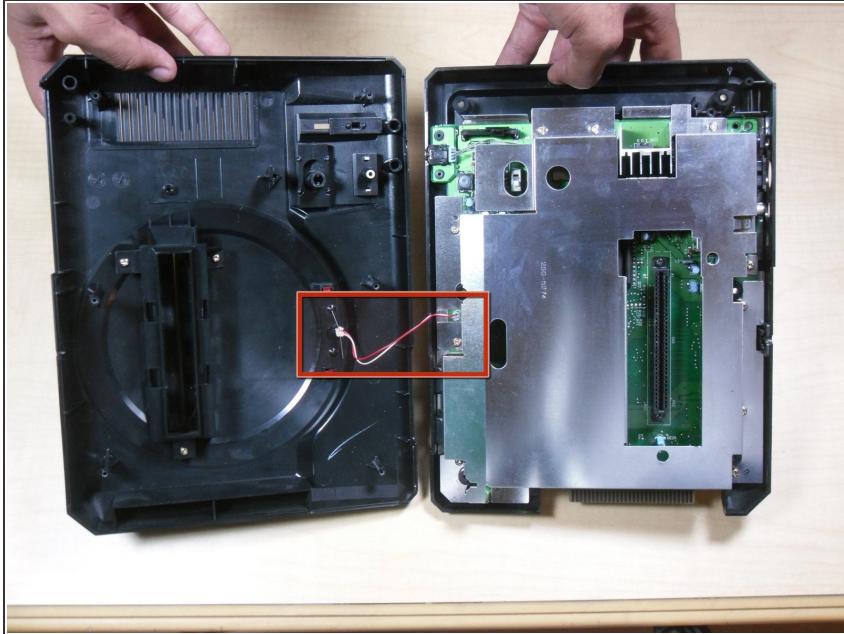

- Gently lift the top casing.


**⚠ Note: the case will be connected to the main board by LED wires.**

## Step 4

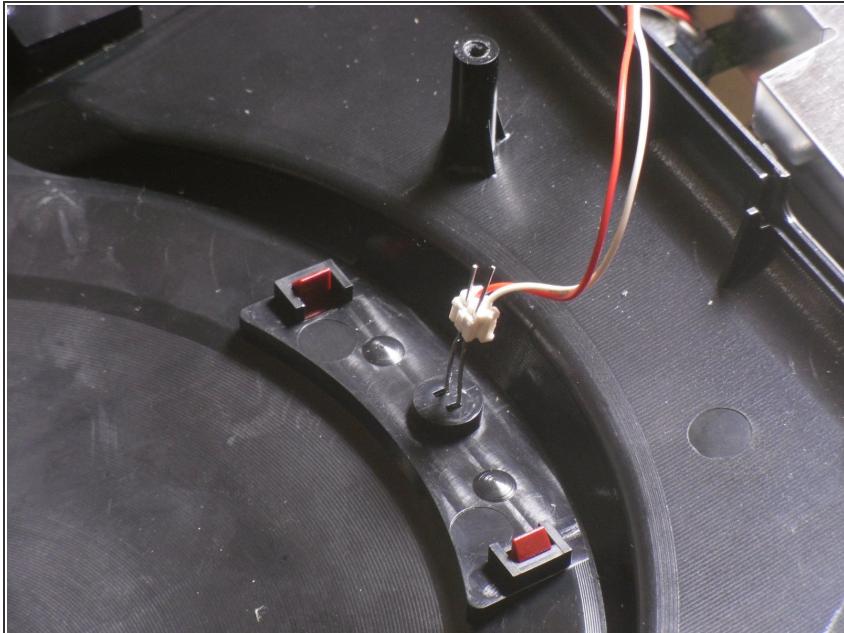

- Bend out the LED leads into vertical positions.


## Step 5

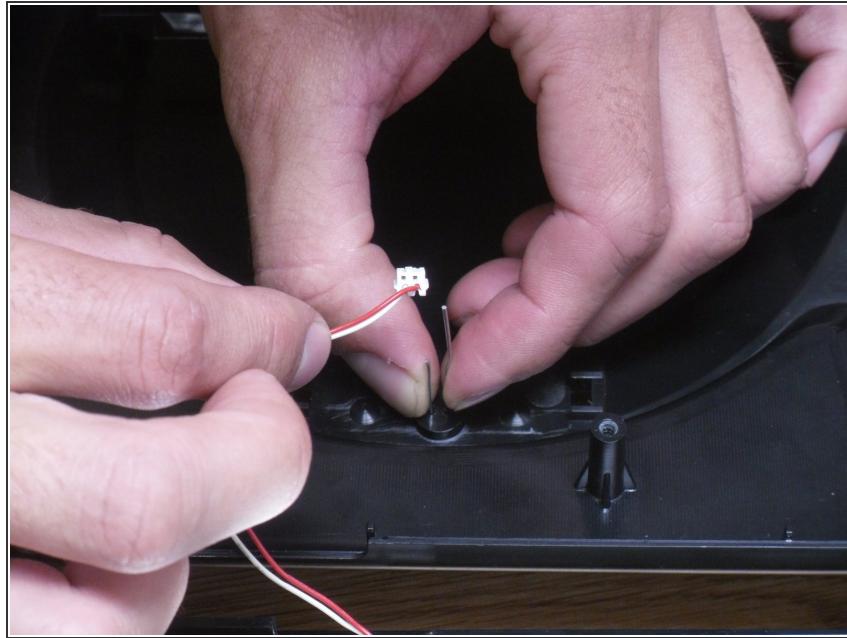

- Slide the LED wire apparatus off the lead pins.

**⚠ Note: observe which color wire corresponds with which length of pin.**

## Step 6

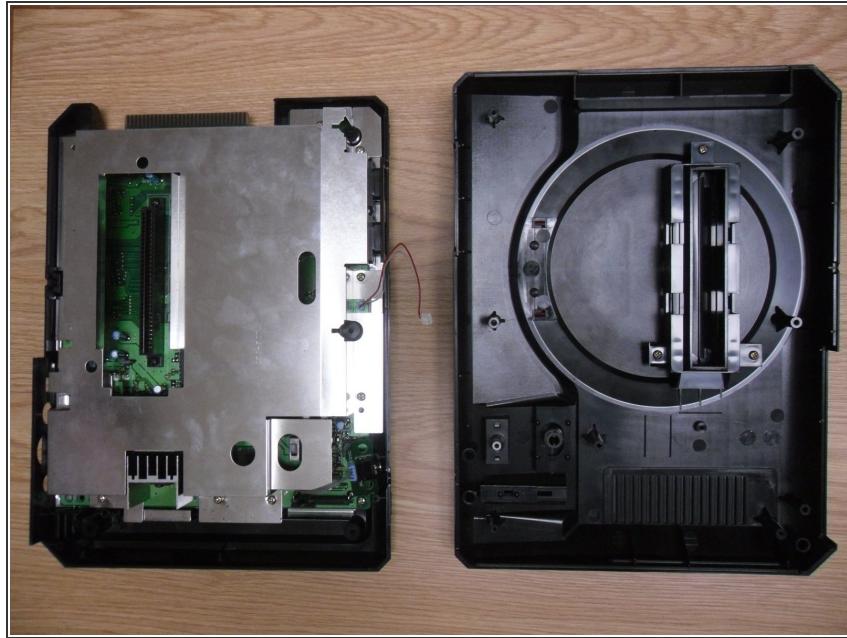

- Separate the main board from the outer case.

To reassemble your device, follow these instructions in reverse order.