



Shark DuoClean Powered Lift-Away Speed Drive Belt Replacement

How to replace the drive belt in the Shark DuoClean Powered Lift-Away Speed.

Written By: Catie Halvorsen



INTRODUCTION

If the drive belt is out of place or jammed, use this guide to replace the drive belt. You will need the T10 and T20 Torx screwdrivers.

TOOLS:


- [T10 Torx Screwdriver](#) (1)
- [T20 Torx Screwdriver](#) (1)

Step 1 — Brushroll



- Press the two Brush Roll Access buttons down at the same time to detach the cover.
- Pull the cover off of the vacuum by lifting it up.

Step 2

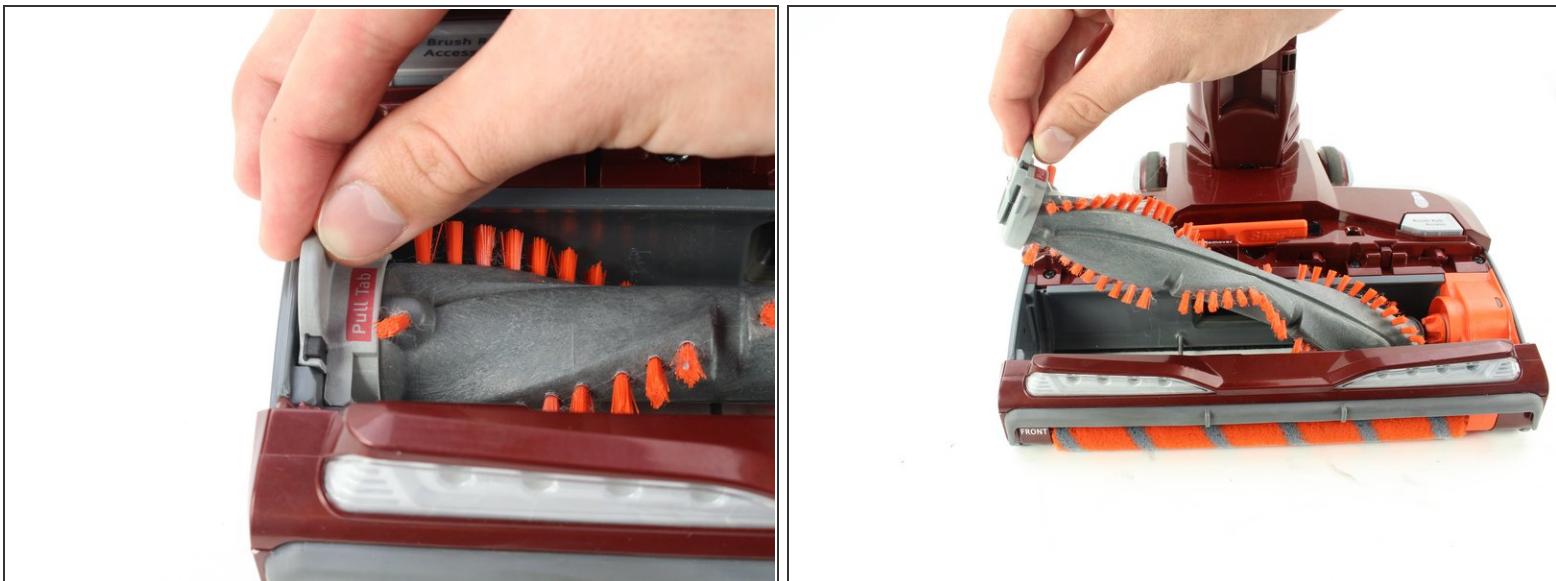

- Pull up on the Pull Tab to remove the large brush roll.

Step 3





- Press the Eject Roller button to detach the small roller.
- Pull the roller away from the vacuum to remove it.

Step 4 — Drive Belt



- Use the T20 screwdriver to remove the four 17 mm screws by turning counterclockwise.

Step 5

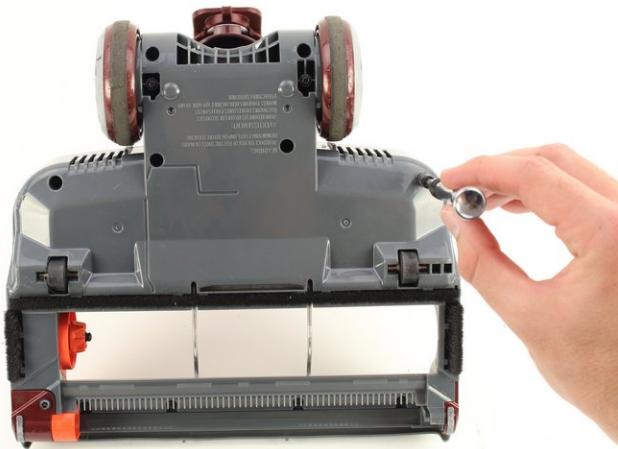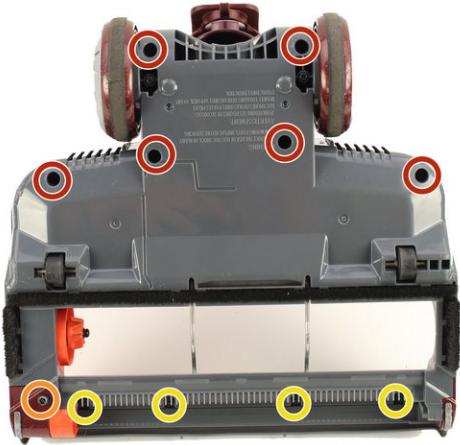


- Use the T20 screwdriver to remove the six 19 mm screws by turning counterclockwise.
- Use the T20 screwdriver to remove the one 12 mm screw by turning counterclockwise.
- Use the T10 screwdriver to remove the four 14 mm screws by turning counterclockwise.

Step 6



- Use the spudger tool to pry off the red plastic corner cap.
- Remove the LED headlight casing by pulling up on the casing and out on the corner cap at the same time.

Step 7

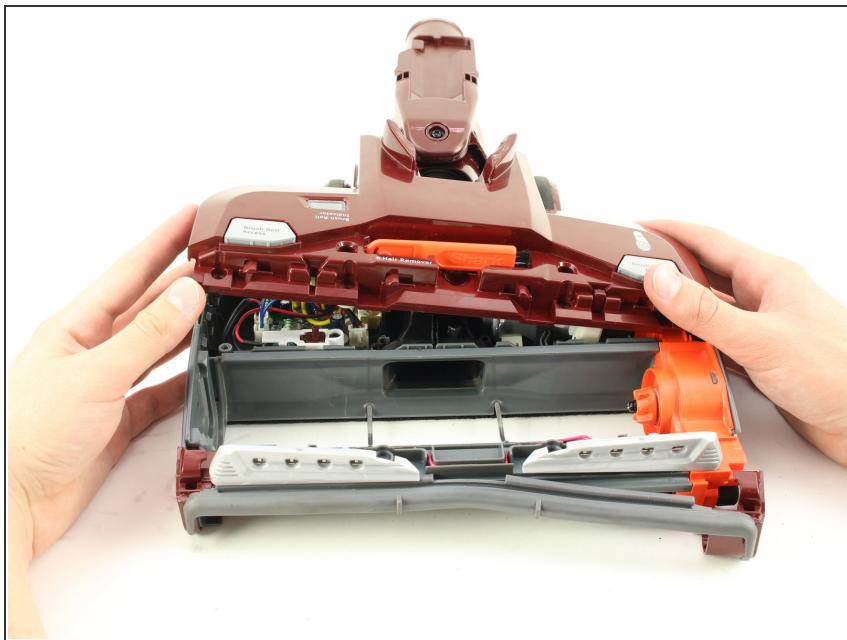


- Remove the red cover by lifting upward.

Step 8



- Remove the light fixture by lifting it up.

Step 9

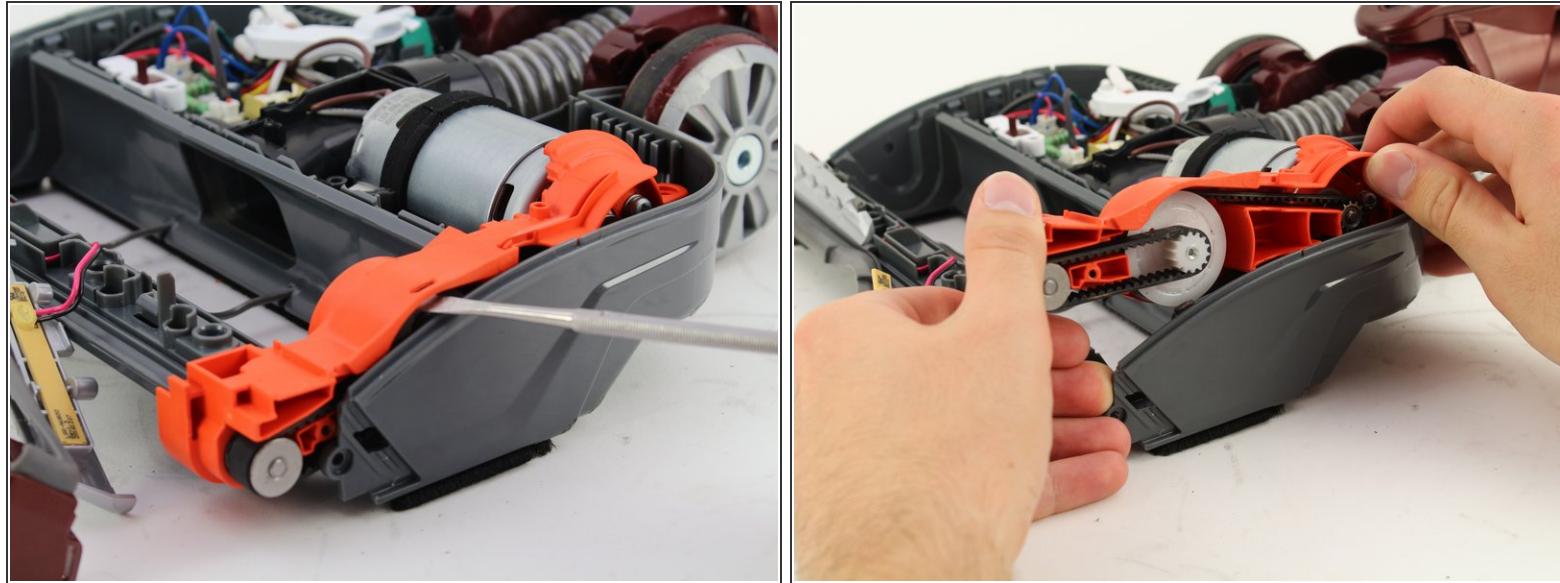

- Use the spudger to detach the orange drive belt compartment from the vacuum.
- Remove the orange drive belt compartment from the vacuum by lifting it upwards.

Step 10



- Pull outward on the smaller drive belt to remove it.
- Pull outward on the larger drive belt to remove it.

 The smaller drive belt must be removed first in order to remove the second larger belt.

To reassemble your device, follow these instructions in reverse order.