



Shark Flex DuoClean Side Component Replacement

How to take off the side components on the Shark Flex DuoClean Vacuum.

Written By: caoimhe



INTRODUCTION

You will need a T10 Security Torx screwdriver and an iFixit Opening Tool to open the side components.

TOOLS:

- [T10 Torx Screwdriver \(1\)](#)
- [Metal Spudger Set \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Garage Door




- Open the garage door by sliding both of the release buttons away from you.
- Lift off the garage door.

Step 2 — Side Component




- Remove the plastic screw covering using a metal spudger by pushing the sharp side into the crevice and prying the cover out.

Step 3

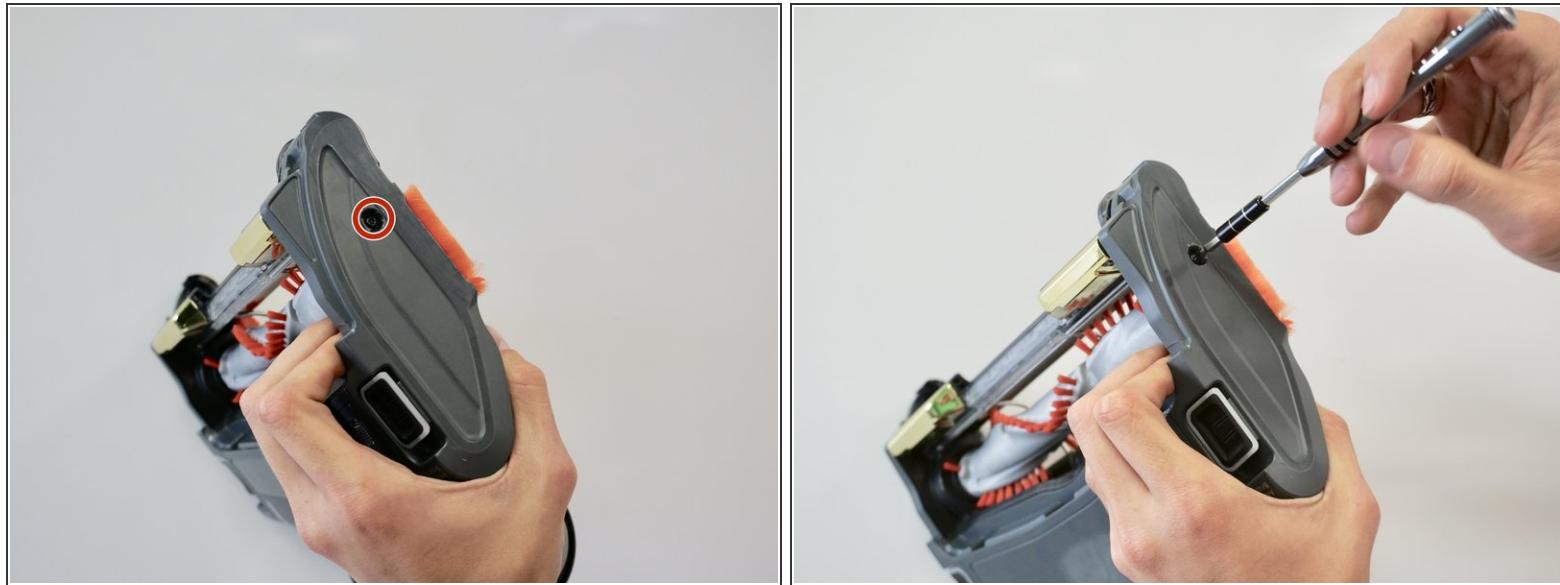

- Turn the T10 Security Torx screwdriver counterclockwise to remove the 15mm screw.

Step 4

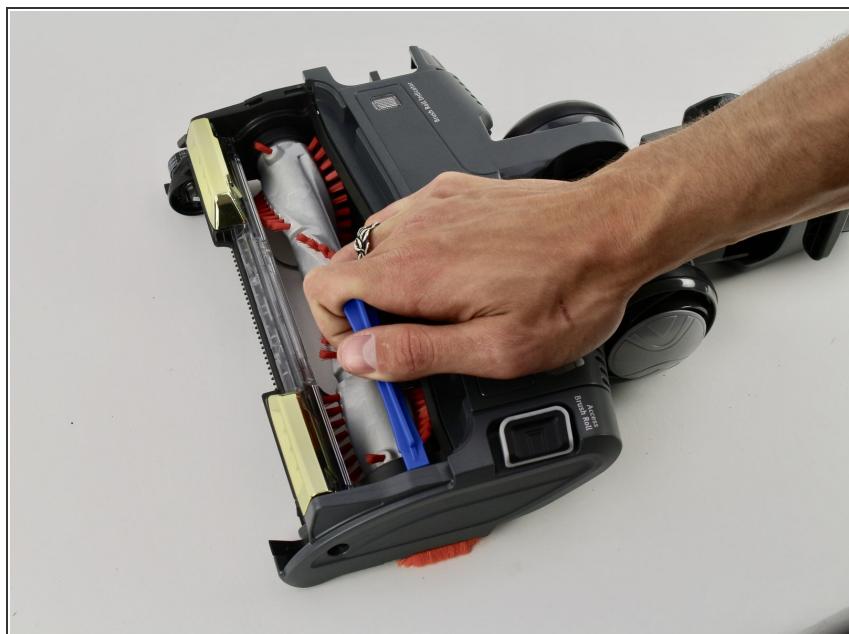

- Use the iFixit Opening Tool to pry the side of the vacuum open.

Step 5



- Remove the side component with your hands.

To reassemble your device, follow these instructions in reverse order.