



Shark Lift-Away Professional Steam Pocket Mop Pad Replacement

Replace the mop pad on your Steam Pocket Mop so your floors are clean.

 
 
Written By: Rachel Howe



INTRODUCTION

This guide will walk you through the simple steps of replacing your mop pad. There are many situations where you would need to replace the mop pad of your Steam Pocket Mop, some of which are outlined in our [Troubleshooting Page](#). This is a simple replacement, with no tools needed.


Step 1 — Mop Pad

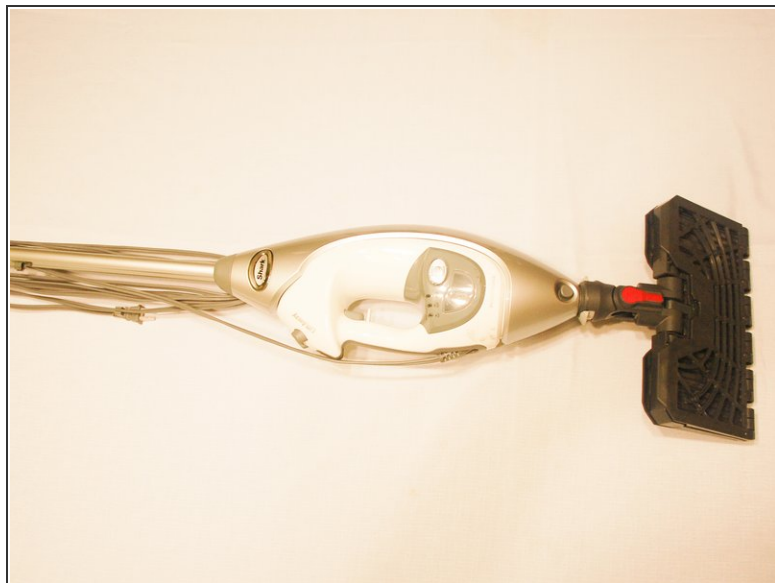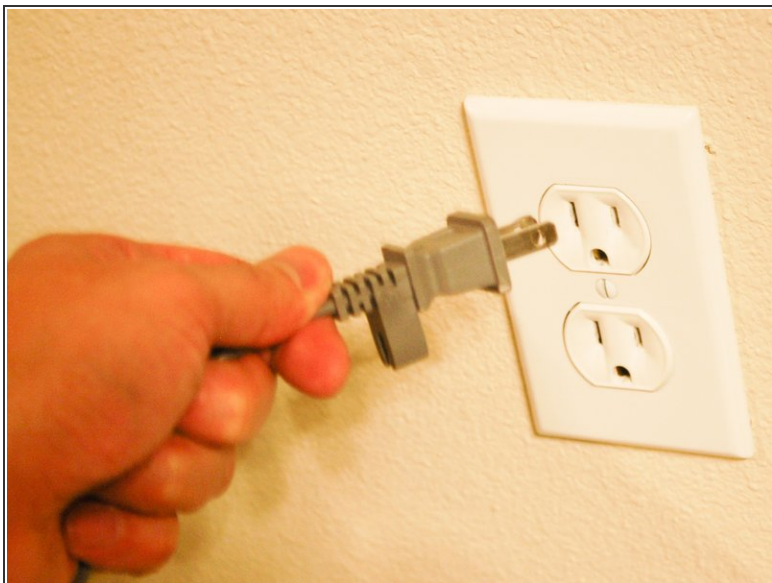

- Turn off the Steam Pocket Mop and unplug it from the wall.

⚠ Be sure that any water in the water tank cools before proceeding.

Step 2

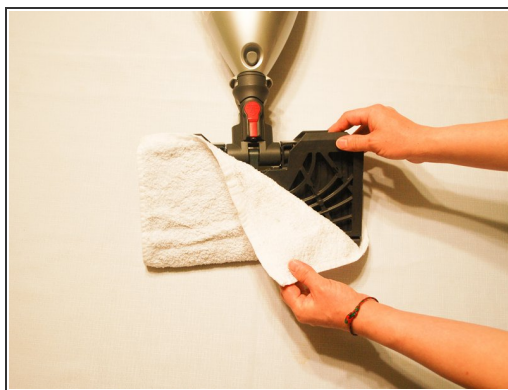

- Release the quick fasteners from the top of the cloth using the loops.
 - Slide the cloth off from around the mop head.
- i* Our mop pad was missing, so we used a similar microfiber cloth in our images.

Repeat this process every time you need to replace your mop pad.

This document was generated on 2020-01-22 11:13:53 PM (MST).

