



Shark NV352 Filter Replacement

This guide will show you the steps to remove the filters from your vacuum.

Written By: Vincent Leuzze



INTRODUCTION

Dirty filters will cause the vacuum to work less efficiently. Make sure to replace your filter on a regular basis.

Step 1 — Filter



- **Ensure that you are removing the filters from the vacuum in an area that you don't mind getting dirty because the filters will be very dusty.**
- Lift the latches on both sides of the vacuum to release the dust canister.

Step 2



- Tilt the dust canister forward to release it from its position.
- Carefully lift away the dust canister and set it aside.

Step 3



- Remove the upper filter by lifting upwards on it.
- Now that the lower filter is exposed, remove it by pulling it upwards.

To reassemble your device, follow these instructions in reverse order.