


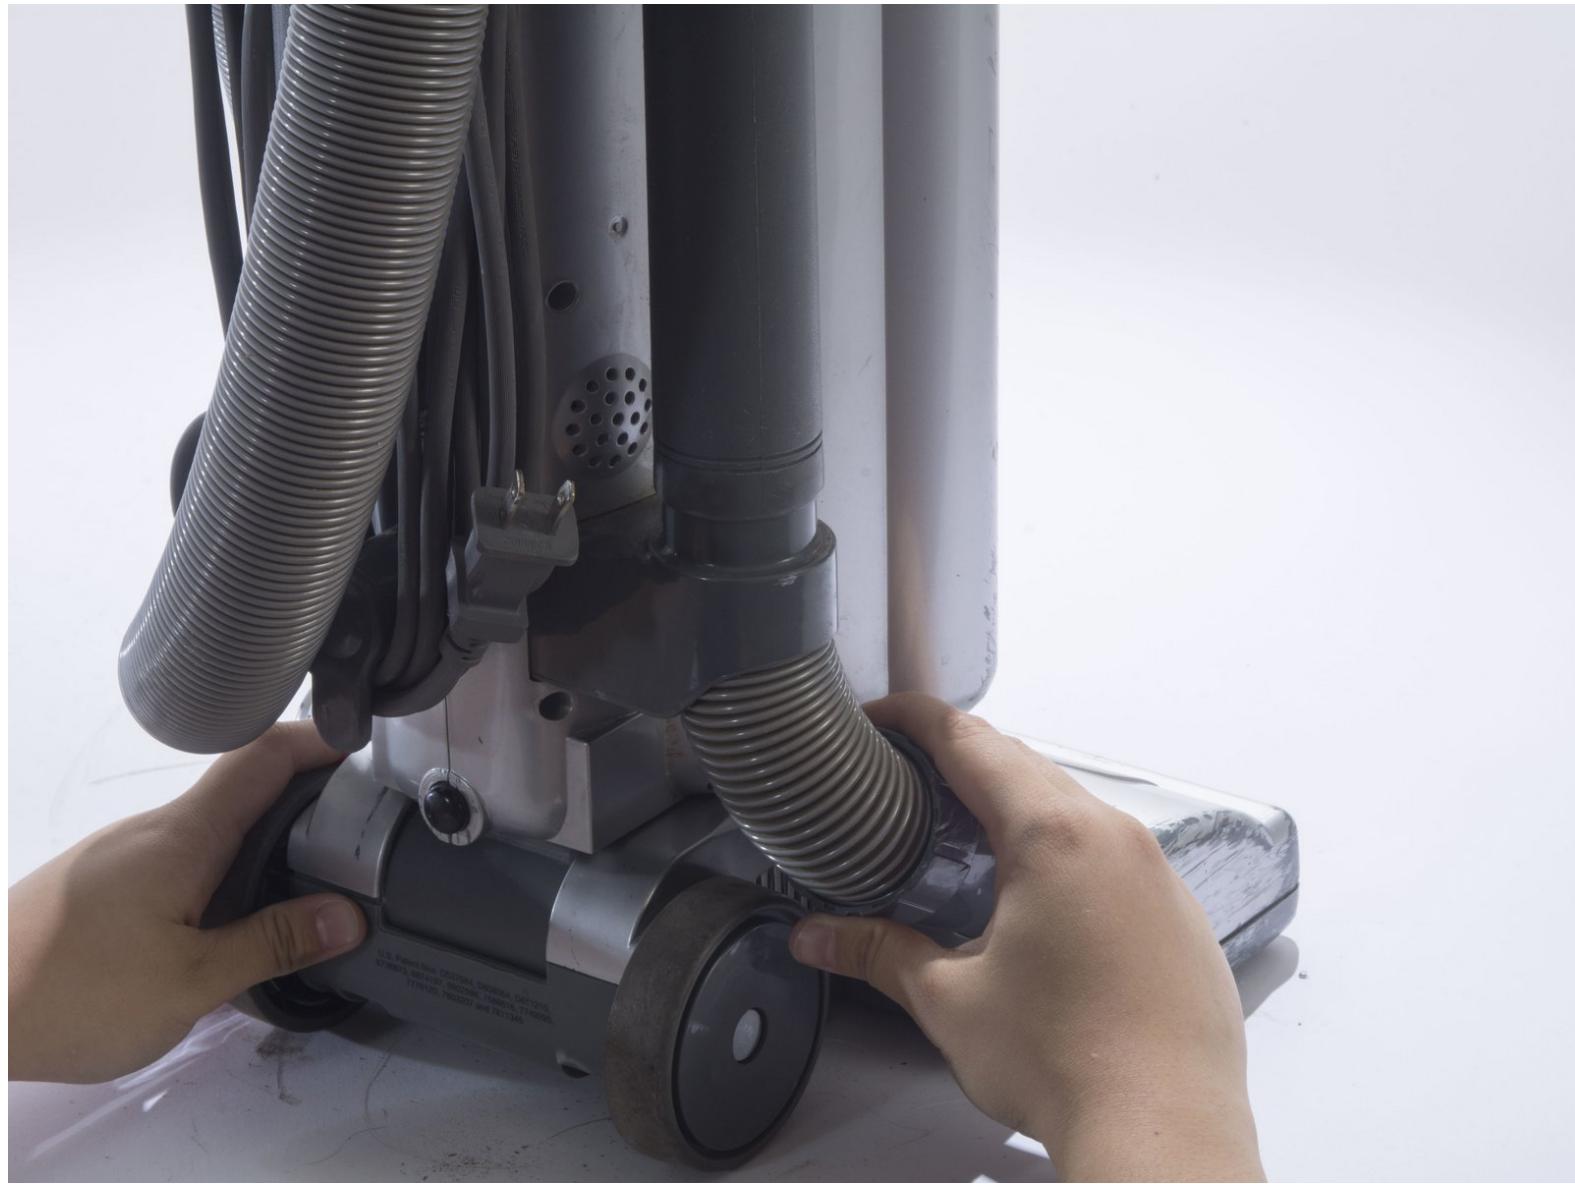

Shark Navigator Lightweight Upright Head Shell Replacement

This guide will explain how to remove the vacuum head shell from the Shark Navigator Lightweight Upright.

Written By: Suzie



This document was generated on 2019-10-14 08:36:28 PM (MST).



INTRODUCTION

Some of the most important components are secured under the plastic hood. This guide will show you how to properly remove the hood to access the components.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Metal Spudger](#) (1)
- [JIS #1](#) (1)

Step 1 — Head Shell

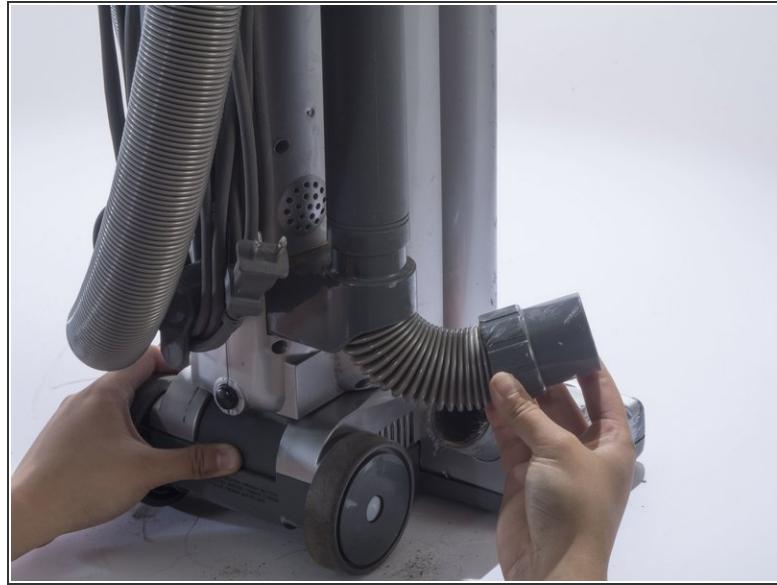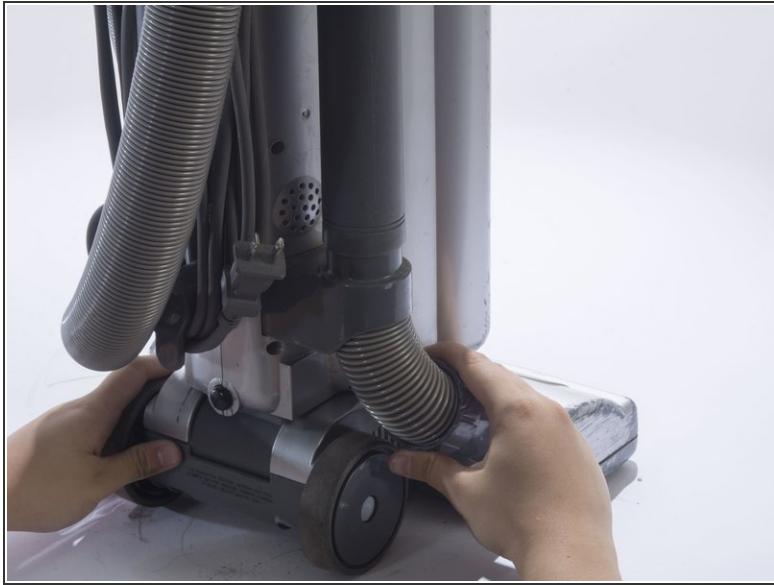

- Detach the hose connected on the bottom of the vacuum by pulling it out of the casing.

Step 2




- Lay the vacuum on its side.
- Press in the black, rubberish button located on the back of the vacuum to detach the vacuum head from the body.

Step 3




- Flip over the vacuum head so the brush head is facing up.

Step 4

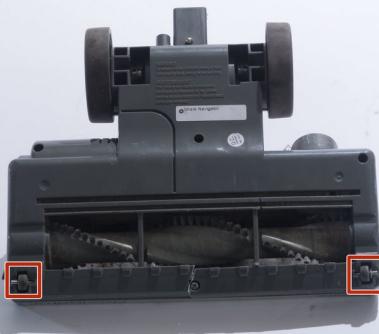


- Remove the small front wheels with a metal spudger by inserting the metal spudger in front of the wheel and slowly prying up. This will free the wheel and reveal the screw beneath it.
- Repeat this for the other wheel.

Step 5

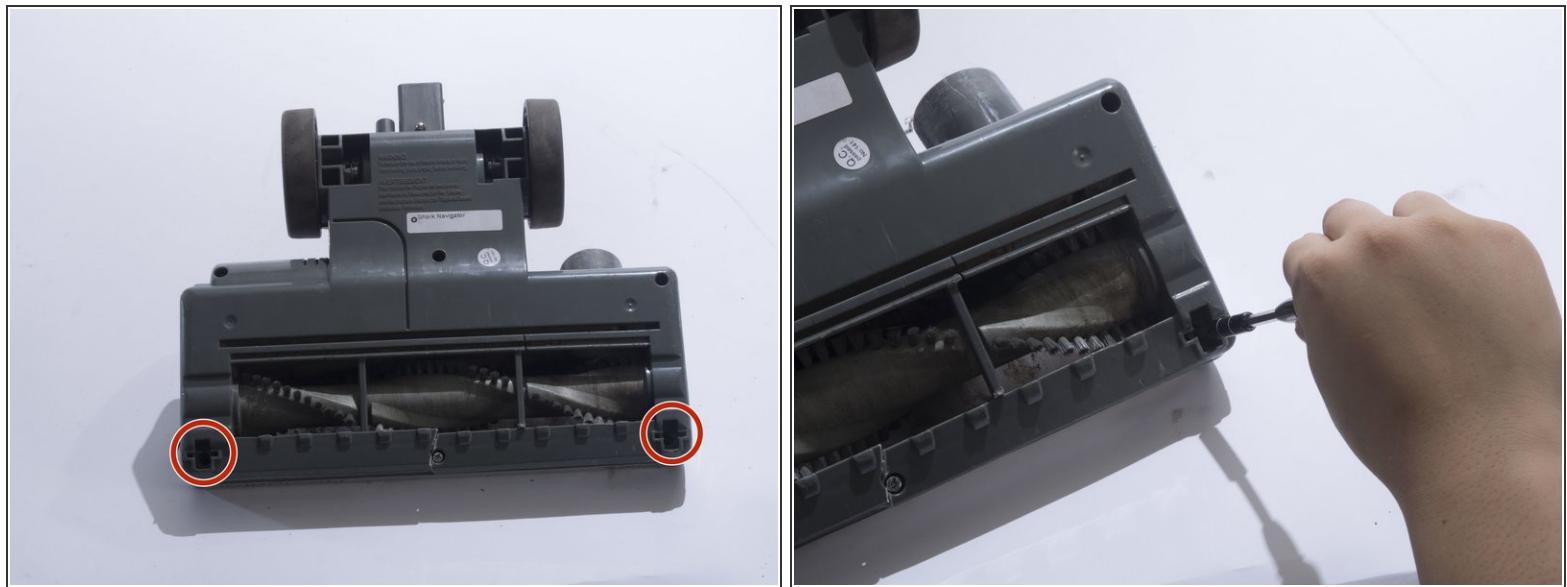


- Remove the two 18mm screws with a JIS 1 screwdriver.

Step 6

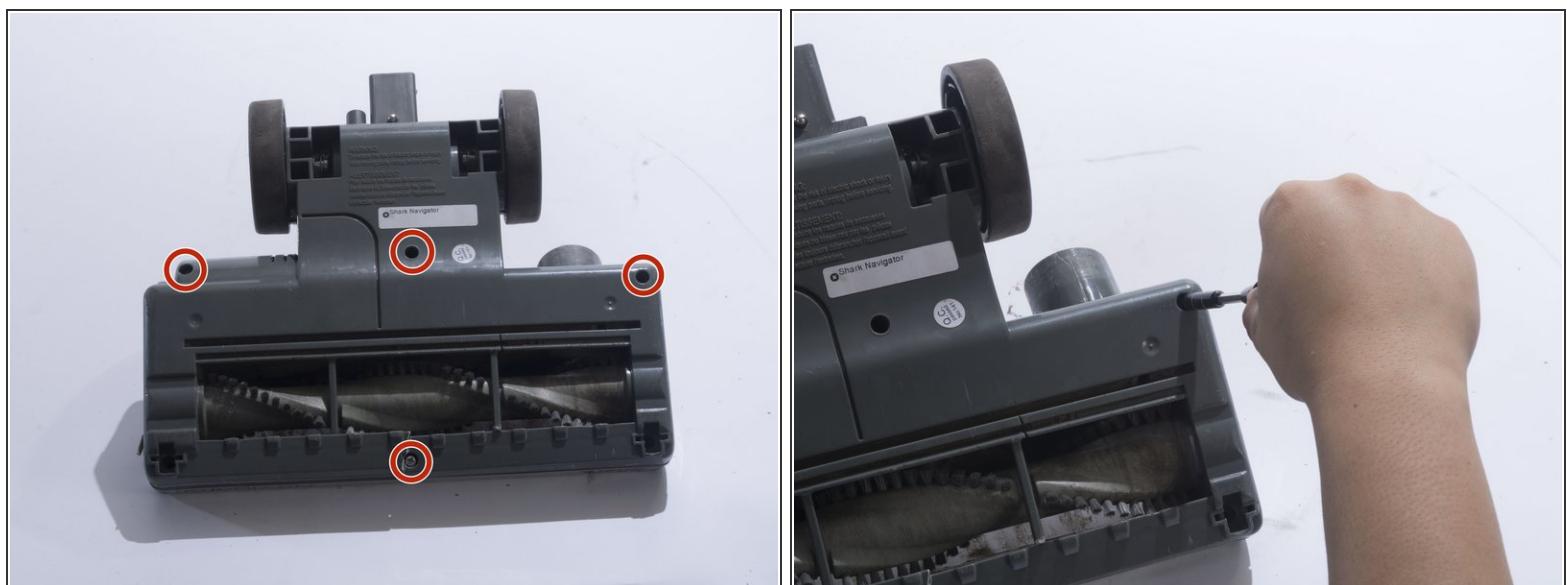

- Remove the four 18mm screws located on the top corners and the bottom/middle of the vacuum head using a JIS 1 screwdriver.

Step 7

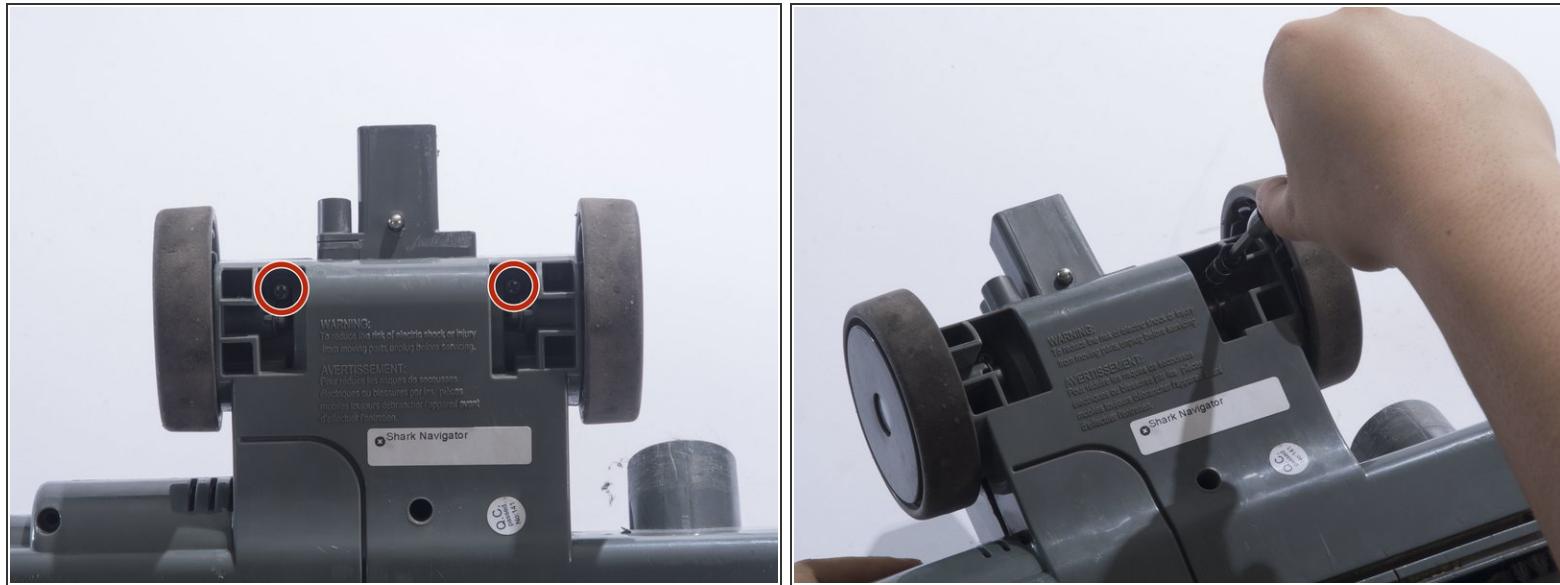

- Remove the two 18mm screws located on the inside of the large wheels using a JIS 1 screwdriver.

Step 8



- Remove the plastic cover by prying the plastic cover up using a plastic opening tool.
- Prying in multiple locations may be necessary to create separation.

To reassemble your device, follow these instructions in reverse order.