




Shark Navigator Motor Replacement

This repair guide will help you replace the motor of the vacuum.

Written By: Molina Oung

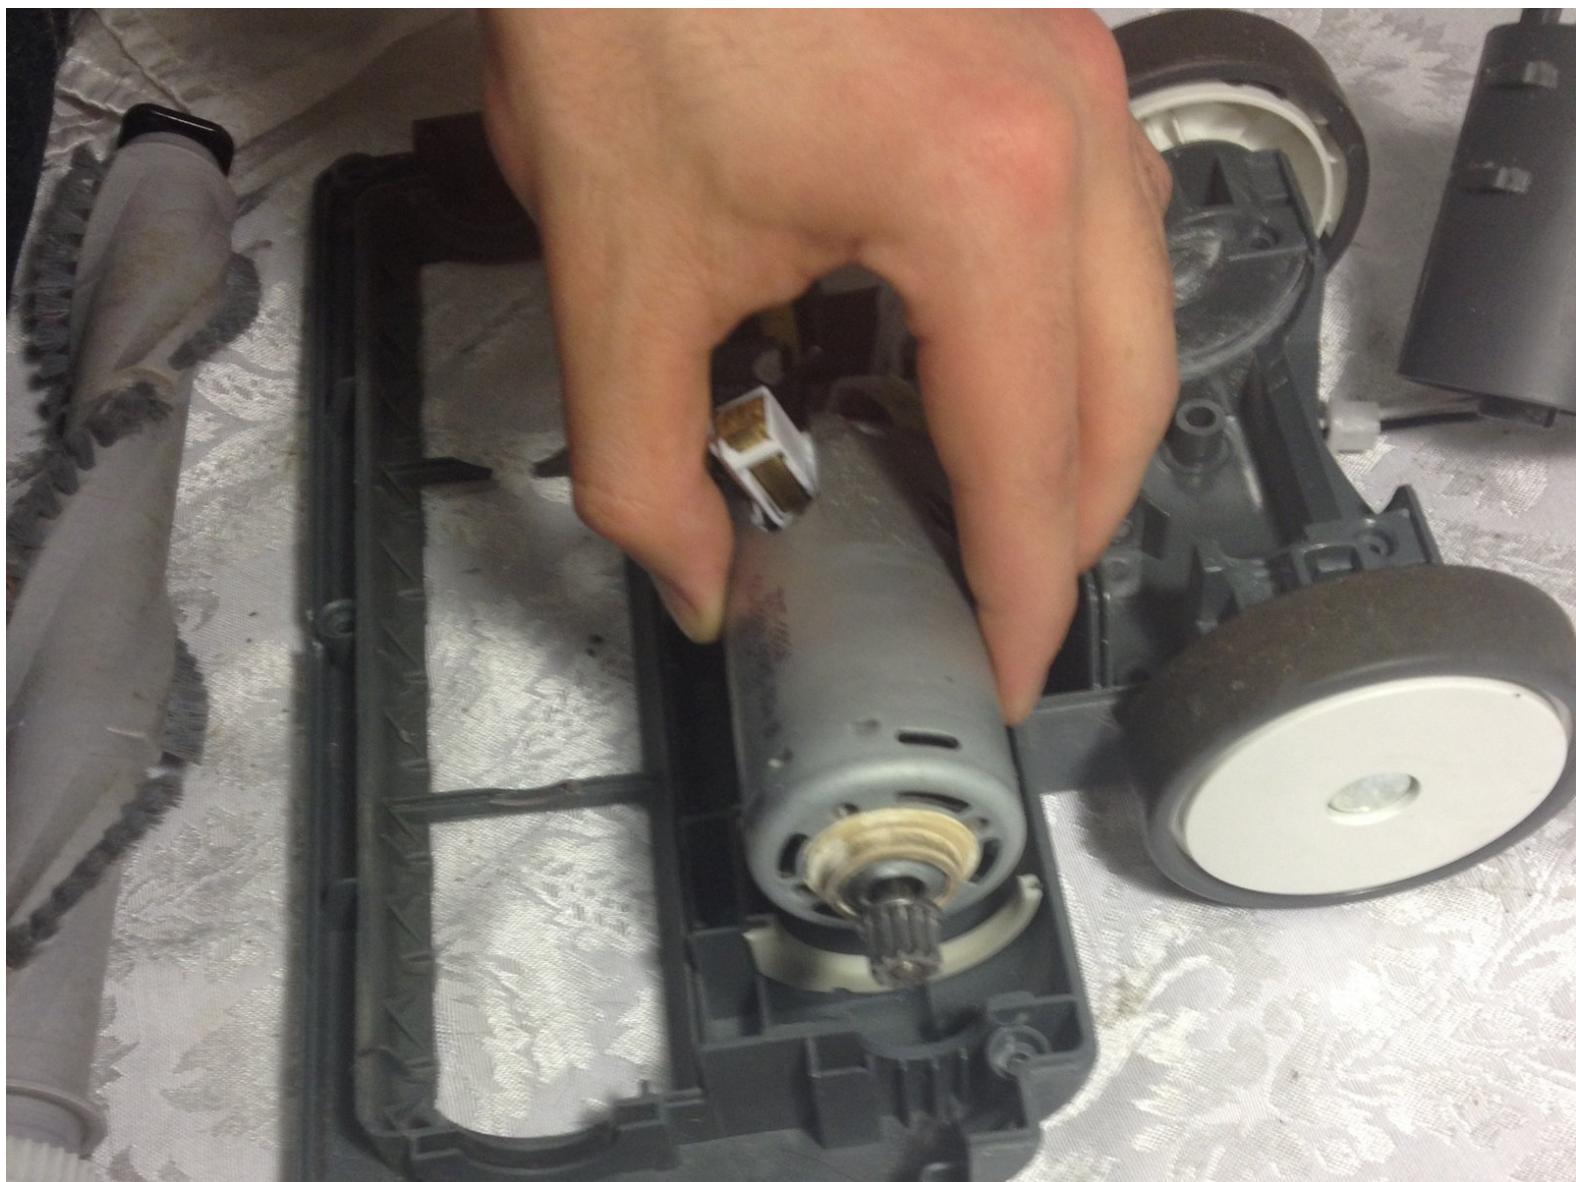

 **TOOLS:**



- Essential Electronics Toolkit (1)

Step 1 — Roller Brush Compartment




- Pop out the two small wheels located on the front end of the bottom of the roller brush compartment.

Step 2

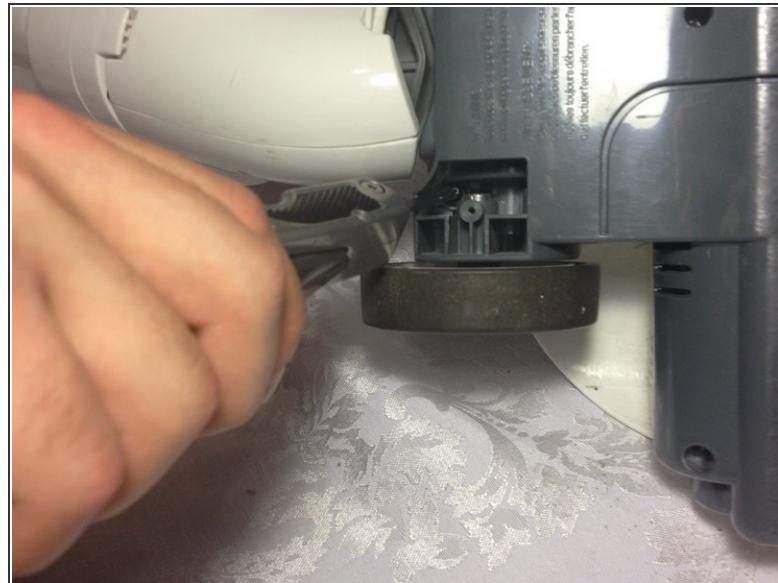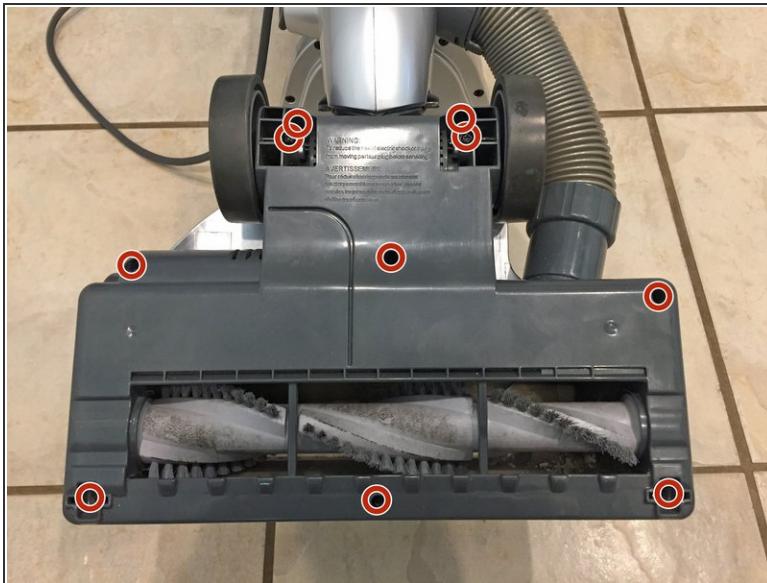

- Remove the 10 Phillips screws located on the bottom of the roller brush compartment. (Two of these screws are located under the wheels from the previous step.)
 The screws have varying lengths, so keep track of where each one goes for reassembly.

Step 3

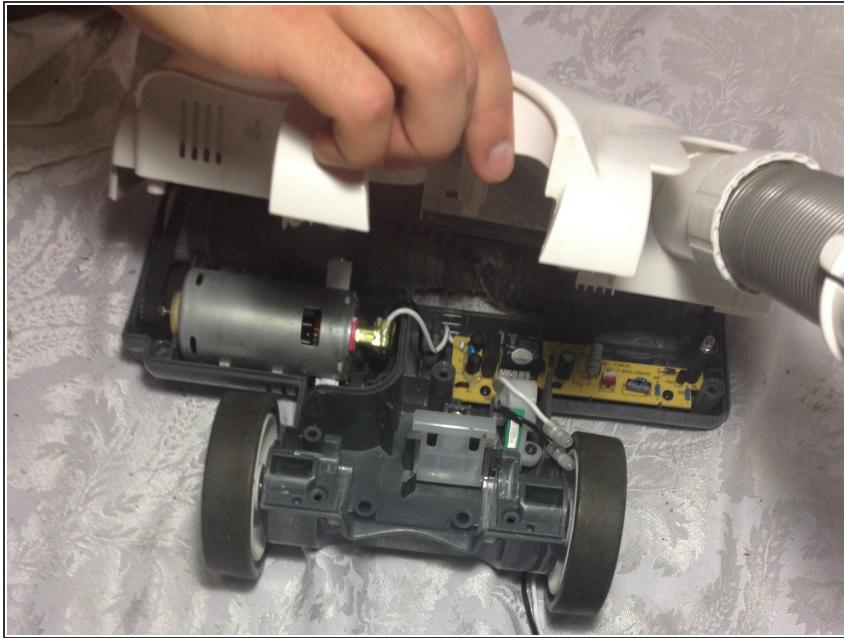

- Remove the white plastic cover to expose the roller compartment underneath.

Step 4 — Motor



- Once the vacuum top is opened, you can simply remove the motor as shown in the image.
- Make sure to untangle or unhook any wires that are connected to the motor.
- Once this is done, you can replace the old motor with a new one.

To reassemble your device, follow these instructions in reverse order.