




Shark Pet Perfect II Front Belt Replacement

Step by step guide on replacing the internal brush rotation belt.

Written By: Tanner Brown

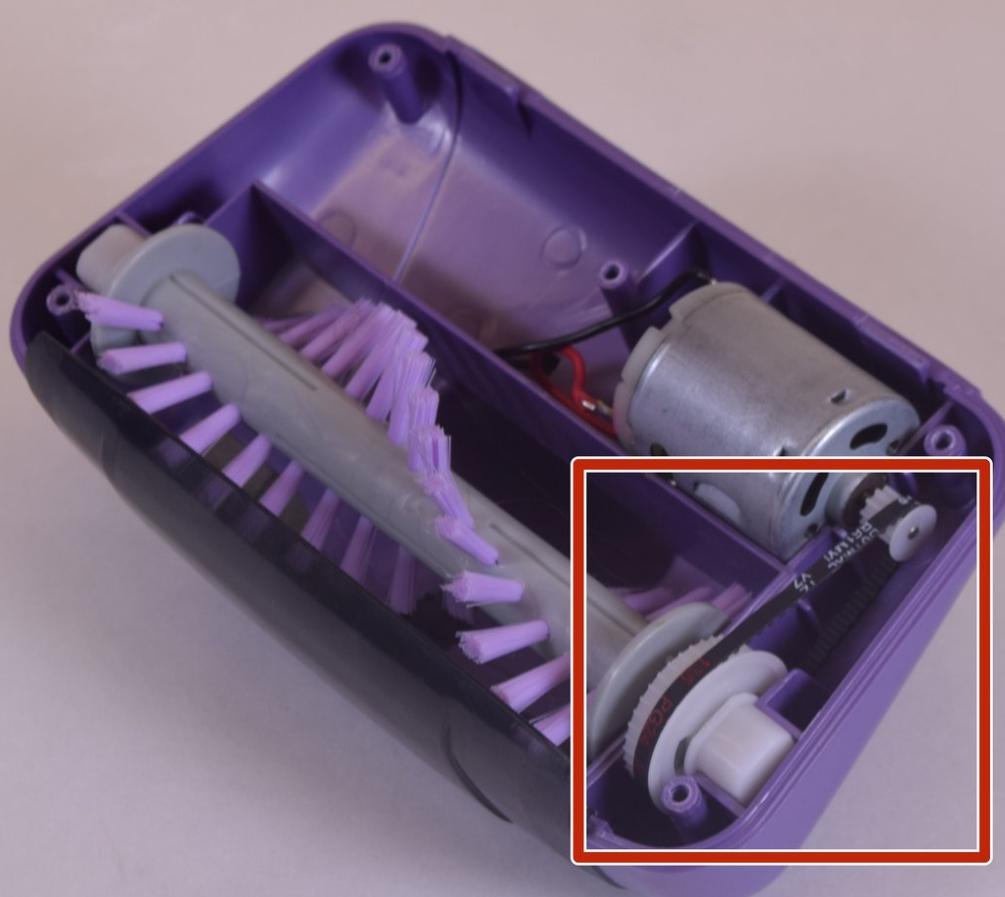

INTRODUCTION

Step by step guide on replacing the internal brush rotation belt. After removing a few screws, you can access the internal components of the motorized brush. After removing the belt, you should exercise care in handling the belt.

TOOLS:

- Phillips #1 Screwdriver (1)
- iFixit Opening Tools (1)

Step 1 — Front Belt




- Remove the motorized brush from the dust cup by pulling it apart.

Step 2




- Use a Phillips #1 screwdriver to remove the five 14mm screws from the face of the motorized brush.

Step 3

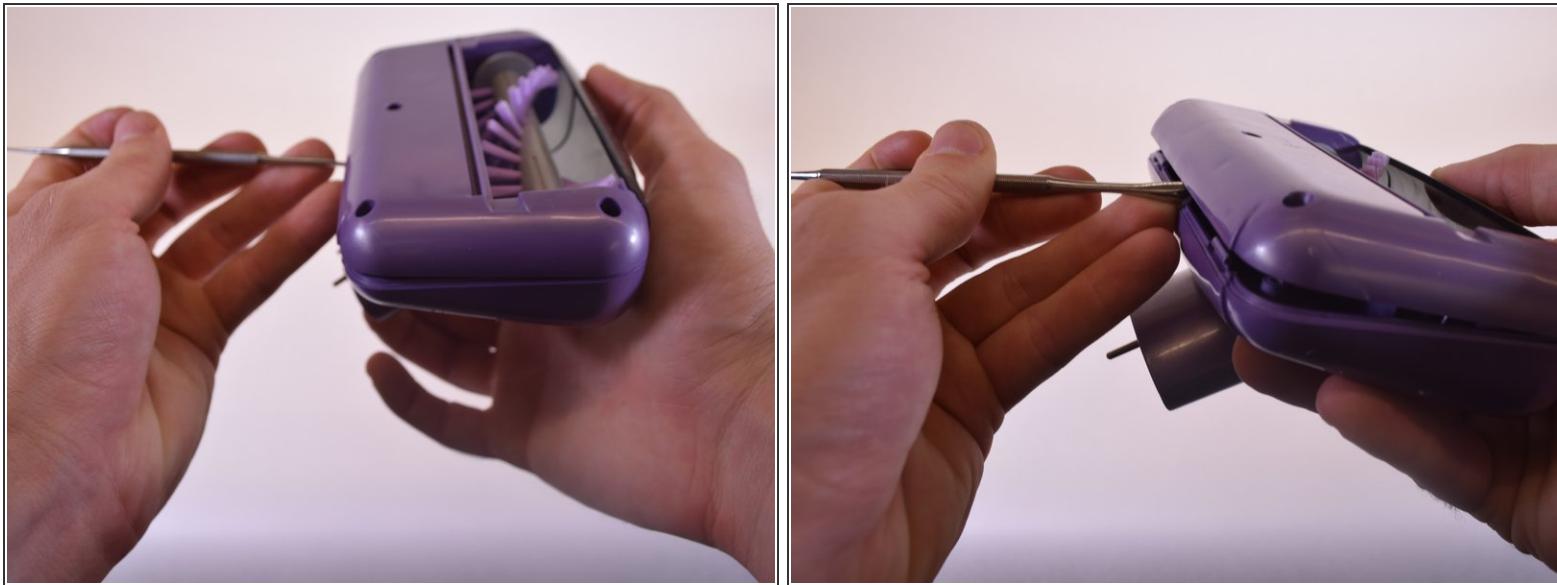

- Separate the motorized brush face plate by using a flat prying tool.

Step 4

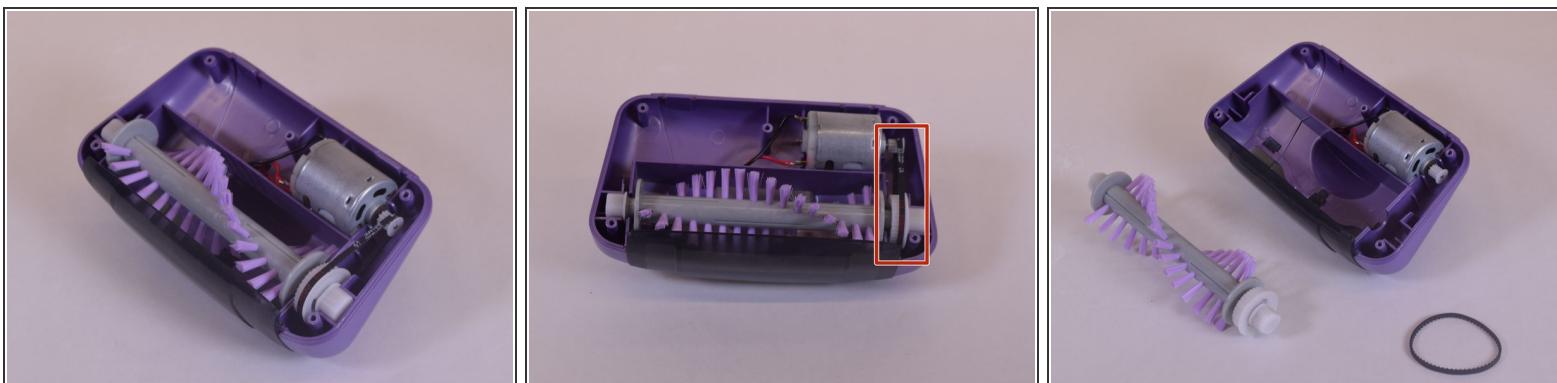

- Remove the brush roller by lifting vertically away from the brush head. It should come out easily along with the belt.

(i) Be careful in handling the belt. If stretched or damaged, the belt can cause the motorized brush to operate incorrectly.

To reassemble your device, follow these instructions in reverse order.