


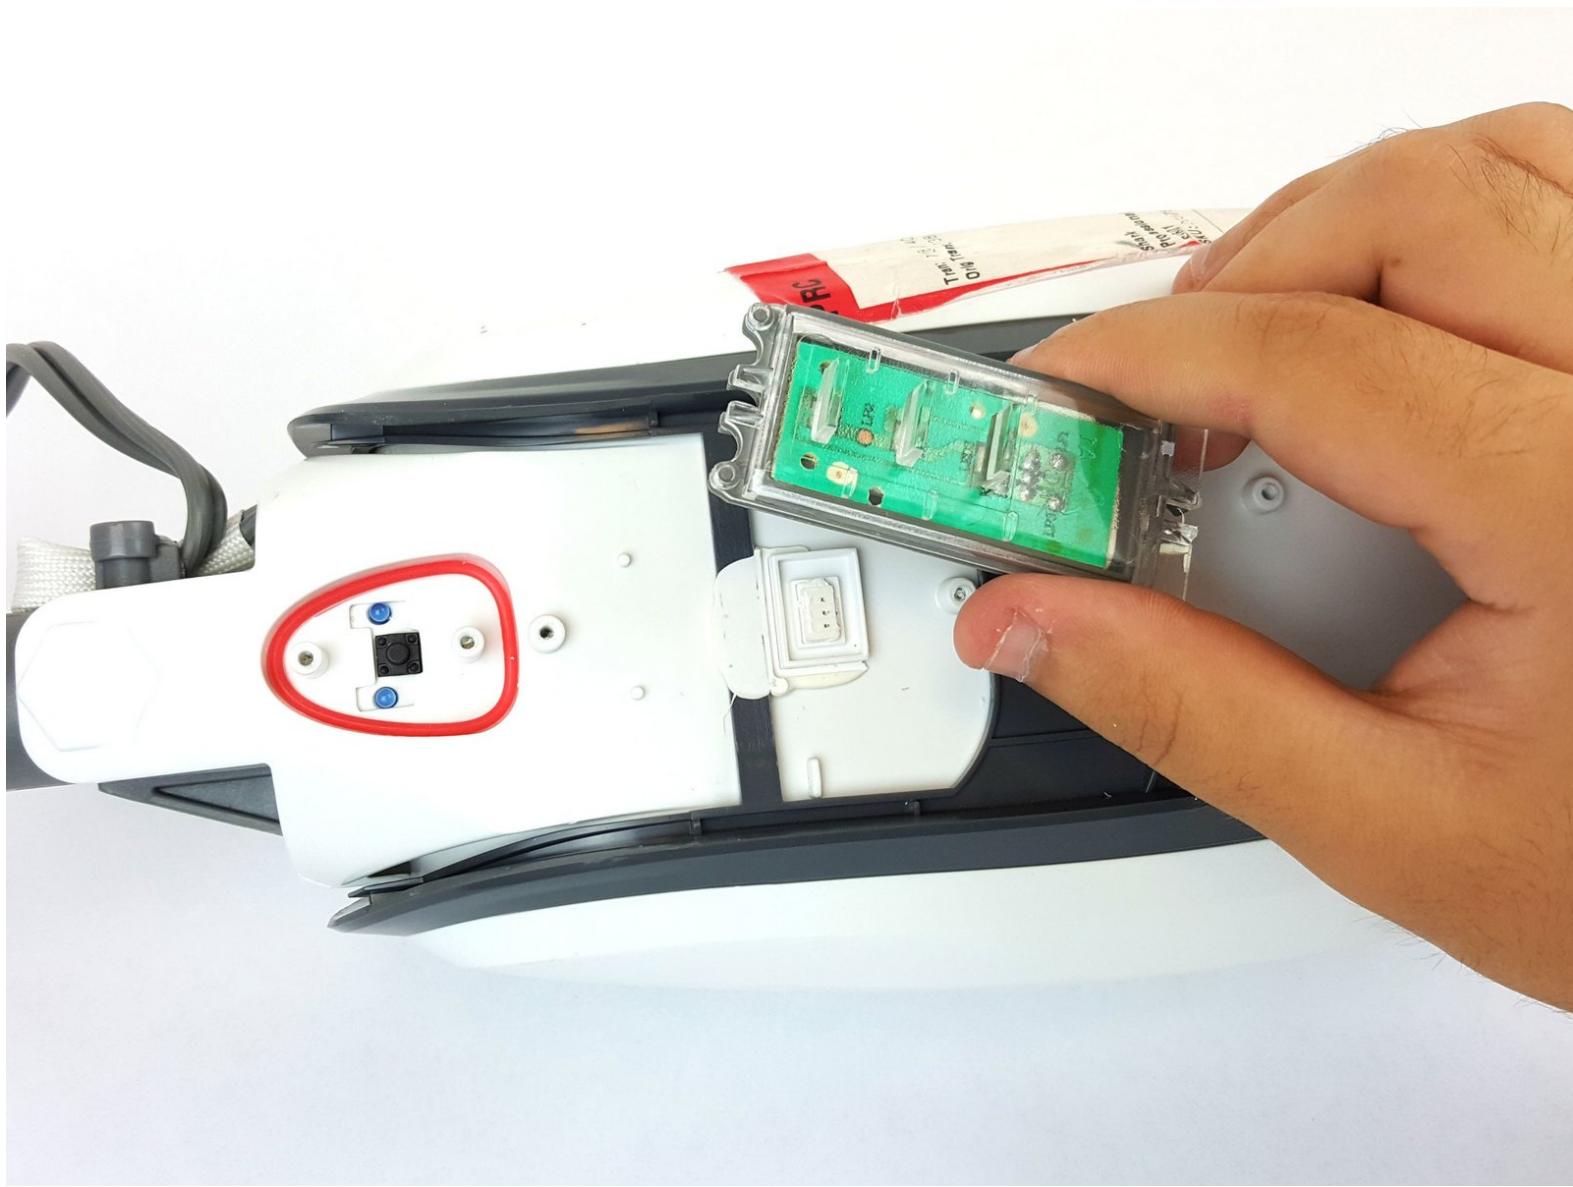

Shark Professional Steam Pocket Mop Control Panel Replacement

Replace the control panel which controls the settings of your Shark Professional Steam Pocket Mop with this step-by-step guide.

Written By: Brett Wilson



This document was generated on 2019-10-20 06:28:21 PM (MST).


INTRODUCTION

If the indicator lights don't appear to be functioning despite being plugged in, a faulty control panel might be the culprit. Before doing any repair/disassembly on your Shark Professional Steam Pocket Mop, make sure to unplug both the mop and empty the water tank for your safety.

TOOLS:

- [T10 Torx Security Bit Screwdriver](#) (1)
- [Phillips #2 Screwdriver](#) (1)
- [Metal Spudger](#) (1)

Step 1 — Shark Professional Steam Pocket Mop Front Panel Disassembly

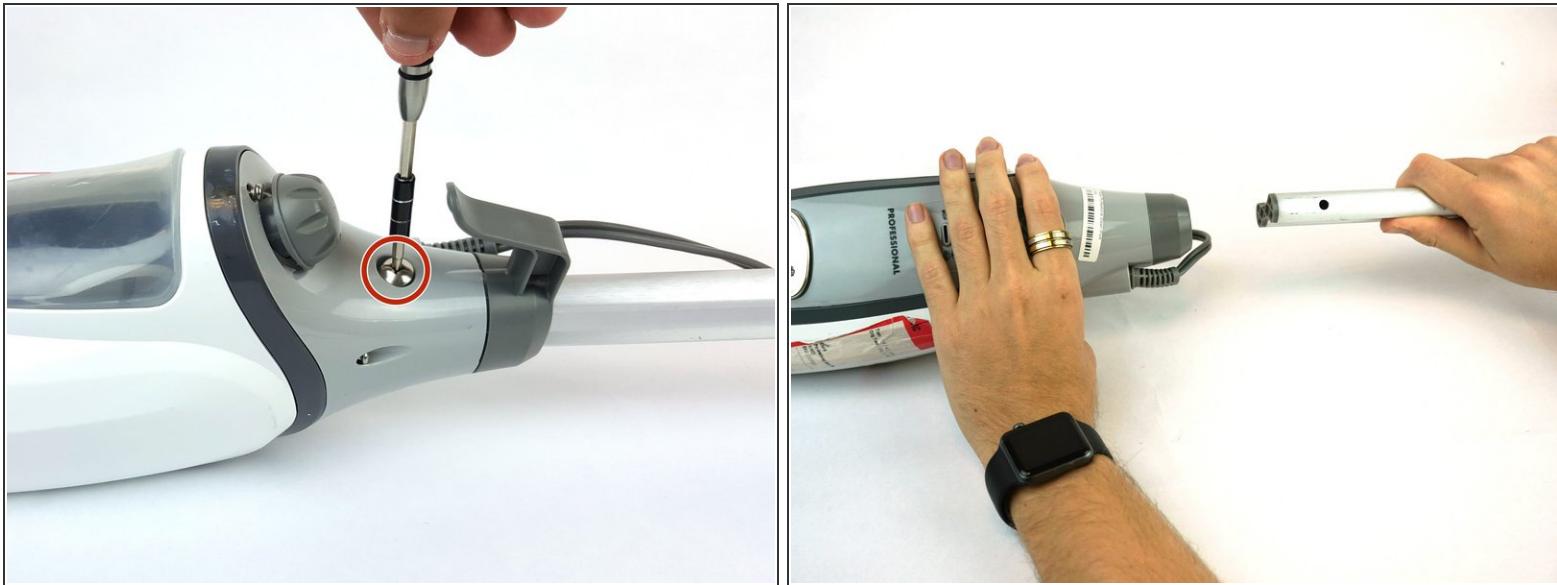


- Unwrap the power cord from the handle.
- Remove the 56.0 mm Phillips head #2 screw located above the water tank cap.
- Pull the handle to separate it from the body.

Step 2



- Remove the three 12.0 mm Phillips head #2 screws where the handle connects to the body.
- Remove the plastic cap.

Step 3

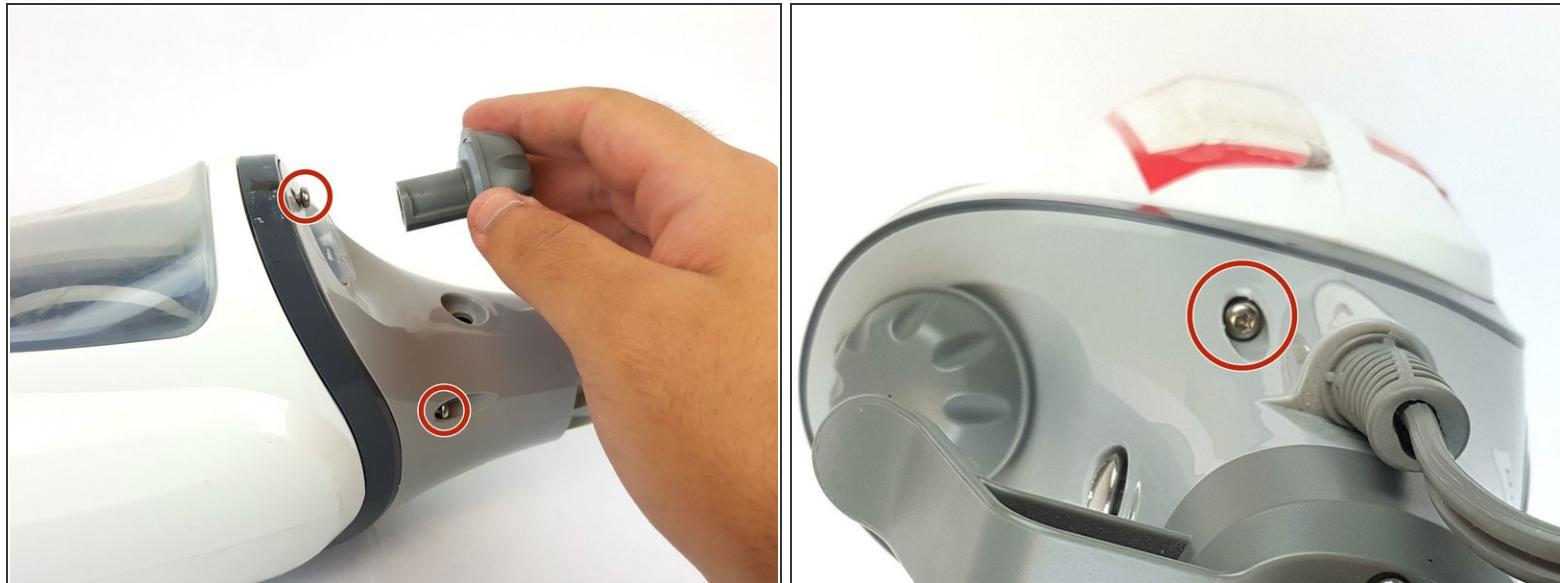

- Remove the three 16.0 mm T10 Torx screws near the top of the body and remove the water tank cap.
- The third screw is directly on other side of the bottom screw in the photo.

Step 4



- Remove steam control button cover with a metal spudger.
- Remove the two 12.0 mm Phillips head #2 screws underneath.
- Remove the plastic rim with clear plastic cover.

Step 5





- Remove the Shark logo decal on the front of body using a metal spudger.
- Remove the two 12.0 mm Phillips head #2 screws underneath.
- Pull out the plastic cover to remove.

Step 6



- Pop off the grey front plate to expose the control panel and screws necessary to open mop body.

Step 7 — Control Panel

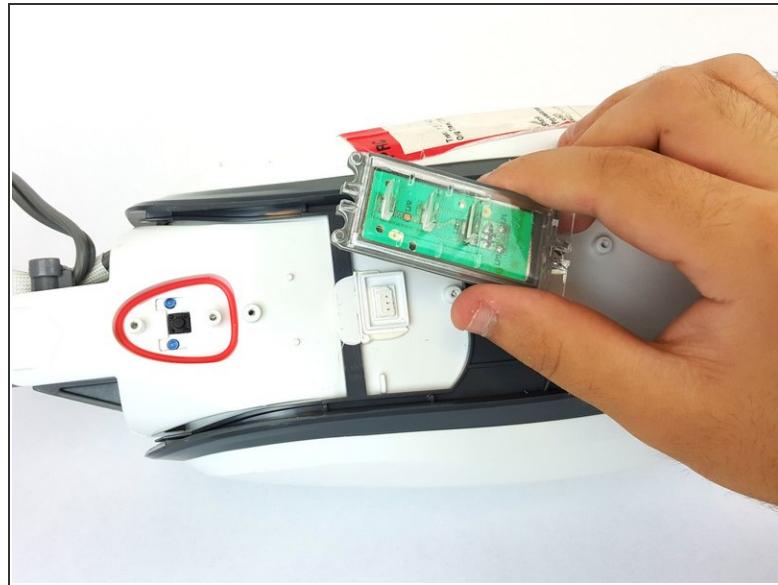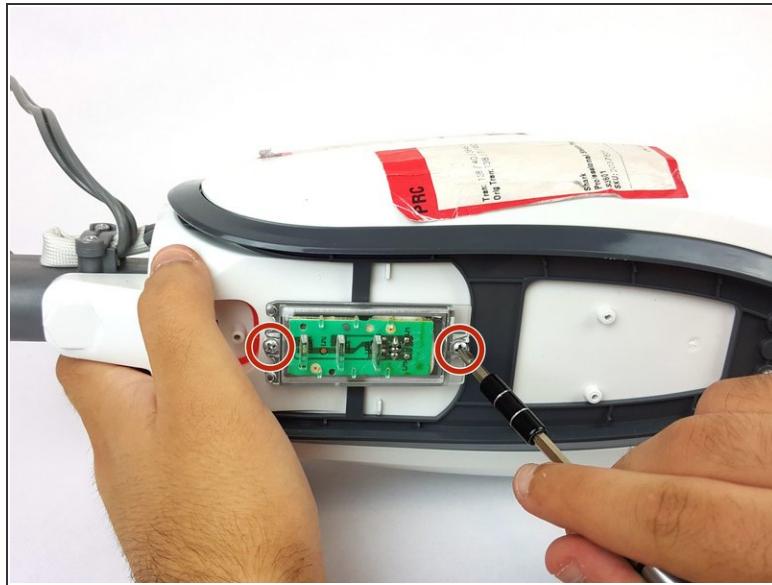

- Remove the two 12.0 mm Phillips head #2 screws. Disconnect the control board.
- Disconnect the control board

To reassemble your device, follow these instructions in reverse order.