


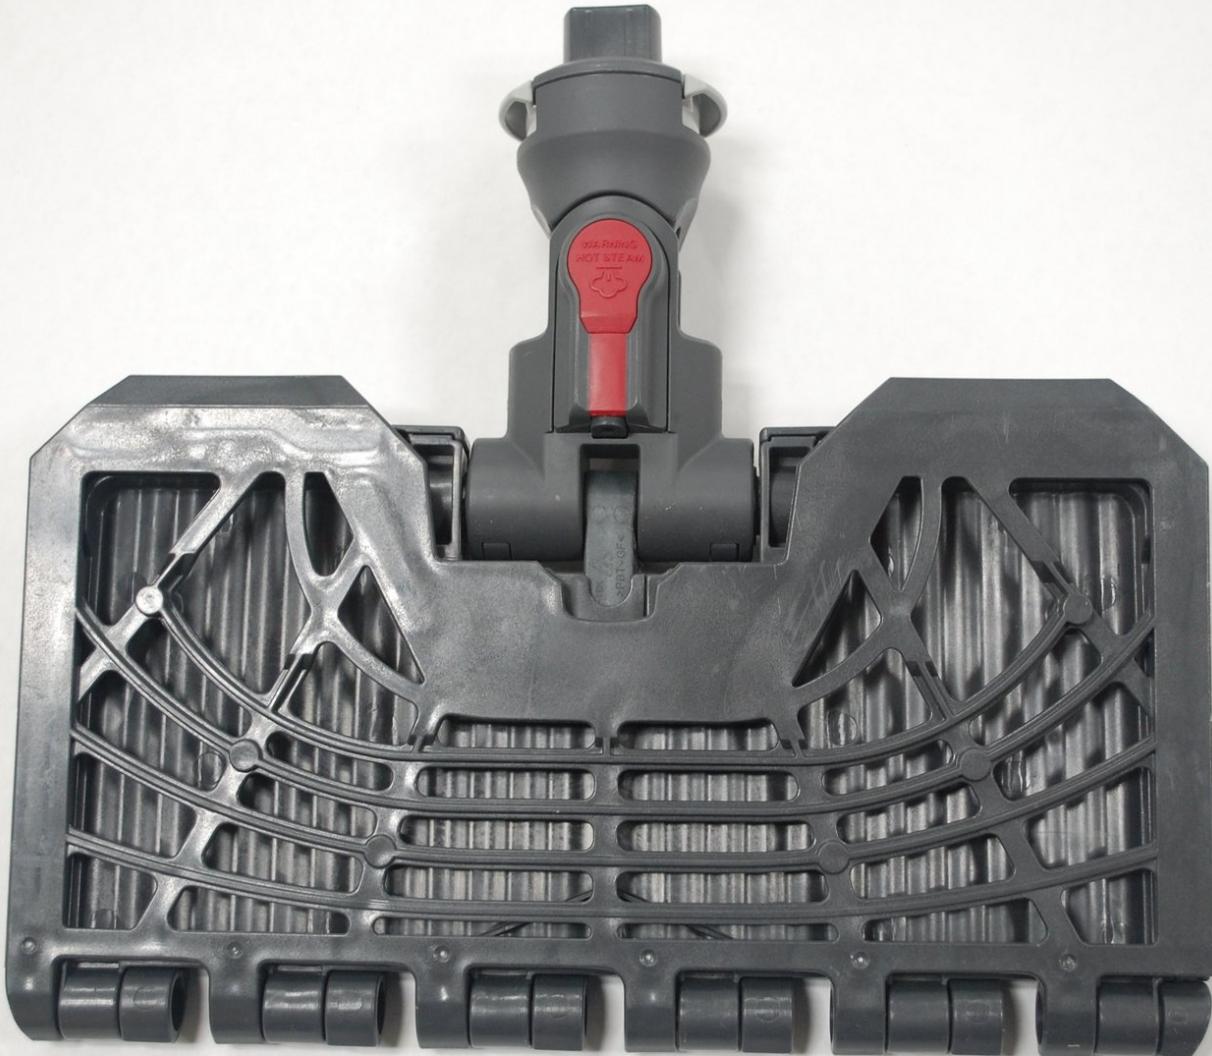

Shark Professional Steam Pocket Mop Head Replacement

Replace the mop head of the Steam Pocket Mop in case of damage to the part.


Written By: Tyler Wicke



INTRODUCTION

If you need to replace or re-install the mop head of your Steam Pocket Mop, this guide will walk you through the process. There are no tools needed.

Step 1 — Mop Head

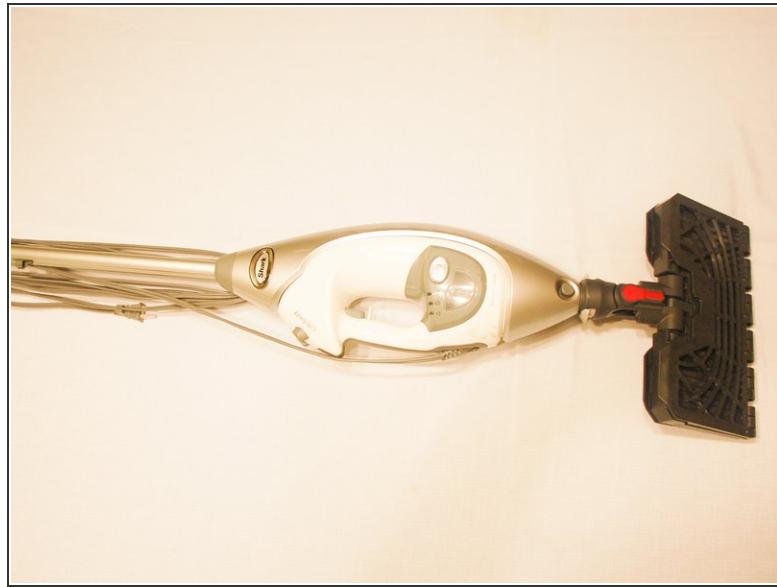

- Turn off the Steam Pocket Mop and unplug it from the wall.

 Be sure that any water in the water tank cools before proceeding.

Step 2



- Push down on the round, grey release button near the connection point, while pulling the mop head out.
- The mop head should slide out and detach.

 When reassembling, you should hear it click into place if it is properly installed.

To reassemble your device, follow these instructions in reverse order.