



Shark Rocket HV381 Roller Replacement

How to replace the roller of the Shark Rocket HV381 vacuum.

Written By: Dandre Porter



INTRODUCTION

This guide will tell you step by step how to replace a malfunctioning Roller in a Shark Rocket HV381 Vacuum.

Step 1 — Roller



- On the right-bottom of the body, pull down the black switch. You will hear an audible click when you detach the body from the vacuum head.

Step 2



- Laying the vacuum head on the its right side, push the orange "Eject Roller" switch down. The Roller can now be removed with ease.

To reassemble your device, follow these instructions in reverse order.