




Shark Rocket HV381 Wheel Replacement

How to replace the wheels on the Shark Rocket HV381.

Written By: Dandre Porter

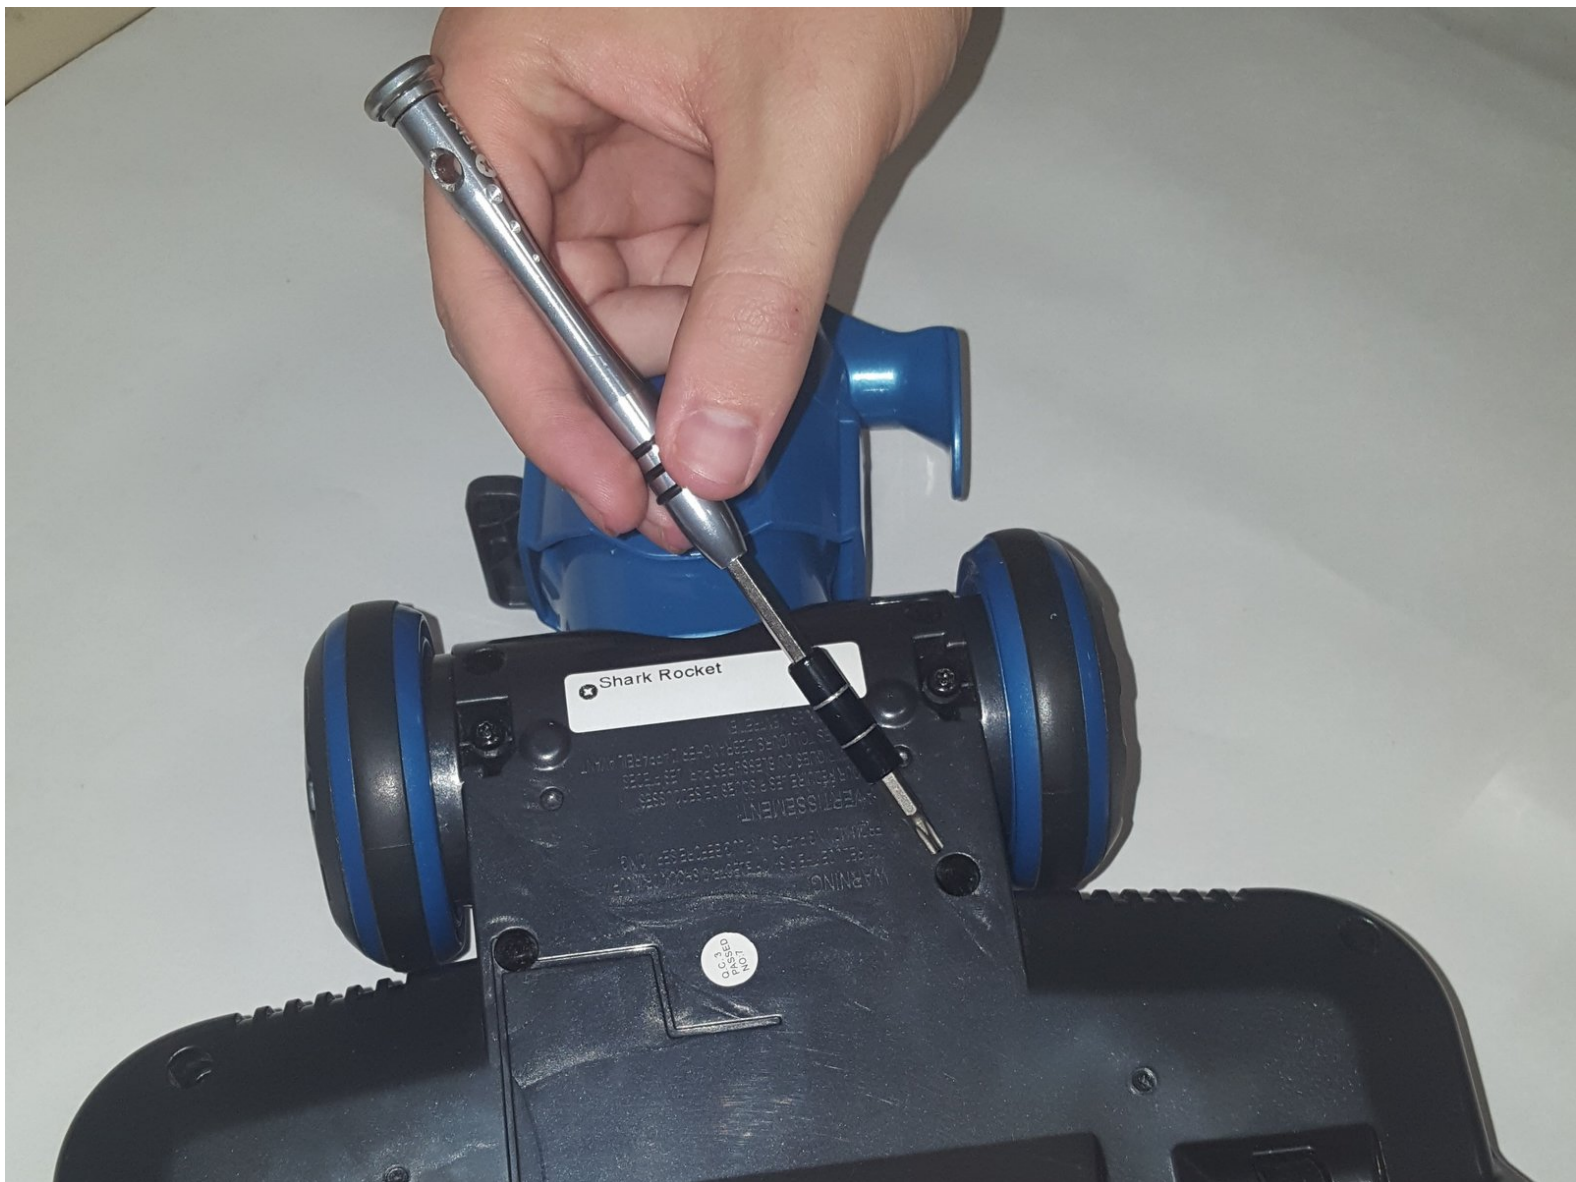

INTRODUCTION



This guide will teach you step by step how to replace malfunctioning wheels on your Shark Rocket HV381.



TOOLS:

- [T15 Security Torx Screwdriver](#) (1)
-

Step 1 — Wheel

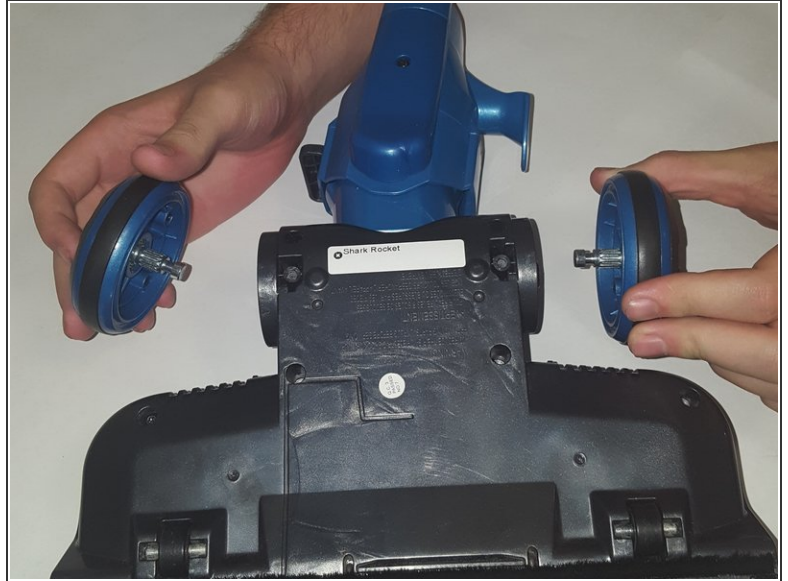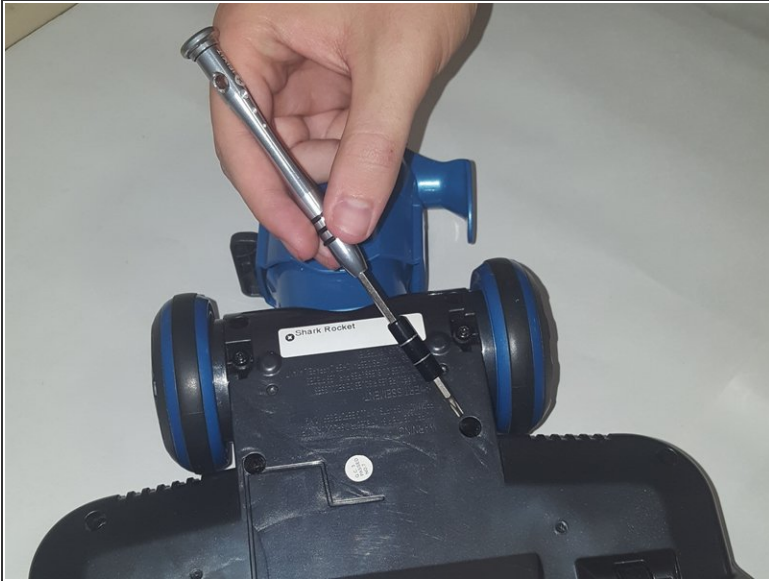

- On the back of the vacuum head, locate and unscrew the four T15 screws. Once done the wheels can be removed.

To reassemble your device, follow these instructions in reverse order.