



Shark Rocket Powerhead AH401 Filter Grille Replacement

This guide will show you how to replace a damaged Filter Grille and how to gain access to the Post-Motor filter.

Written By: Shobhit Dabral



This document was generated on 2019-10-06 01:17:19 AM (MST).

INTRODUCTION

This guide will show you how to replace the filter grille if it becomes damaged, does not remain in place, or if you need to reach the Post-Motor filter.



PARTS:

- [Filter Grill \(1\)](#)
- [Post-Motor Filter \(1\)](#)


Step 1 — Dust Cup



⚠ Ensure the device is turned off and unplugged from any power source before beginning work.


- Push down on the dust can lever to release the dust can in order to get to the filter grill.

Step 2

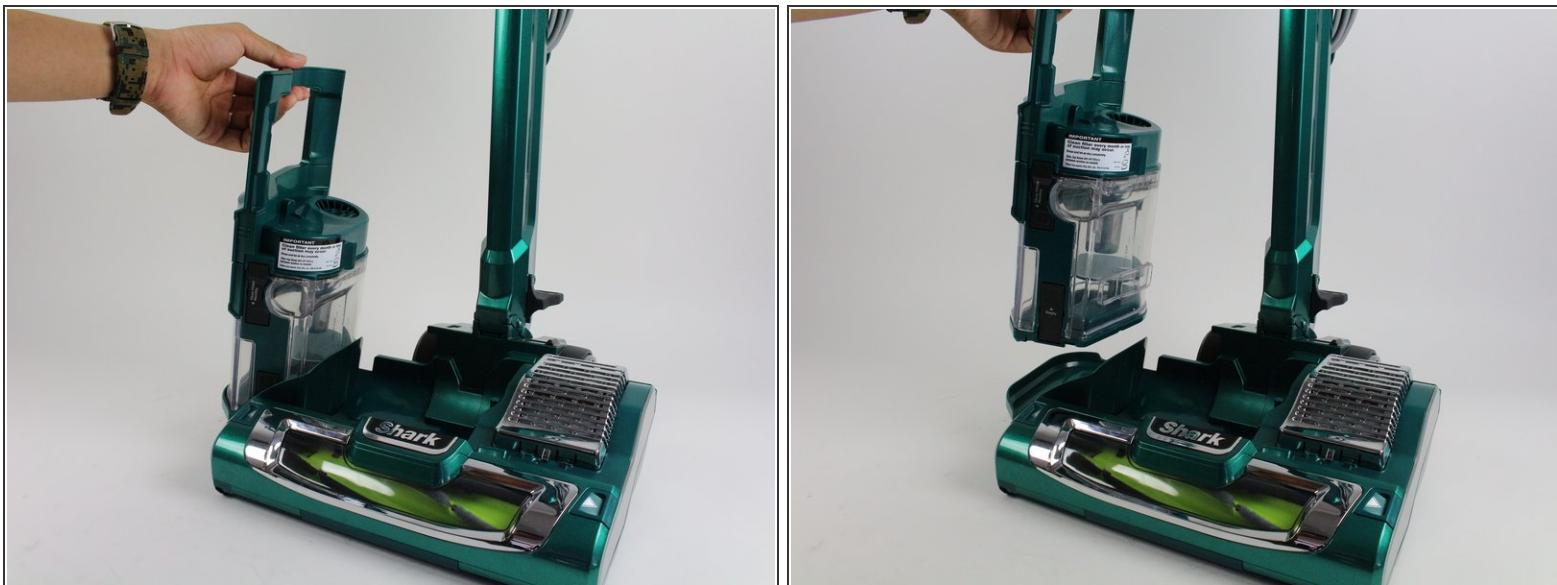

- Remove the dust cup by lifting it off the dock.

Step 3 — Filter Grille

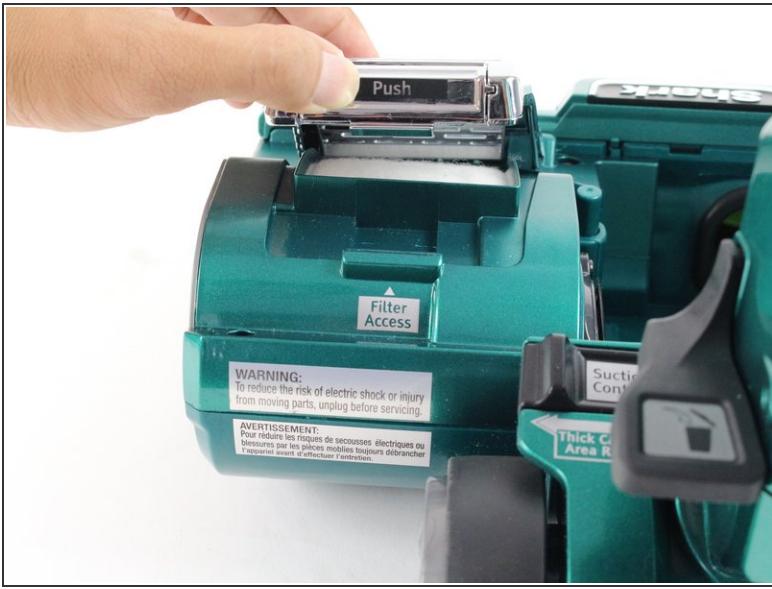

- Push inward on the top of the filter grille where it says "Push."
- Lift the filter grille upward.

Step 4



- Lift gently and pull the grille up towards you until it releases.
- The post-motor filter is underneath the filter grille.

To reassemble your device, follow these instructions in reverse order.