



Shark Rocket Powerhead AH401 Panel Screws Replacement

This prerequisite guide will show you how to remove the panel of Shark Rocket Powerhead AH401.

Written By: Toan Pham



INTRODUCTION

To access the motors, the belt, and the motherboard of the vacuum, some of the screws on the back panel have to be removed. This guide will show you how to remove the screws from the back panel on your Shark Rocket Powerhead AH401.

TOOLS:

- T15 Torx Screwdriver (1)


Step 1 — Brushroll



⚠ Ensure the device is turned off and unplugged from any power source before beginning work.

- Locate the two tabs with white arrows on them. They are located on either side of the brushroll cover.
- Slide the tabs away from the center of the vacuum to unlock the brushroll cover.
- Lift the brushroll cover upward.

Step 2

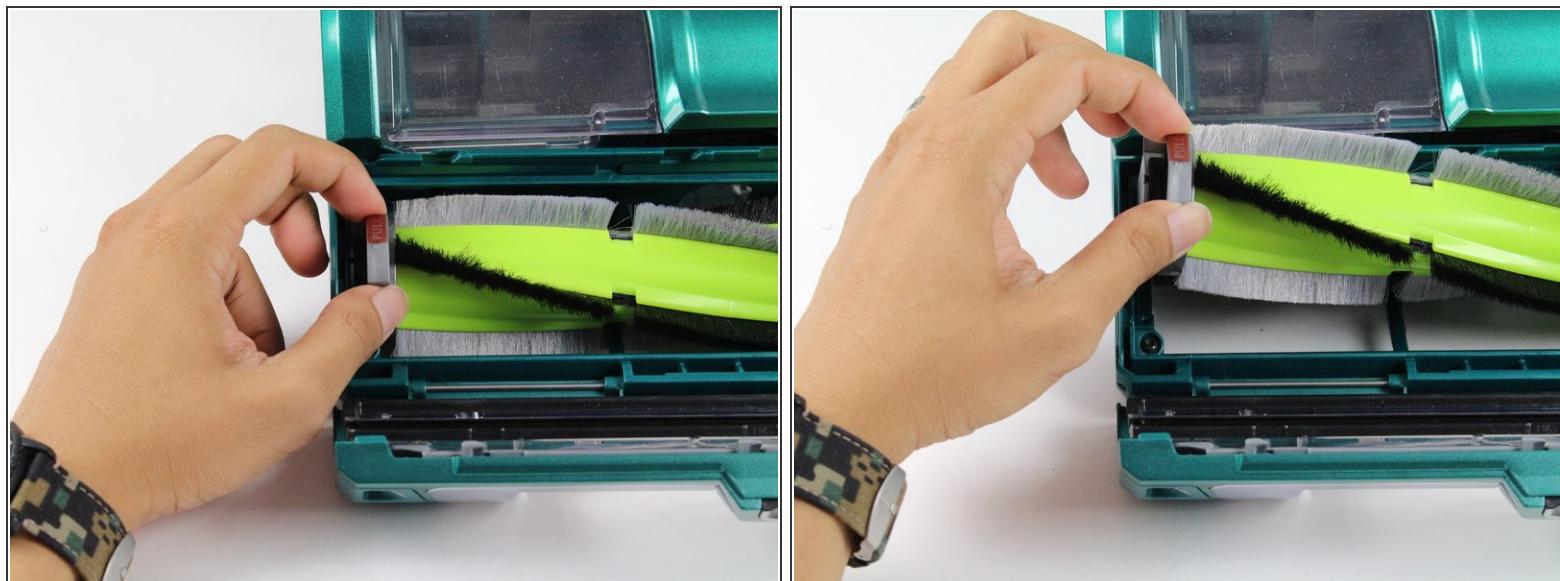

- Lift the brushroll out by pulling the tab labeled "pull".


Step 3 — Dust Cup



⚠ Ensure the device is turned off and unplugged from any power source before beginning work.


- Push down on the dust can lever to release the dust can in order to get to the filter grill.

Step 4

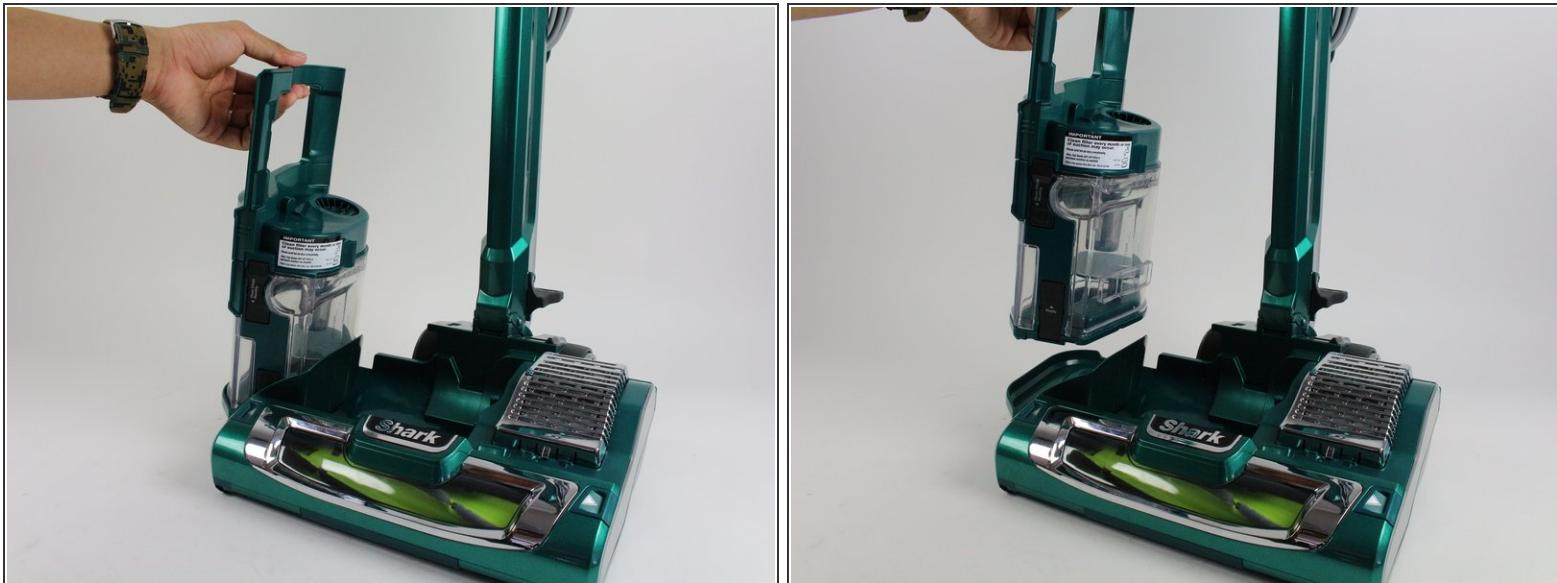

- Remove the dust cup by lifting it off the dock.

Step 5 — Back Panel Screws

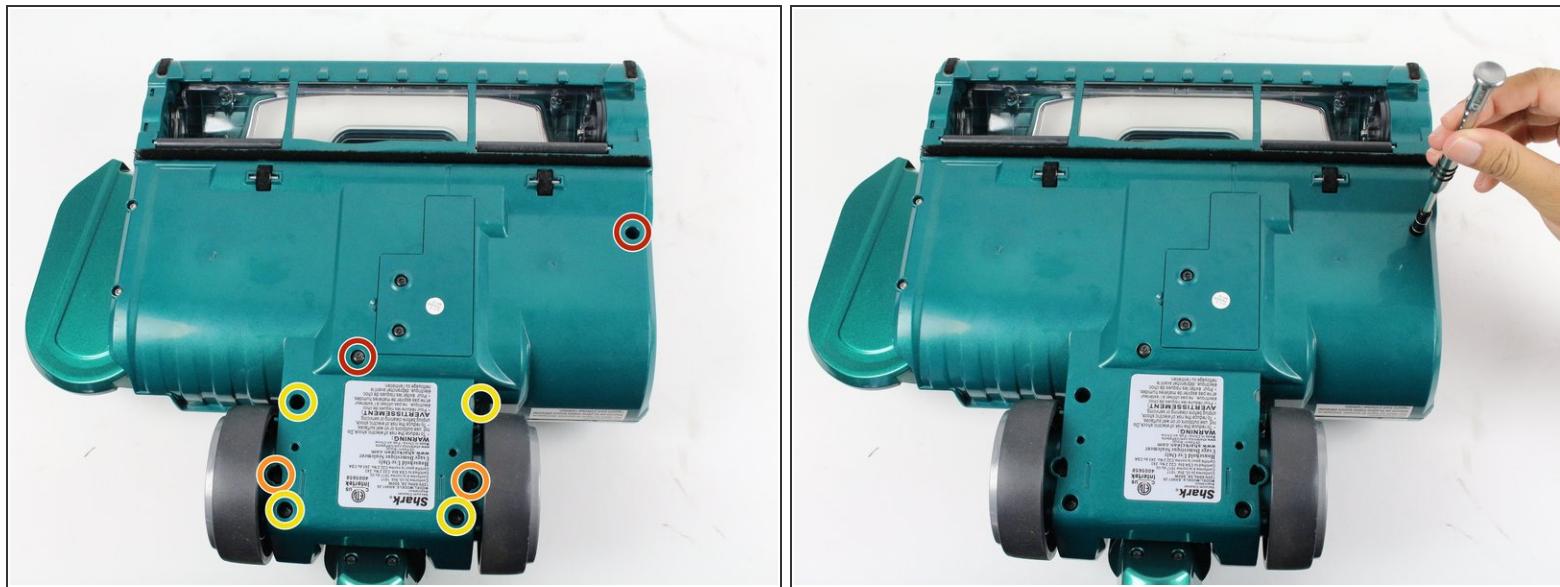

- Flip the device over so that the bottom is face up.
- Remove the eight screws shown by rotating counter-clockwise with a T15 Torx screwdriver.
 - Two 14 mm Torx screws
 - Two 16 mm Torx screws
 - Four 21 mm Torx screws

To reassemble your device, follow these instructions in reverse order.