



Shark Rocket Professional Secondary Filters Replacement

This guide will demonstrate how to remove the three secondary filters from the Shark Rocket Professional for cleaning or replacement.

Written By: Theo Watkins



This document was generated on 2019-10-07 06:02:27 AM (MST).

INTRODUCTION

Before completing this guide, it's important to know how to remove the dust cap. If you are unsure how to do so, the dust cap guide is shown below to help you out.

Step 1 — Dust Cup



- First, locate the button that says "Dust Cup". It is right next to the power button at the base of the handle.
- Press the button down completely; you should feel a click.

Step 2



- Grab the handle of the dust cup, then pull up and away from the vacuum.

(i) You must press the button and pull the dust cap simultaneously at first to release the latch.

Step 3 — Secondary Filters



- As you look beneath the base of the dust cup, you will see a white foam filter. Remove this filter with your fingers.

Step 4



- Removing the first filter will reveal a second, thicker foam filter. Remove this as well.

i Shark recommends that you rinse and air dry these filters monthly.

star Remember to replace the filters in the correct order.

Step 5



- A dust filter is located within the dust cup. To access it, open the dust cup by pressing the orange tab on the front and pulling up on the handle.

Step 6



- Find the cylindrical screen in the center of the dust cap, grab the top, and pull it straight out.

(i) If this filter is dirty, shake it or rinse it off to clean it.

To reassemble your device, follow these instructions in reverse order.