



# Shark Rotator Lift-Away Speed Filter Replacement

How to replace your Shark Rotator Lift-Away Speed vacuum filter.

Written By: Julia Sullivan



## INTRODUCTION

Steps 1-3 provide instructions on how to remove the post-motor (HEPA) filter. Step 4 provides instructions on how to remove the pre-motor foam & felt filters. Shark recommends you hand rinse the post-motor (HEPA) filter once a year. The manufacturer also recommends you hand wash the pre-motor filters with soap once every three months.

## Step 1 — Filter



**⚠** Make sure the vacuum is turned off and unplugged before proceeding.

- Lay the vacuum pod flat with the bottom facing towards you.
- Pull the silver release latch and lift away from the body of the vacuum from the bottom.

## Step 2



- Lift the front cover off the face of the vacuum body.
- Pull out the filter.

**i** This filter should be replaced or washed once a year.

## Step 3



- Rest the vacuum pod upright.
- Press down on the buttons on either side of the handle labeled "dust cup release."
- Lift the dust cup away from the body of the vacuum to uncover the foam filter.

*(i)* In most Shark manuals, the vacuum pod is referred to as the "Lift-Away Pod."

## Step 4



- Lift the foam filter and filter frame out of the center of the vacuum to unveil the felt filter.
- Remove the felt filter by lifting the pull-tab.

*(i)* These filters should be replaced or washed every three months.

**⚠** Do not use the vacuum without the dust cup and filters in place.

To reassemble your device, follow these instructions in reverse order.