



# Shark Rotator Powered Lift-Away Filter Replacement

This guide will help you remove your filter for replacement or cleaning.

Written By: Cameron Ngai



## INTRODUCTION

Not replacing your vacuum's filters can lead to loss of suction. Use this guide to examine and/or replace your vacuum's filters for cleanliness or damages.

### TOOLS:

- Fingers (1)

## Step 1 — Filter



- Pull up on latch to release the canister.

## Step 2



- Remove the canister to reveal the filter.

## Step 3



- Remove first filter.

## Step 4



- Use the tag to pull out the second filter.

To reassemble your device, follow these instructions in reverse order.