


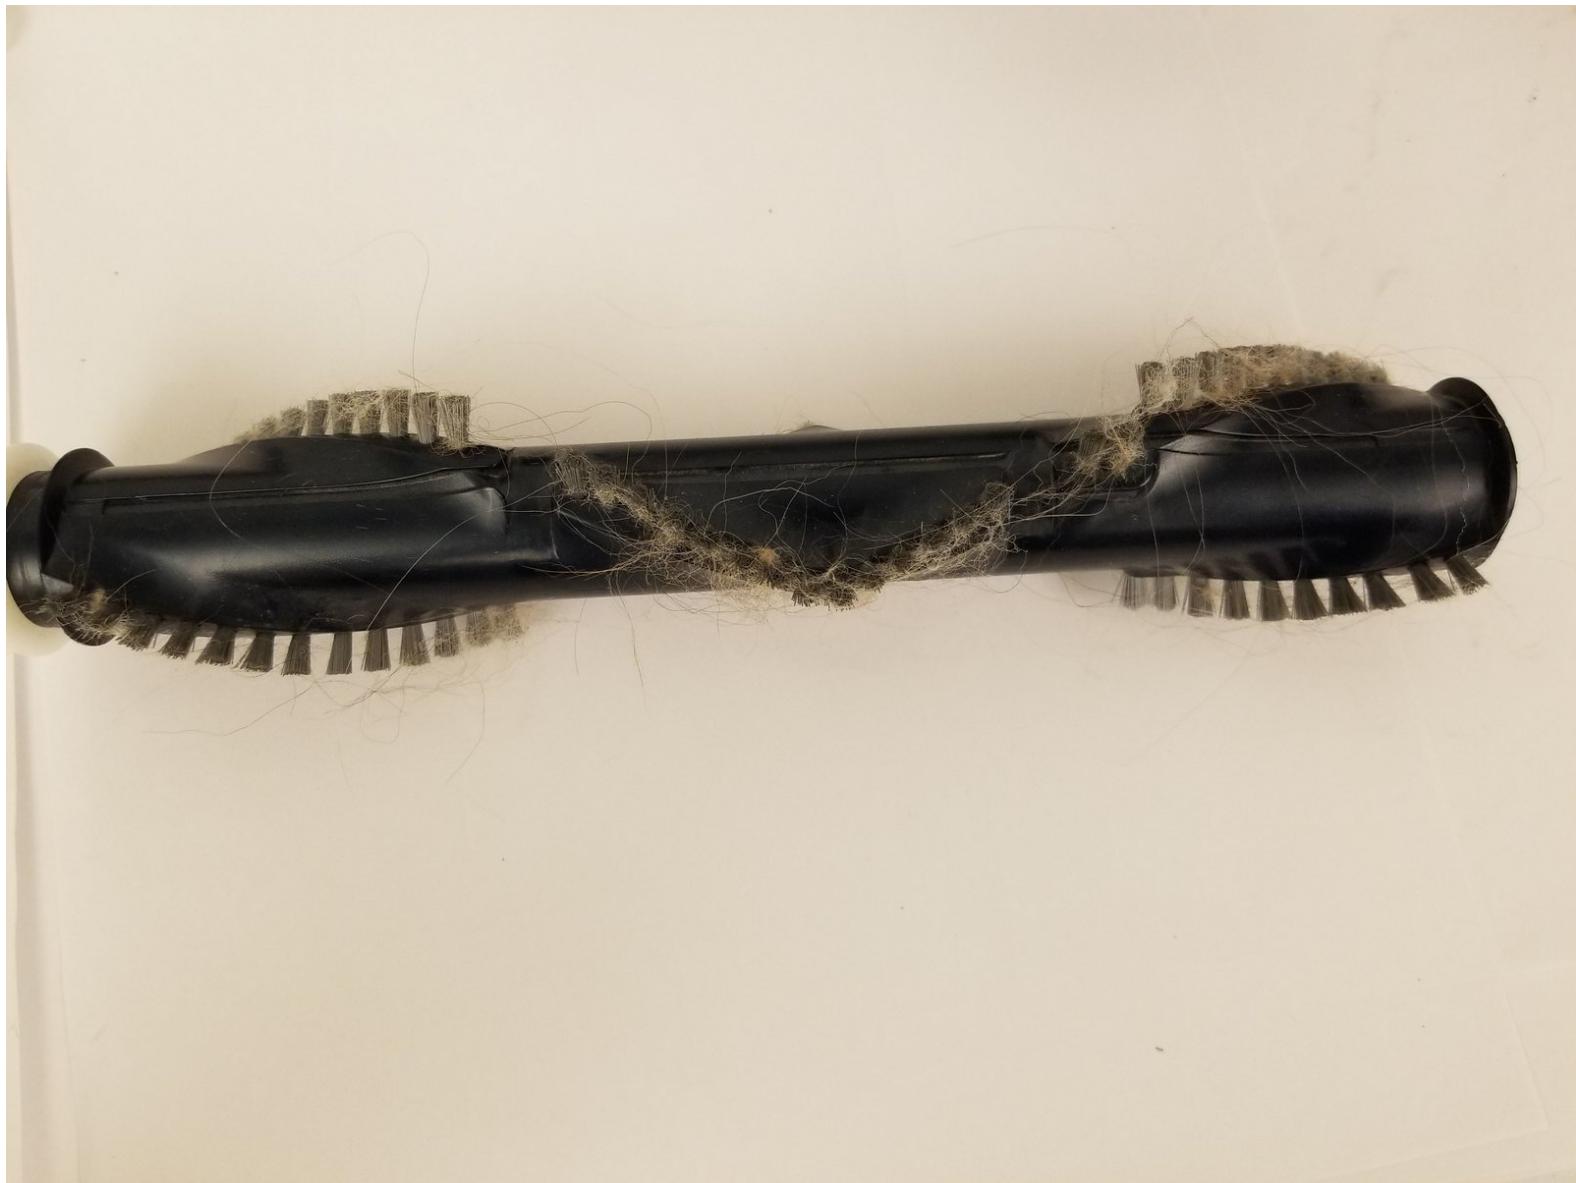

Shark Rotator Powered Lift-Away Roller Brush Replacement

This guide will help you replace the brush of your Shark Rotator Powered Lift-Away vacuum.

Written By: Cameron Ngai



INTRODUCTION

When the Shark Rotator Powered Lift-Away is difficult to maneuver or fails to pick up dirt, inspect the roller brush for clogs or damage. Excessive obstructions will cause the vacuum to not operate as intended.

TOOLS:

- 64 Bit Driver Kit (1)

you will need the Phillips, Flathead, and Torx drivers for the disassembly.

Step 1 — Shark Rotator Powered Lift-Away Head Nozzle Disassembly



- Push lift away button and pull the handle up to separate the body from the wand section.

Step 2



- Push lift away button on the wand then lift up on the top section to separate.

Step 3




- Tilt the wand shaft backwards for convenient.

Step 4




- Lay the head nozzle piece upside down.
- Locate and rotate the three gray tabs to the unlock position.

Step 5

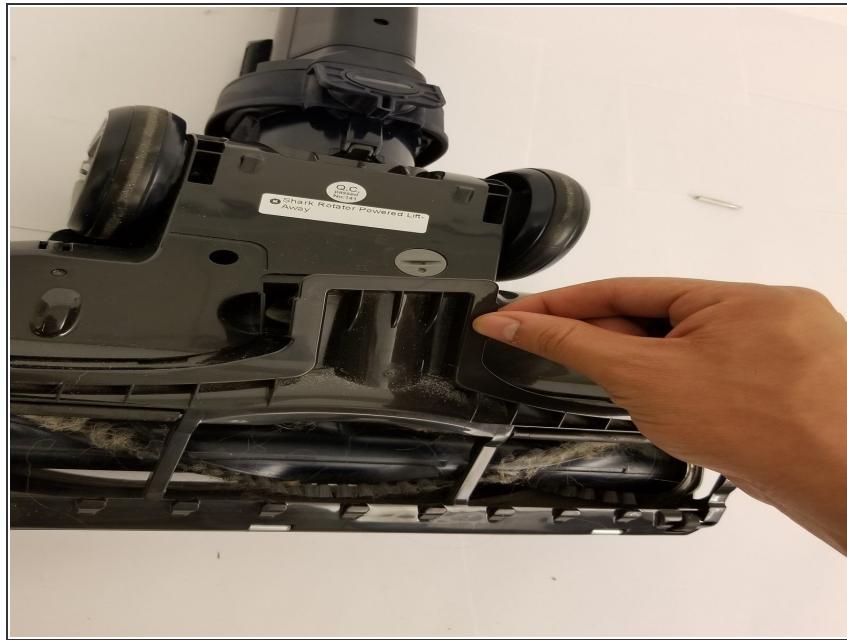

- With your fingers, pry and pull the brush cage open.

Step 6

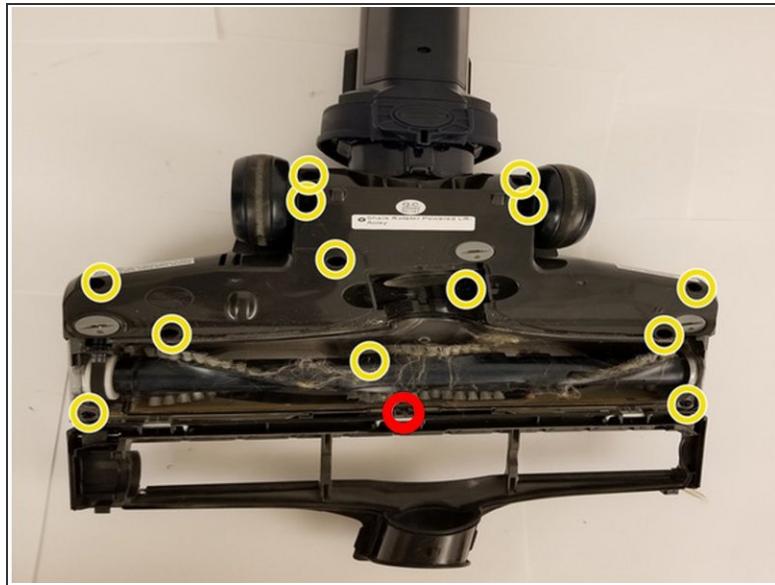


- Remove the 13 screws (circled in yellow) using a phillips screwdriver.

⚠ Be sure to keep track of which screws go into which hole.

- Remove the one screw (circled in red) that has a Torx head.


⚠ The Torx screw is hidden under a rubber gasket. Carefully, lift up the gasket without damaging it to access this screw.

Step 7

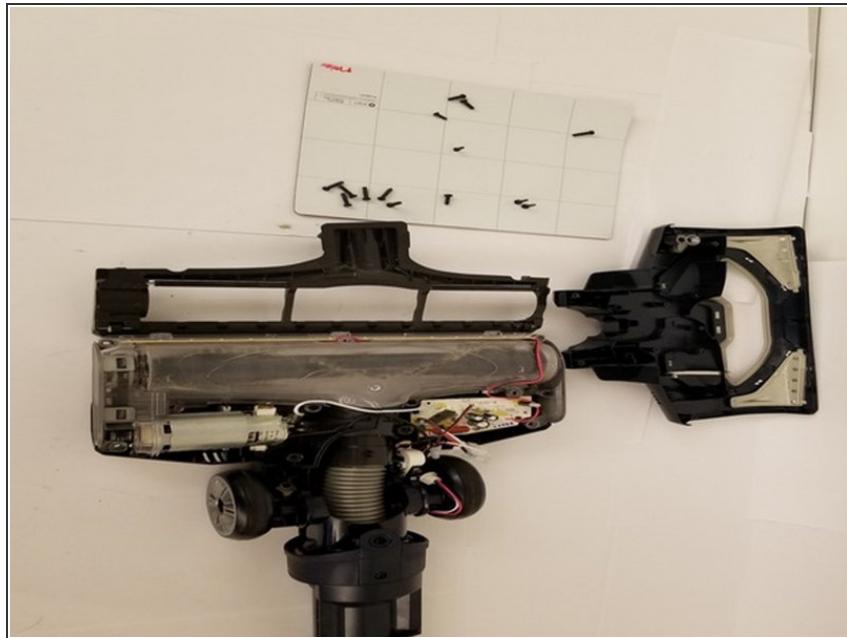


- Lift up the top cover now that all of the screws have been removed.

Step 8 — Roller Brush

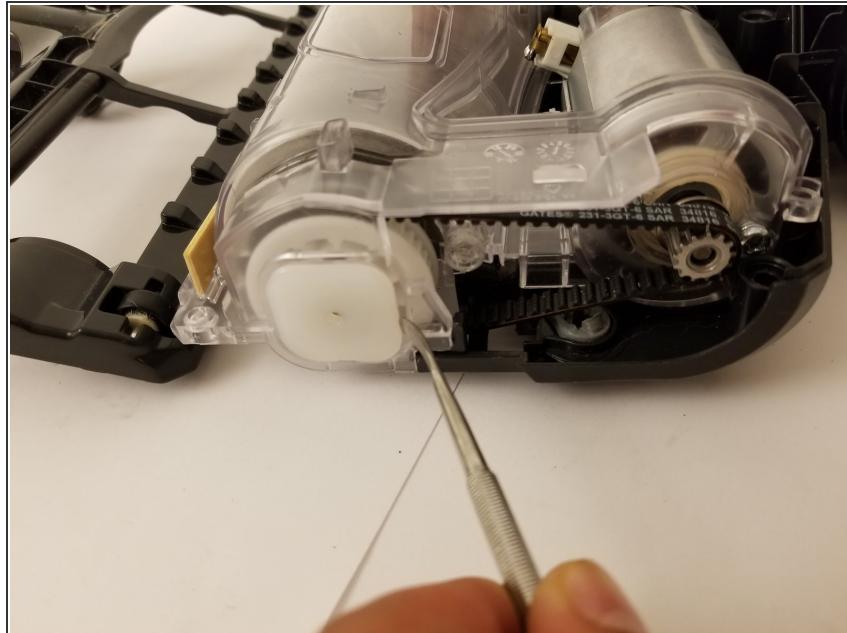


- Remove white cap with a Flathead screwdriver or any other wedge-like tool.

Step 9

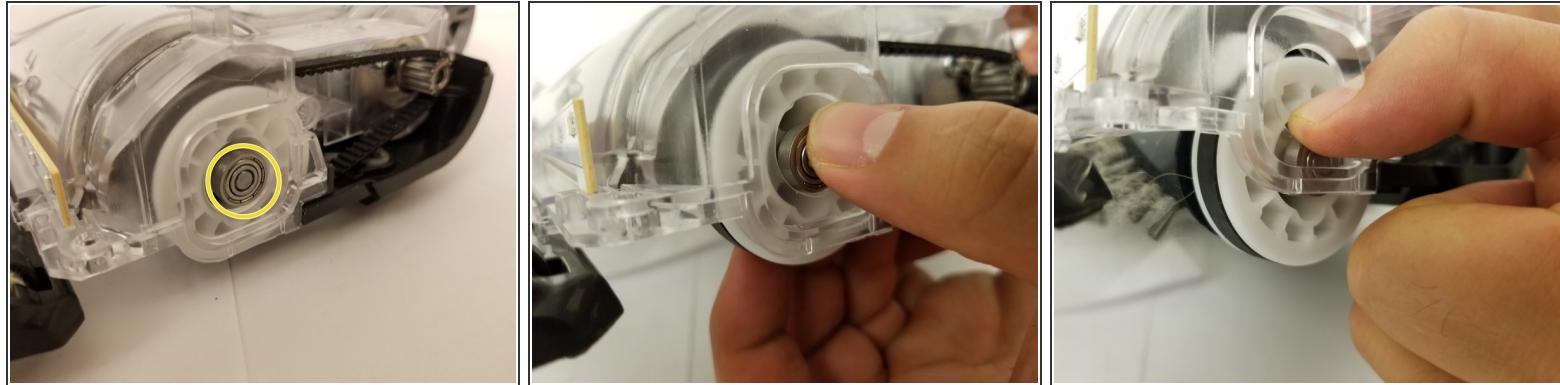

- Gently push piece in.
- Pull piece down and out of the container.

Step 10

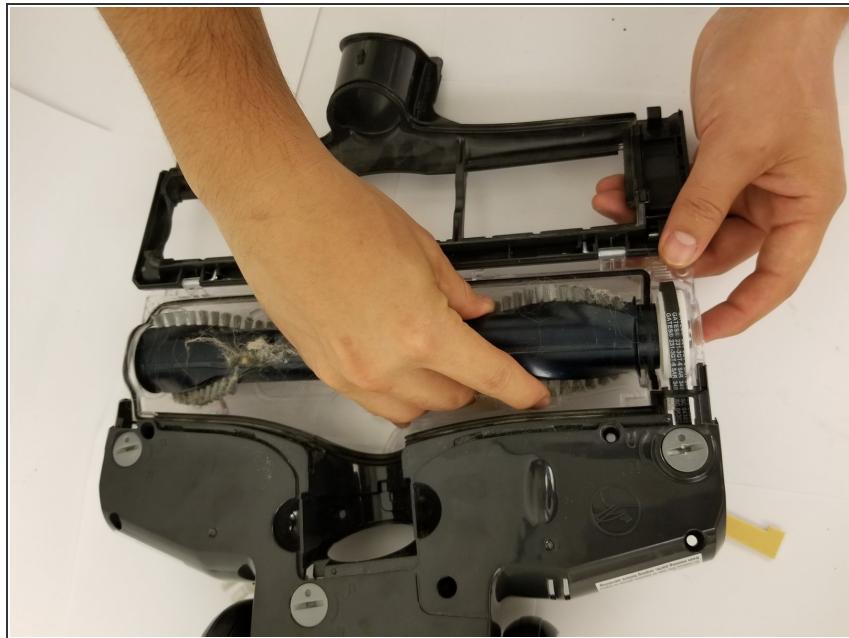

- Turn vacuum head over to remove brush.

To reassemble your device, follow these instructions in reverse order.