



Shark Rotator Slim-Light Lift-Away Upright Dust Cup Replacement

How to replace the dust cup on the Shark Rotator Slim-Light Lift-Away Upright.

Written By: George Oraha



INTRODUCTION

When the dust cup is damaged, and leaking air and the contents inside, you may want to consider replacing it.

Step 1 — Dust Cup



- Lift up the red unlatch button located on the back end of the dust cup.

Step 2



- While pulling the red latch button, pull the dust cup away from the vacuum to remove it.

To reassemble your device, follow these instructions in reverse order.