



# Shark Rotator Slim-Light Lift-Away Upright Dust Cup Filter Replacement

How to replace the filter on the Shark Rotator Slim-Light Lift-Away Upright.

Written By: Joshua Morrison



## INTRODUCTION

When a dirty filter causes the vacuum suction to greatly decrease, you might want to think about replacing it.

## Step 1 — Dust Cup



- Lift up the red unlatch button located on the back end of the dust cup.

## Step 2



- While pulling the red latch button, pull the dust cup away from the vacuum to remove it.

## Step 3 — Dust Cup Filter



- Lift the filter upwards.
- To clean the filter, rinse the filter with water and allow it to dry before placing it back into the vacuum.

To reassemble your device, follow these instructions in reverse order.