



Shark Ultimate Professional Heat Plate Replacement

This guide will aid in the replacement of the mode display plate of the Shark Ultimate Professional clothes iron.

Written By: Drew Carff



This document was generated on 2019-09-22 06:04:30 AM (MST).

 **TOOLS:**

- Phillips #0 Screwdriver (1)


Step 1 — Heat Plate



- Remove the two screws at the back of the iron.
- Remove the back cover piece.


 Make sure iron is unplugged and cooled off.

Step 2

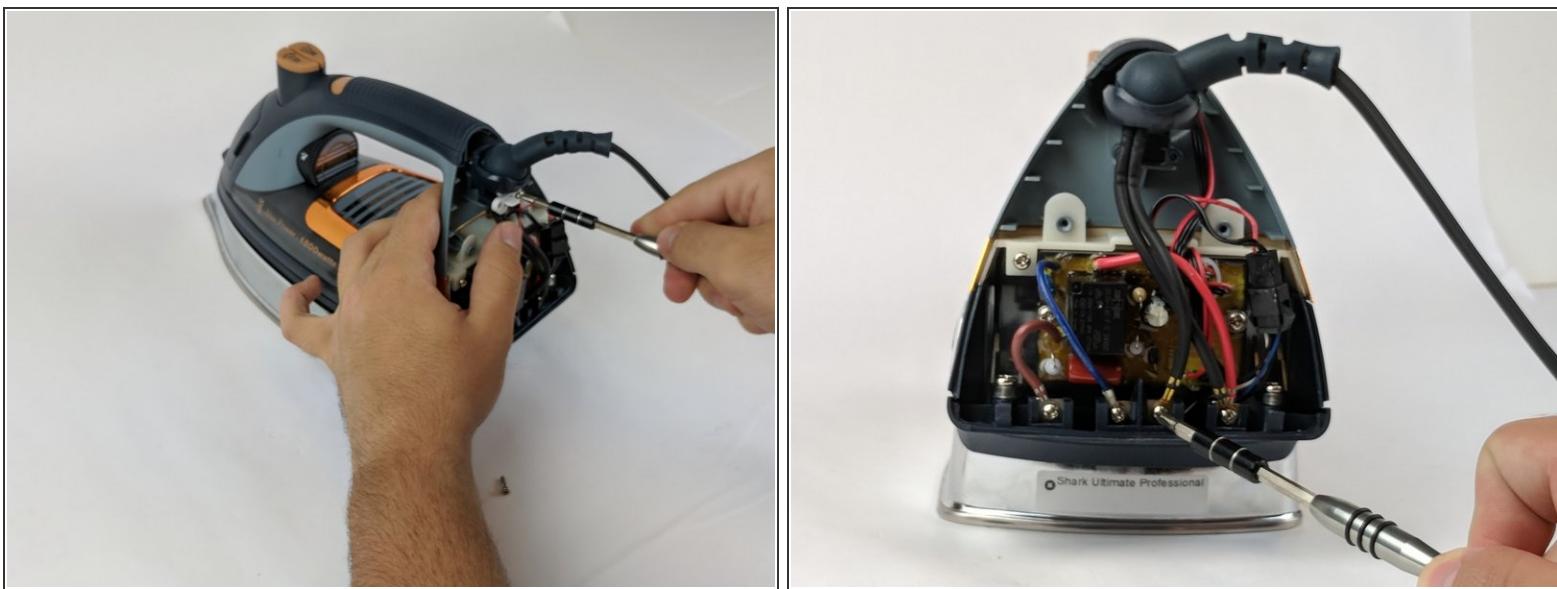




- Remove the two screws holding the white clamp to the iron.
 - Remove the two screws holding the black wires to the body of the iron.
-  Removing the left black wire will also free the red wire, attached by the same screw.

Step 3

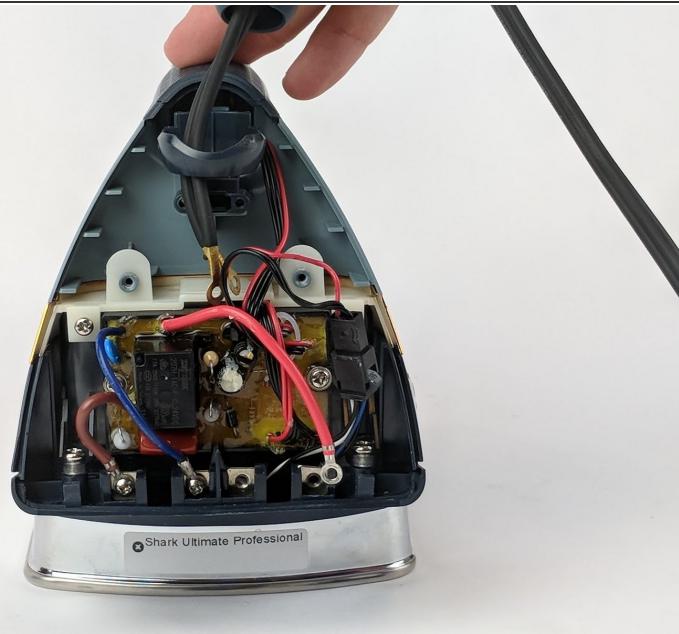


- Pull the split end of the power cord upward through the ball joint of the iron.
- Set aside power cord.

Step 4

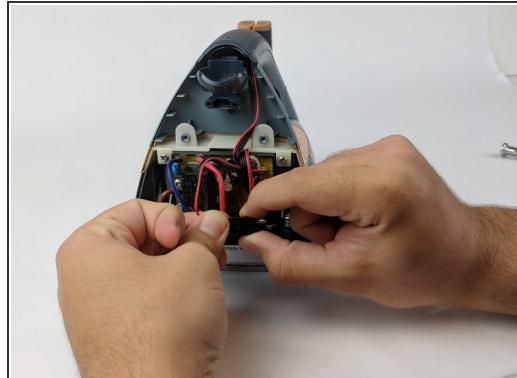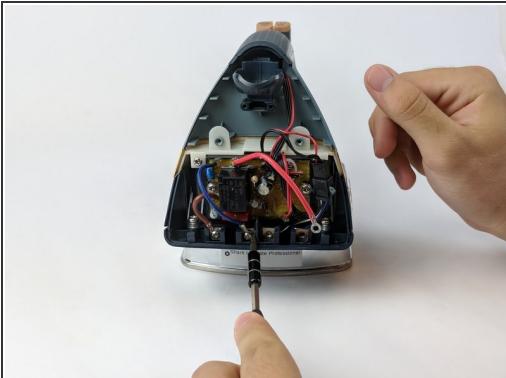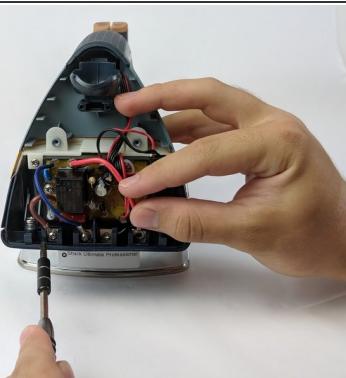

- Remove remaining screws that hold a wire on the bottom (brown and blue).
 - Unscrew from left to right.
 - Unclip the black adapter piece on the bottom right.
- (i)** Wires order (from left to right): Brown, Blue, Red, Black

Step 5

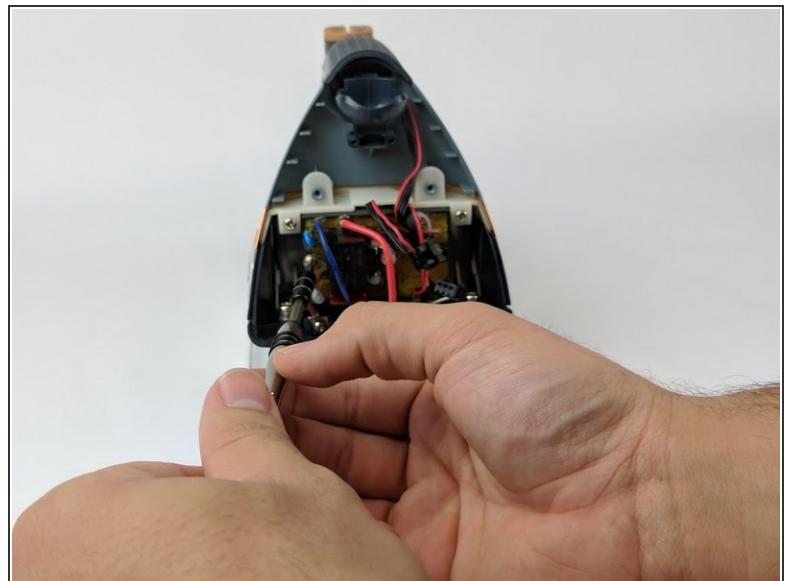

- Remove two screws (left and right) affixed to circuit board.

To reassemble your device, follow these instructions in reverse order.