



Shark Ultimate Professional Power Cord Replacement

This guide will aid in the replacement of the power cord part of the Shark Ultimate Professional clothes iron.

Written By: Drew Carff



INTRODUCTION

Before beginning this guide, ensure that the device is both unplugged and cool; failure to do so may result in electrocution or burns.

TOOLS:

- **Phillips #0 Screwdriver (1)**


Step 1 — Power Cord



- Use the Philips head #0 screwdriver to remove the two 11.49mm screws at the back of the iron.
- Remove the back cover piece.

! Make sure iron is unplugged and cooled off.


Step 2

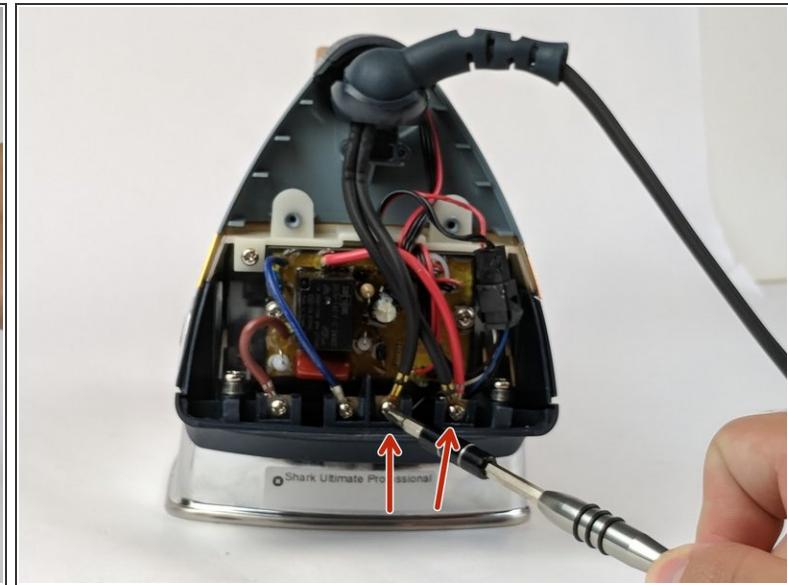

- Use the Philips head #0 screwdriver to remove the two 11.77mm screws holding the white clamp to the iron.
- Use the Philips head #0 screwdriver to remove the two 6.58mm screws holding the black wires to the body of the iron.

(i) Removing the left black wire will also free the red wire, attached by the same screw.

Step 3

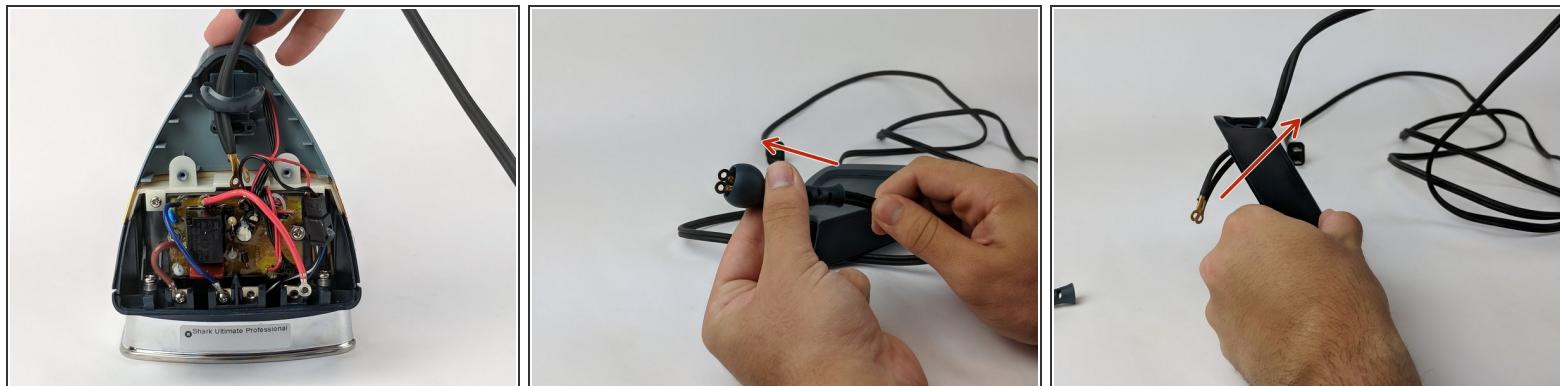

- Pull the split end of the power cord upward through the ball joint of the iron.
- Pull the rubber stopper through the split end of the wire.
- Pull the wire through the plastic cover.

To reassemble your device, follow these instructions in reverse order.