



Sharp Aquos LC13B2UA Back Case Replacement

How to replace the Sharp Aquos LC13B2UA back panel.

Written By: Robert Hobson



INTRODUCTION

This guide will show how to replace the back panel of your Sharp Aquos LC13B2UA LCD Television.

TOOLS:

- [Phillips #2 Screwdriver \(1\)](#)

Step 1 — Stand



- Place the TV face down on a flat smooth surface as to not scratch the screen.
- Using a Phillips #2 screwdriver remove the four 8mm screws attaching the stand to the TV.

Step 2




- Lift the stand off the television.

Step 3 — Back Case



- Remove the two back panels by prying them out with your hands.

Step 4

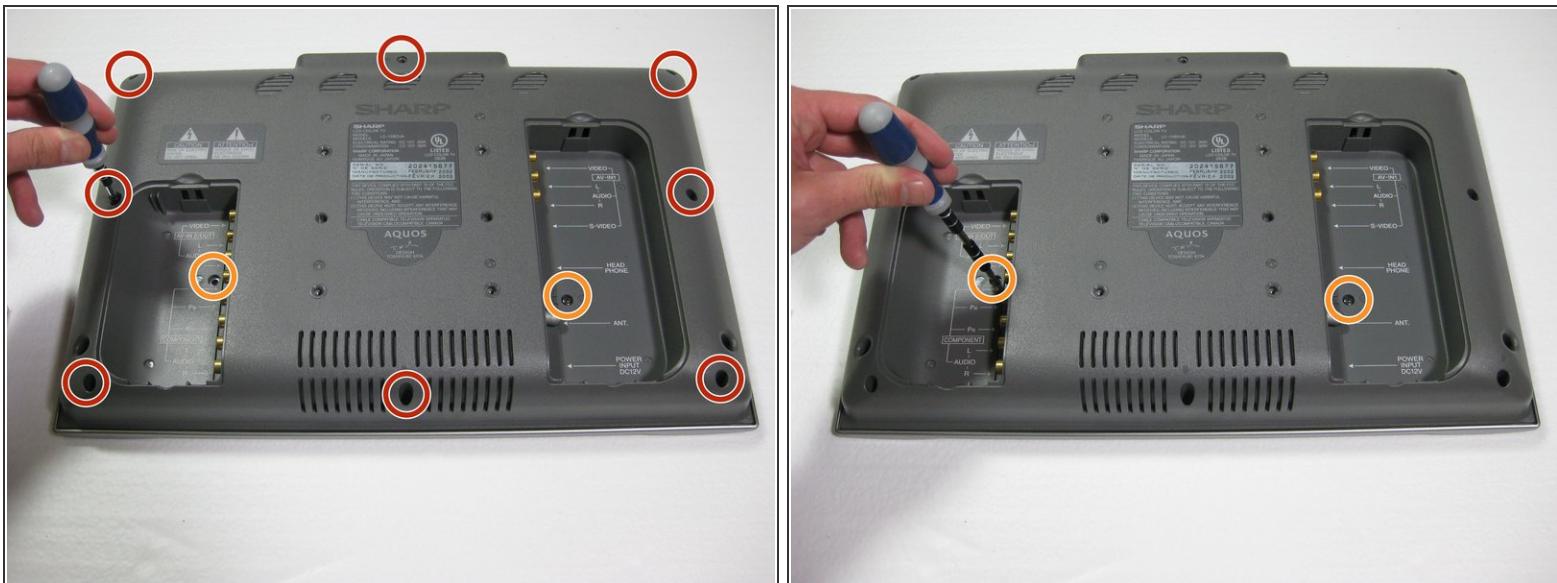

- Using a Phillips #2 screwdriver, remove the eight 6mm Phillips screws located around the edge.
- Using a Phillips #2 screwdriver, remove the two 6mm Phillips screws located near the inputs.

Step 5



- Using your hands, gently lift and remove the back case of the television.

To reassemble your device, follow these instructions in reverse order.