



# Sharp Aquos LC13B2UA Speakers Replacement

How to replace Sharp Aquos LC13B2UA speakers.

Written By: Robert Hobson



## INTRODUCTION

This guide will help you disassemble your Sharp Aquos LC13B2UA and replace the speakers. If your speakers are no longer working, then this guide can show you how to replace them.

### TOOLS:

- Phillips #2 Screwdriver (1)

## Step 1 — Stand



- Place the TV face down on a flat smooth surface as to not scratch the screen.
- Using a Phillips #2 screwdriver remove the four 8mm screws attaching the stand to the TV.

## Step 2




- Lift the stand off the television.

## Step 3 — Back Case



- Remove the two back panels by prying them out with your hands.

## Step 4

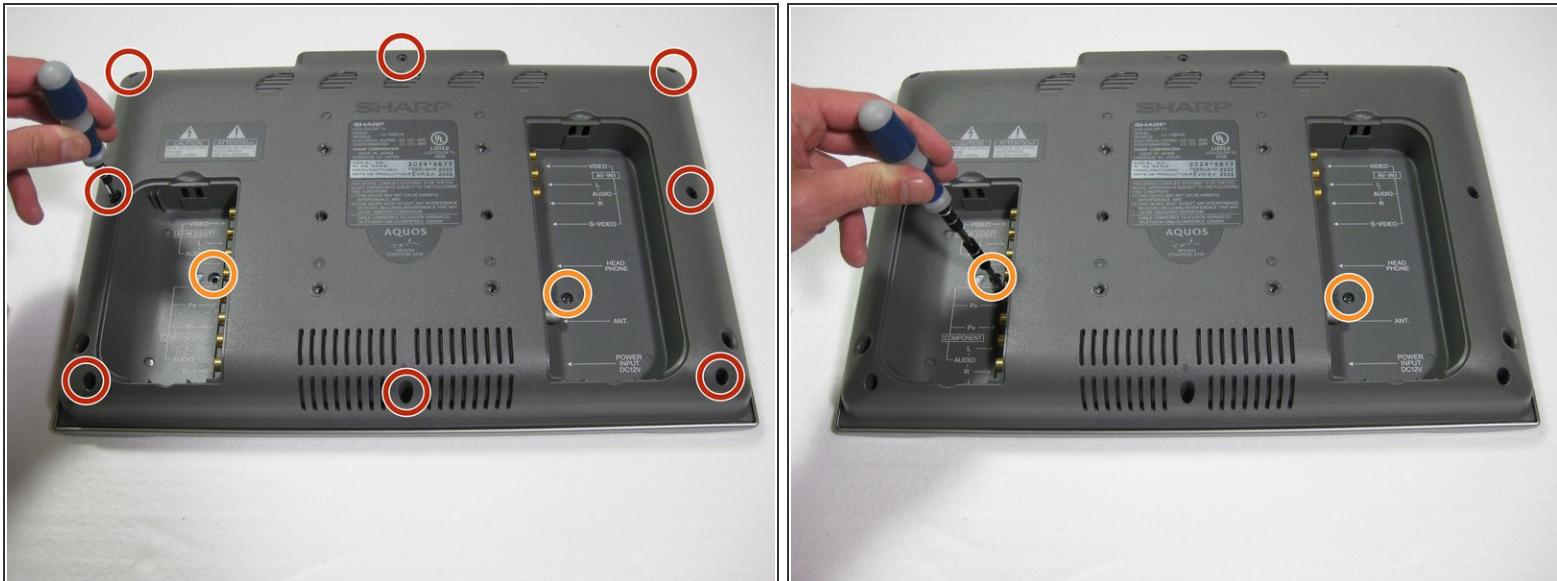



- Using a Phillips #2 screwdriver, remove the eight 6mm Phillips screws located around the edge.
- Using a Phillips #2 screwdriver, remove the two 6mm Phillips screws located near the inputs.

## Step 5



- Using your hands, gently lift and remove the back case of the television.



## Step 6 — Speakers

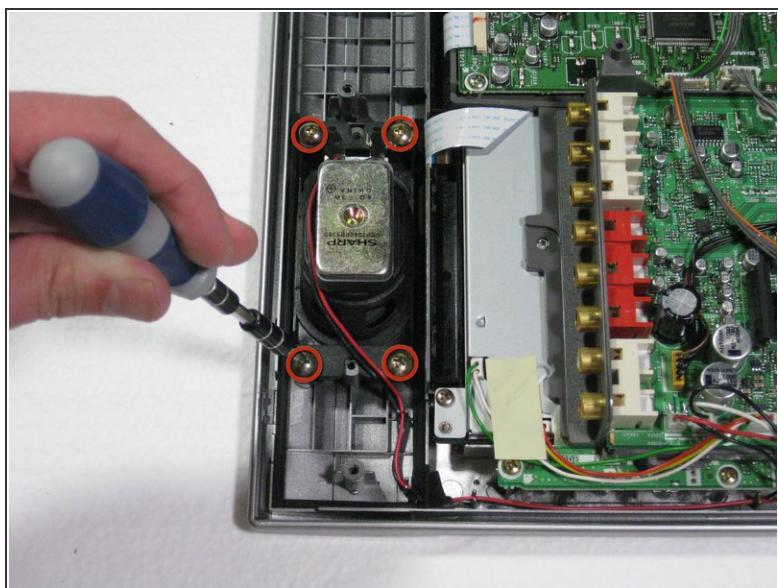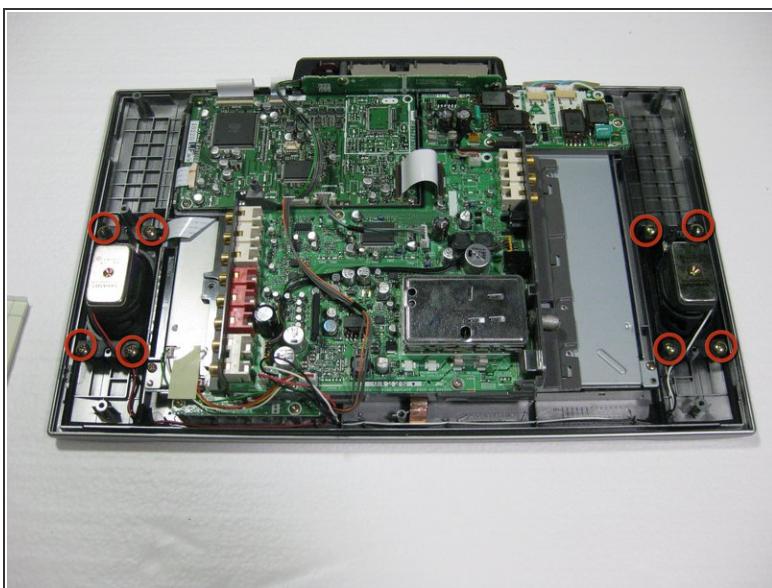

- Remove the eight 9mm screws from both speakers.

**⚠** Do not remove the speakers yet—they are still attached.

## Step 7

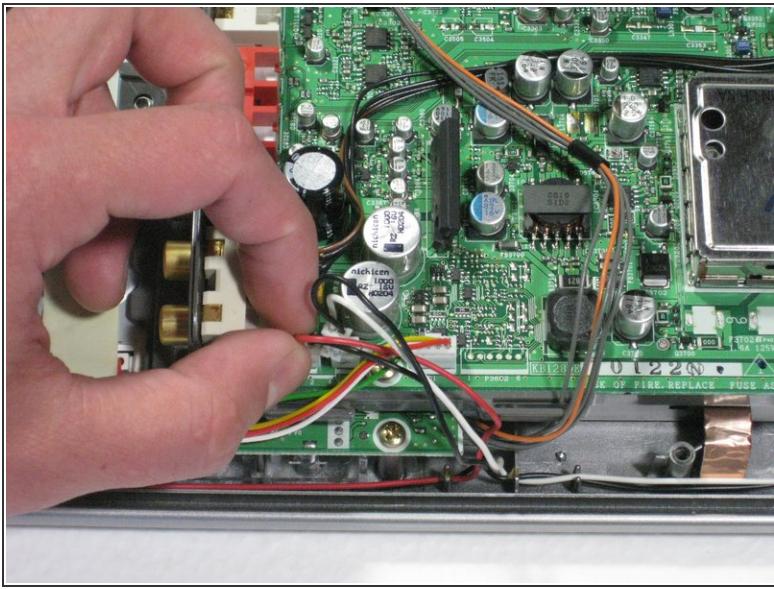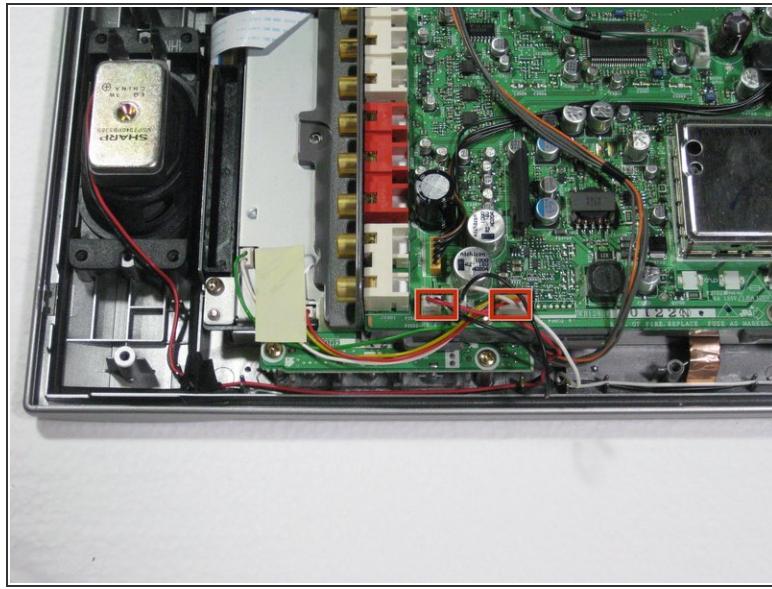


- Remove the two speaker cables from the circuit board by pinching the plastic connectors and firmly pulling up.

! Pull on the plastic part of the connector, even though it may seem easiest to pull on the wires.

! Do not remove the speakers yet—they are still attached.

## Step 8

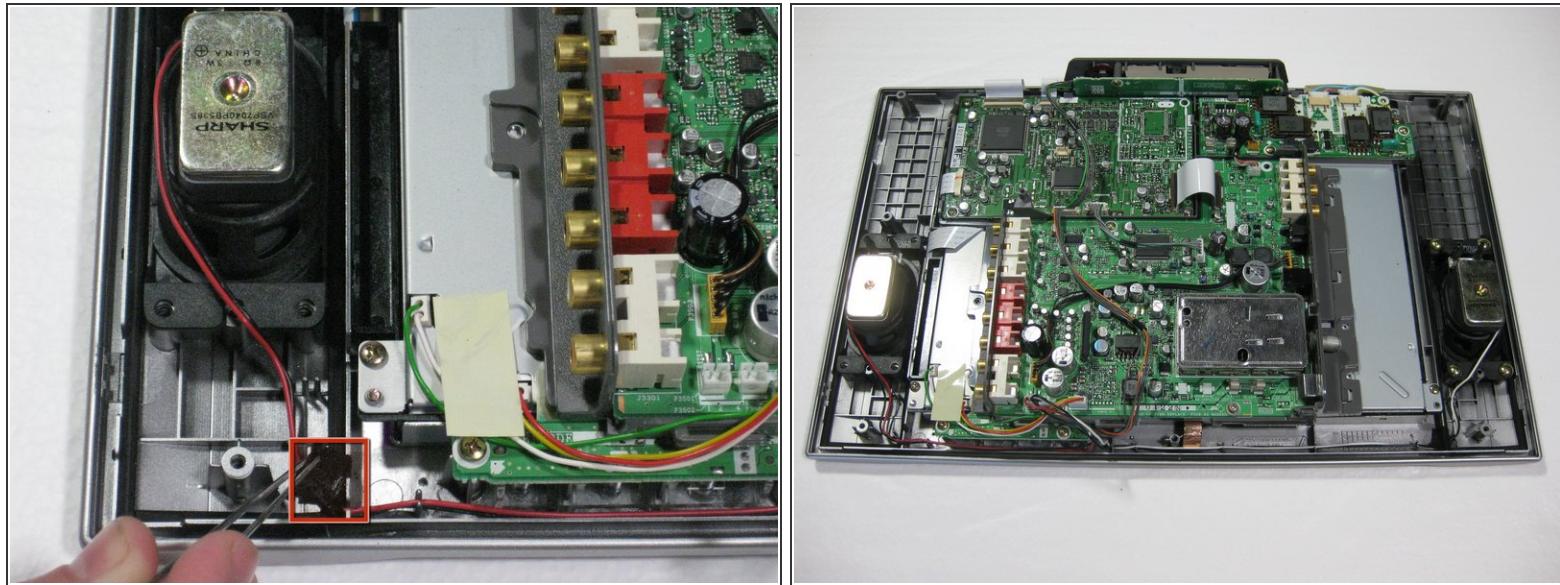

- Remove the two black tape strips (one on each side) securing the power cable to the frame.
- The speakers can now be removed.

To reassemble your device, follow these instructions in reverse order.