



Sharp Microwave Door Switch Replacement

Sharp Microwave Door Switch Replacement

Written By: Sanjay Don




INTRODUCTION

This guide will show you how to replace the door switch for the Sharp Microwave so that it will not turn on when the door is opened.

TOOLS:

- [T15 Torx Screwdriver](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [Phillips #2 Screwdriver](#) (1)

Step 1 — Door Switch

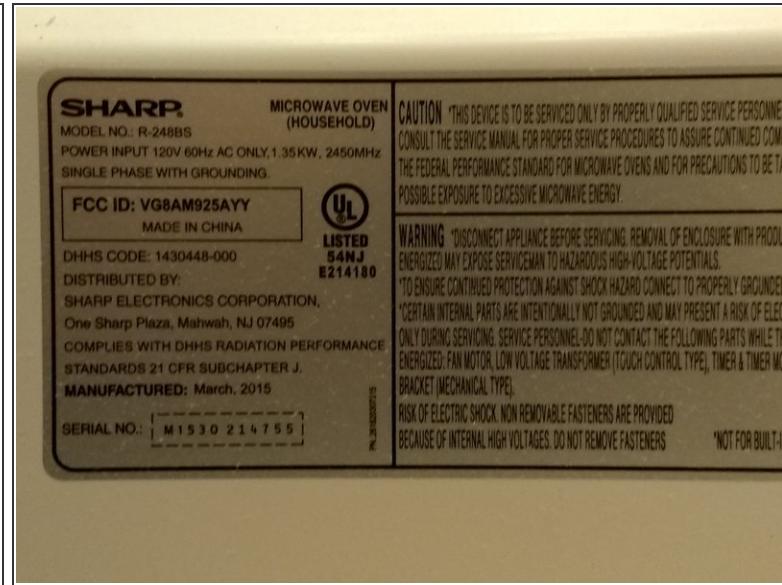

- Sharp microwave running with door open
- Problem with the hardware interlock switches triggered by the door latch
- Sharp model R-248BS

⚠ Unplug the microwave before you begin disassembly.

Step 2 — Remove screws





- Side screw
- ...and 4 screws in the back
- Star screws need T15X4 or equivalent. A flathead can be used in a pinch.
- Remove the screws

Step 3 — Remove the screws (5 in number))



- Remove the case, should slide out with a little bit of effort.due to notches in the frame on the front top left (when looking from the back).

Step 4 — Microwave with the cover open

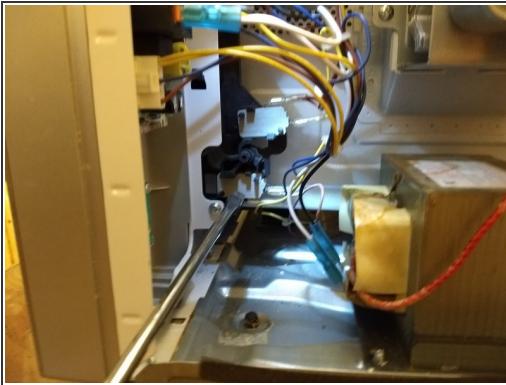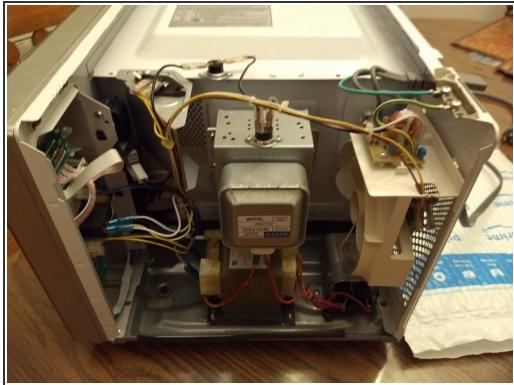

- Now we will identify the switches
- The lower two switches
- ... and the upper switch
- Upper switch faulty

Step 5 — Replacement of the switch



- Top switch appears loose
- Replace and reinstall
- Angled reinsertion to line up hole with plastic support

To reassemble your device, follow these instructions in reverse order.