



Sharper Image SBT5002 Back Panel Replacement

This guide shows how to remove the back panel. Removing the back panel will expose the speaker and the electronics.

Written By: Linda Freund



This document was generated on 2019-10-09 05:06:39 PM (MST).

INTRODUCTION

Removing the back panel is a prerequisite to any replacement or repair you need to do. When the back panel is removed the electronics and the speaker are visible and available to be removed or repaired.

TOOLS:

- Phillips #0 Screwdriver (1)


Step 1 — Back Panel



 Unplug the speaker before doing any work on it.

- Use a #0 Phillips screwdriver to remove the eight 13mm Phillips head screws from the back panel.

Step 2

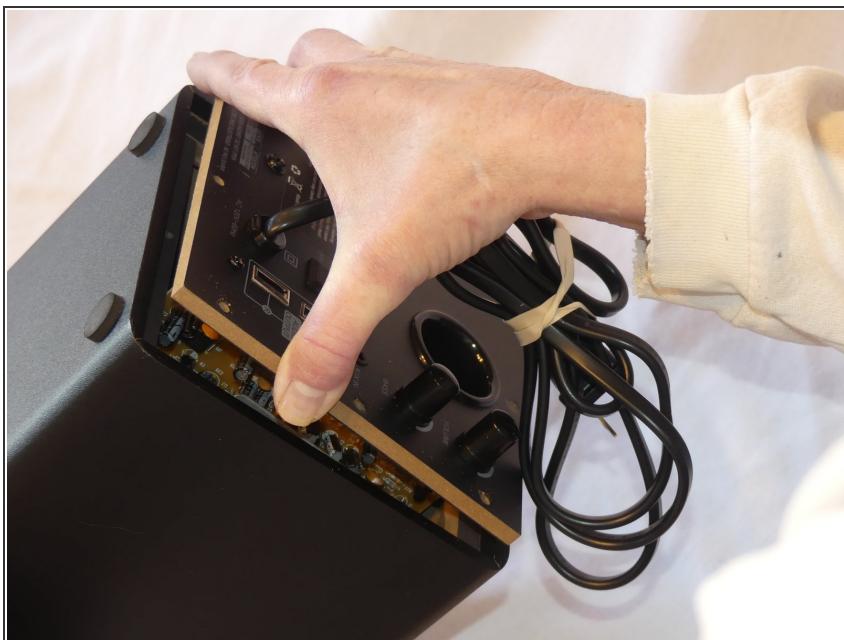

- Remove the back panel.

To reassemble your device, follow these instructions in reverse order.