



Sharper Image SVC430 Disassembly

Prerequisite Only

Written By: Kathryn Mattingly



INTRODUCTION

Prerequisite Only

TOOLS:

- [iFixit Opening Tools](#) (1)
- [64 Bit Driver Kit](#) (1)

Step 1 — Sharper Image SVC430 Disassembly



(i) Power off your device before you begin.

- Use your thumb to push down on the lever that says "open" while simultaneously pushing up the latch with your other thumb.

Step 2




- Once the latch is free, simply pull the front of the waterproof case off and slide the camera out.

Step 3



- Locate the bottom of the device.
- Now, using the metal screwdriver, unscrew the screw on the bottom of the device.

Step 4

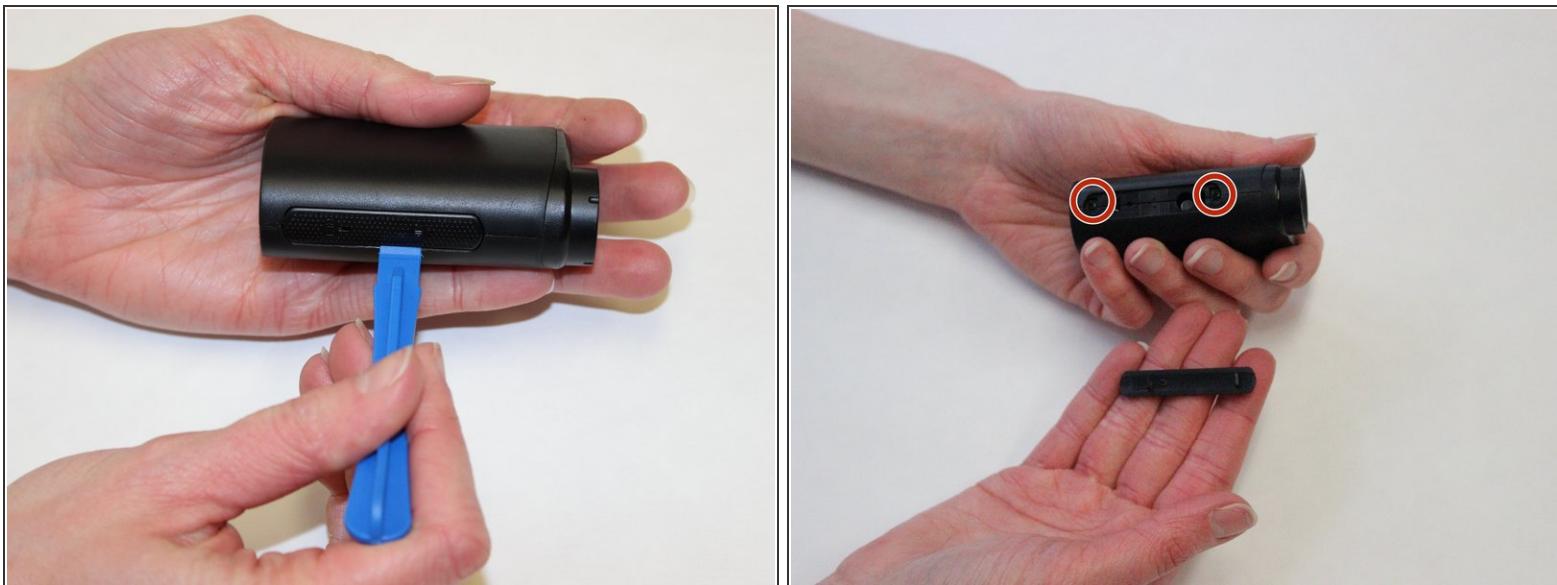

! This panel should come off easily, do not apply too much pressure.

- Use the plastic opening tool to pry open the plastic panel from the top of the camera.
- Locate the two screws on the top of the device.

Step 5



- Use the JIS J0 screwdriver to unscrew the two screws on the top of the device.

Step 6



- Use the plastic opening tool to pry off the back panel.


⚠ The back panel will come off easily.

Step 7



- Use the metal screwdriver to unscrew the screw from the back of the device.

Step 8

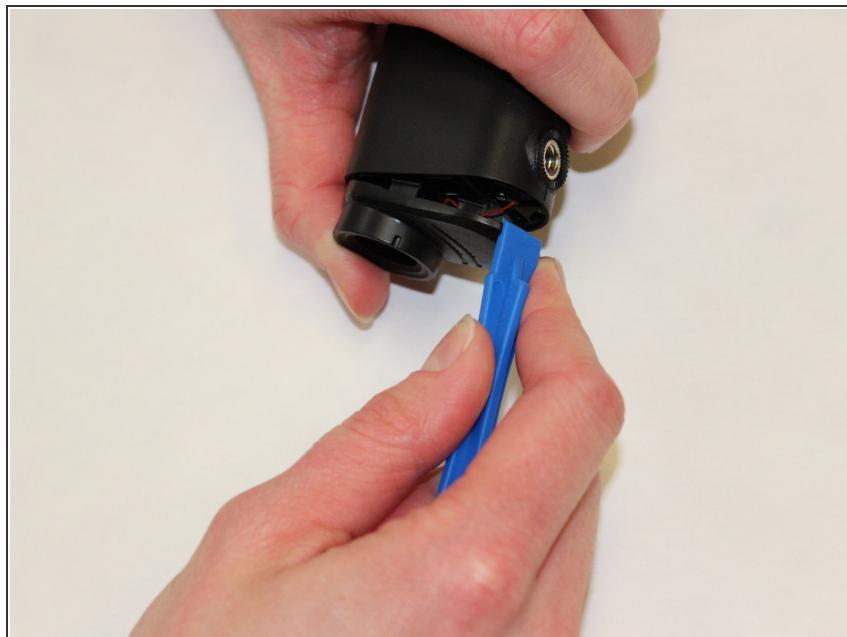


- Use the plastic opening tool to pry off the front panel of the device.

Step 9



- Using the screwdriver, unscrew the screw located underneath the front panel.

Step 10

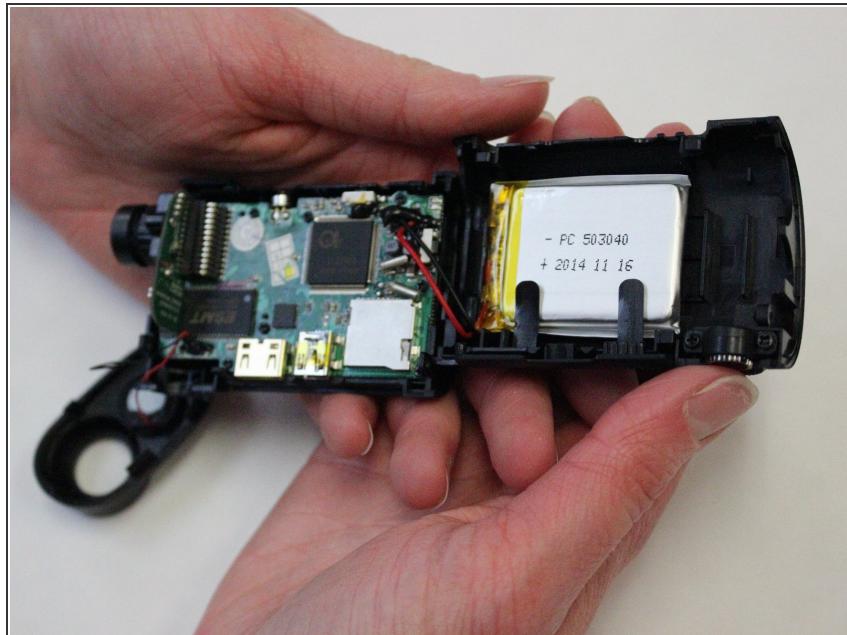

⚠ Be gentle with the device since there are wires attached to the front plate and two halves.

- Gently pull both sides of the device to expose the interior of the device.

To reassemble your device, follow these instructions in reverse order.