




Sharper Image SVC430 Mount Rubber Washer Replacement

In this guide, the user will learn how to replace the O ring that is inside each mount


Written By: Kathryn Mattingly

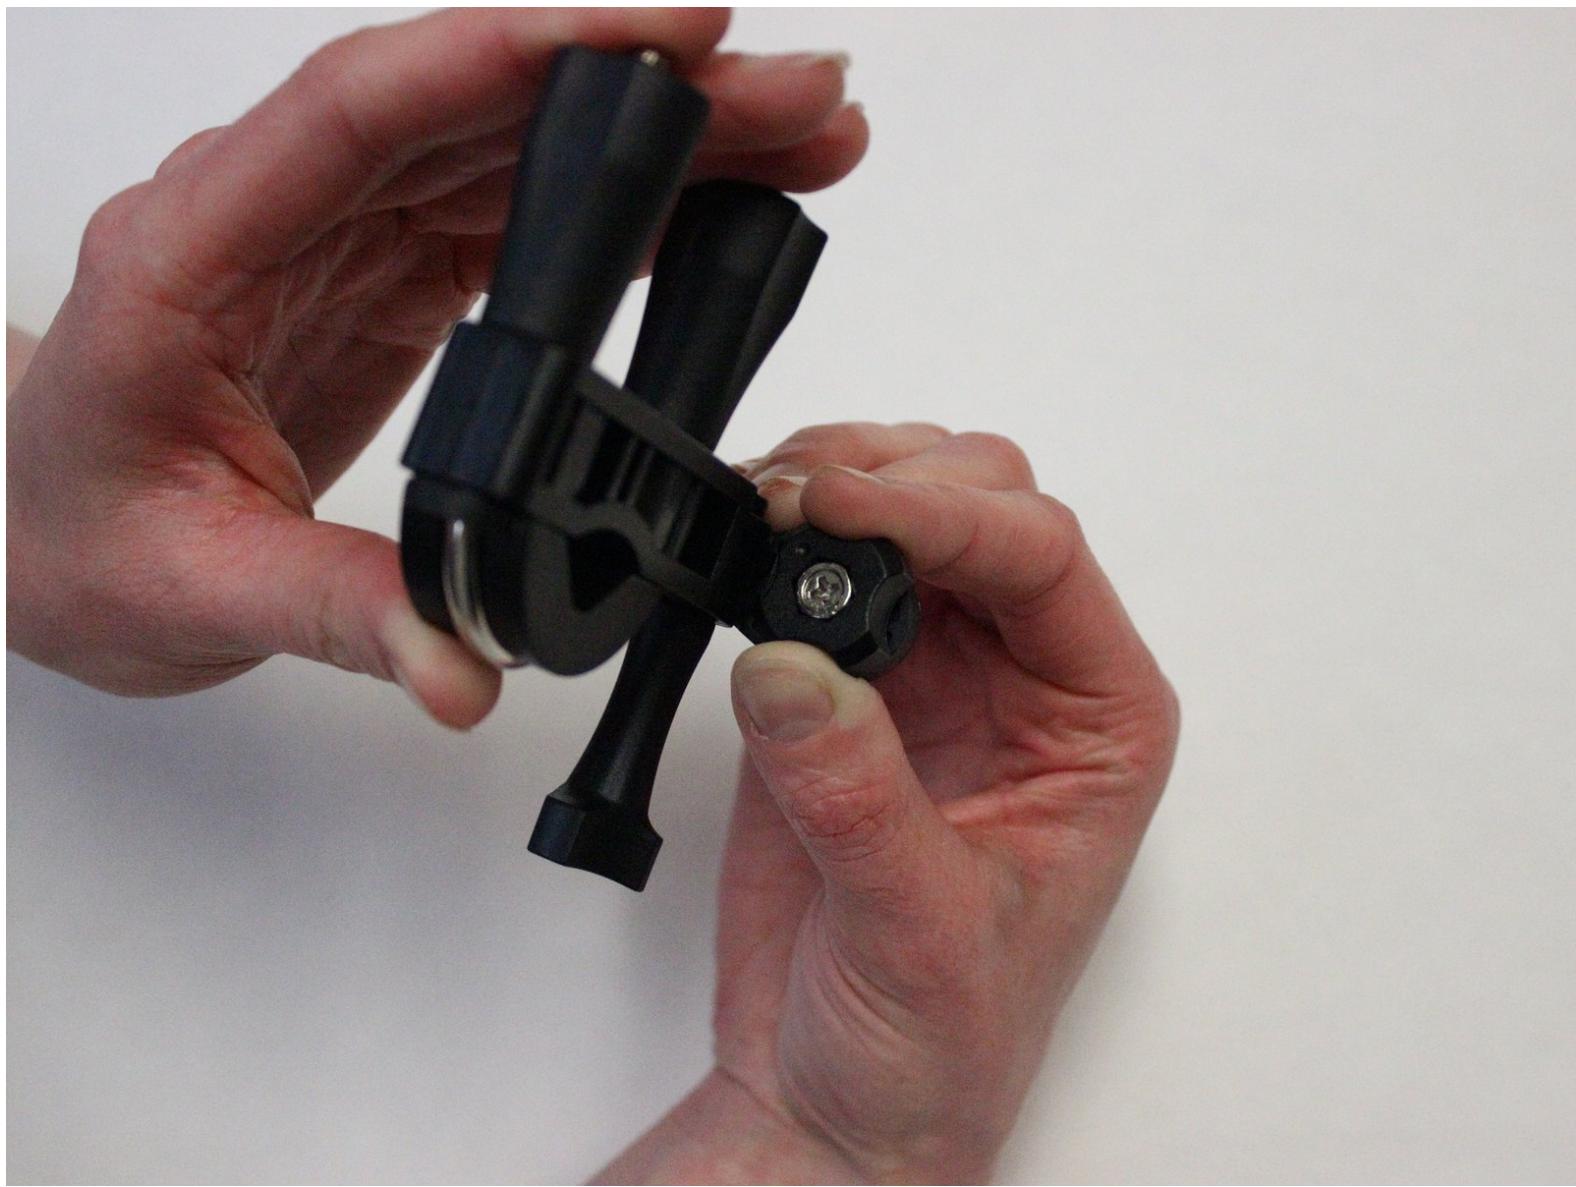

INTRODUCTION

The user will learn how to locate and remove the mount rubber washer.

Step 1 — Mount Rubber Washer

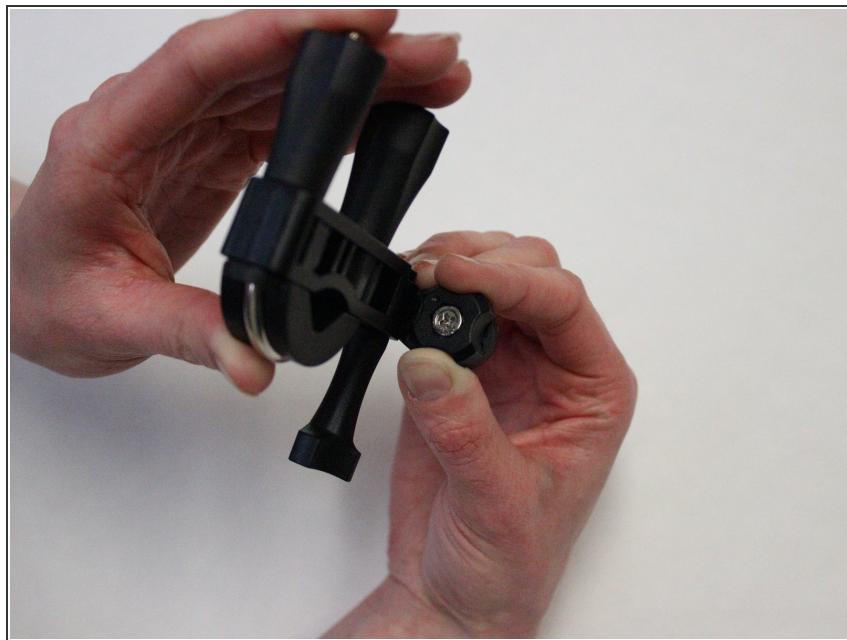


- Locate the knobs on either side of the mount screw.

Step 2



- Twist the knob so it comes off from the mount.

Step 3

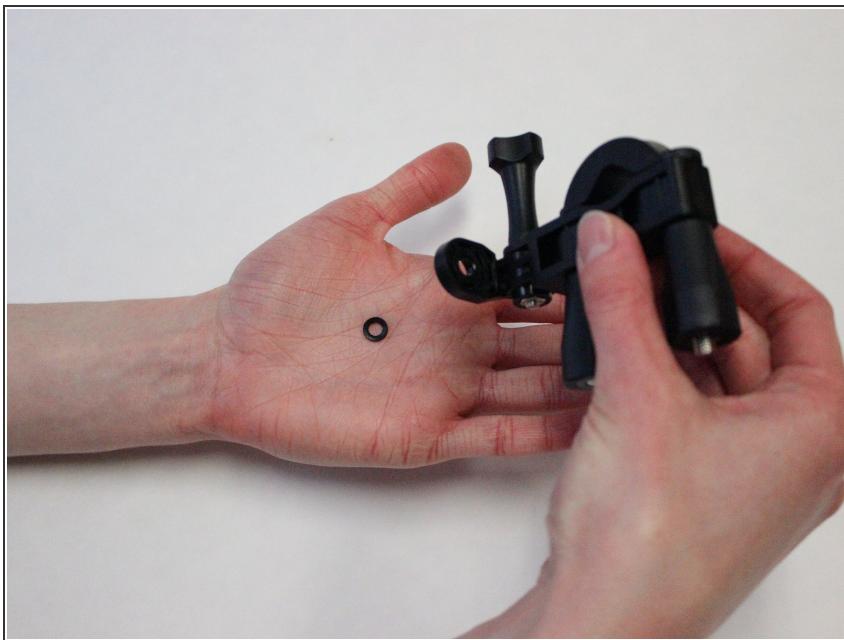

- Once you have twisted apart the knobs, the rubber washer should easily fall out of the base.

(i) This component is identical on the other mount, so this guide applies for both mounts.

To reassemble your device, follow these instructions in reverse order.