



Sidekick II Outer Casing Replacement

Written By: michael albaum



INTRODUCTION

Taking apart the outside casing.

TOOLS:

- T6 Torx Screwdriver (1)

Step 1 — Outer Casing



- Use the plastic opening tool to remove the 4 buttons on each corner of the Sidekick.
- Gently pry open button and remove button.
- Do this for each of the 3 buttons remaining.

Step 2



- The bumpers on the top and bottom of the phone can be removed by simply "peeling" them off.

Step 3




- Use the Phillips head screwdriver to remove the 4 screws that are underneath the 4 buttons you removed in step one.

Step 4



- Flip the screen up halfway (90 degrees), to reveal the 2 screws above the right side of the keyboard.
 - Use the Torx 6 screwdriver to remove these 2 screws.
- ⚠** Be careful in handling the phone after removing the screws, because the two main bodies of the phone are no longer attached.

Step 5

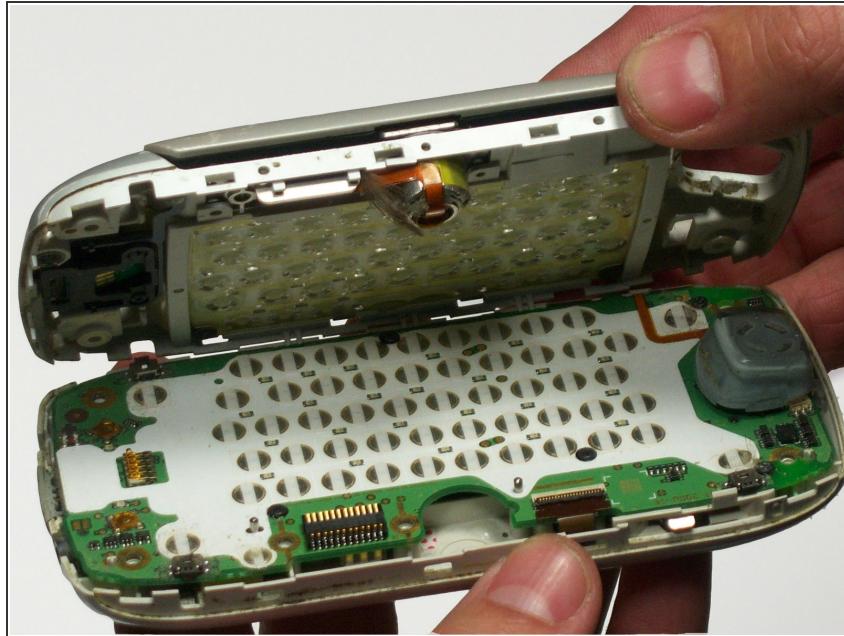

- After removing the 6 screws and both bumpers, the phone will be easy to separate into the two main bodies.
- You can use your hands to simply pull apart the top casing from the bottom casing.