



SiriusXM Onyx Casing Replacement

How to replace the front casing of the SiriusXM Onyx.

Written By: Christina Tao



INTRODUCTION

The casing of the device can sometimes crack. This guide will show you how to take apart the device and replace the casing.

TOOLS:


- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)

Step 1 — Casing




- Take the iFixit opening tool and place it between the back casing and the device as shown.

Step 2

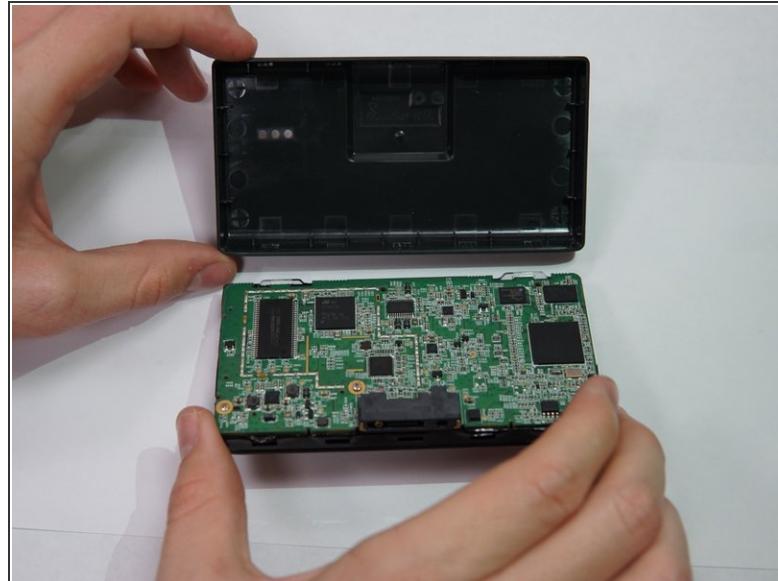


- Apply pressure to the iFixit opening tool, pushing down until the the plastic casing pops off.

Step 3

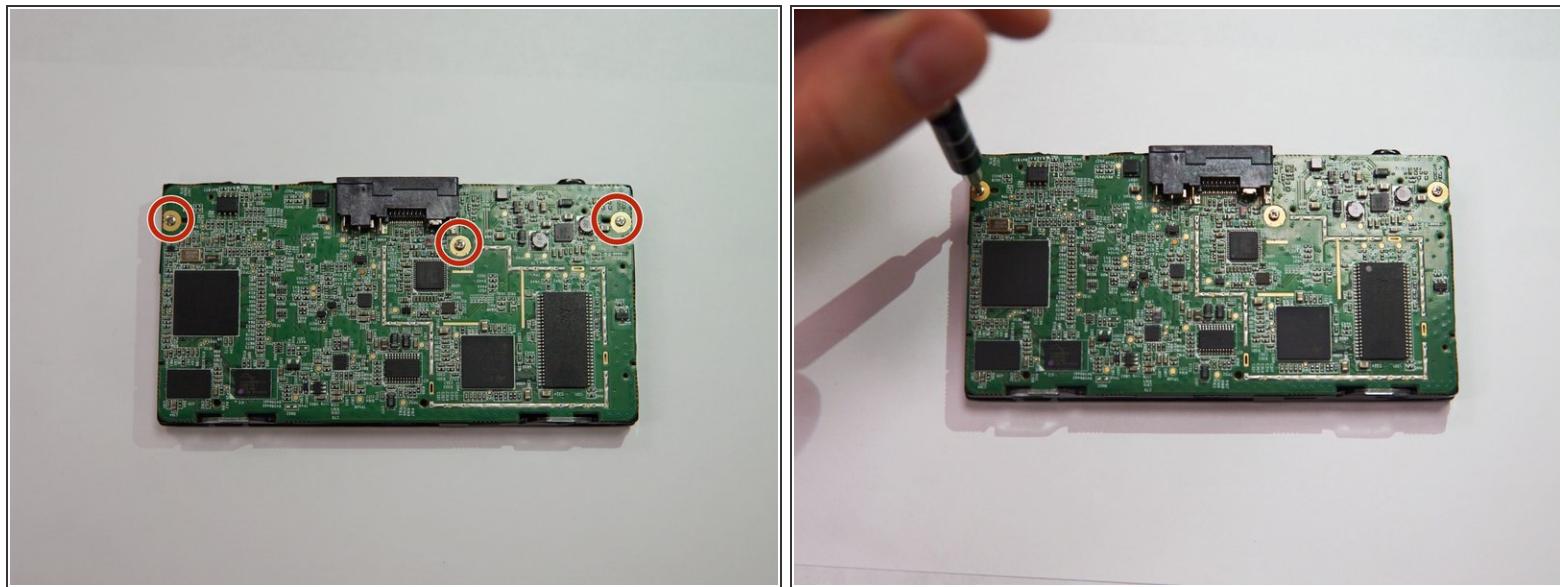



- Use the Phillips PH00 screwdriver to remove the three marked screws.

Step 4

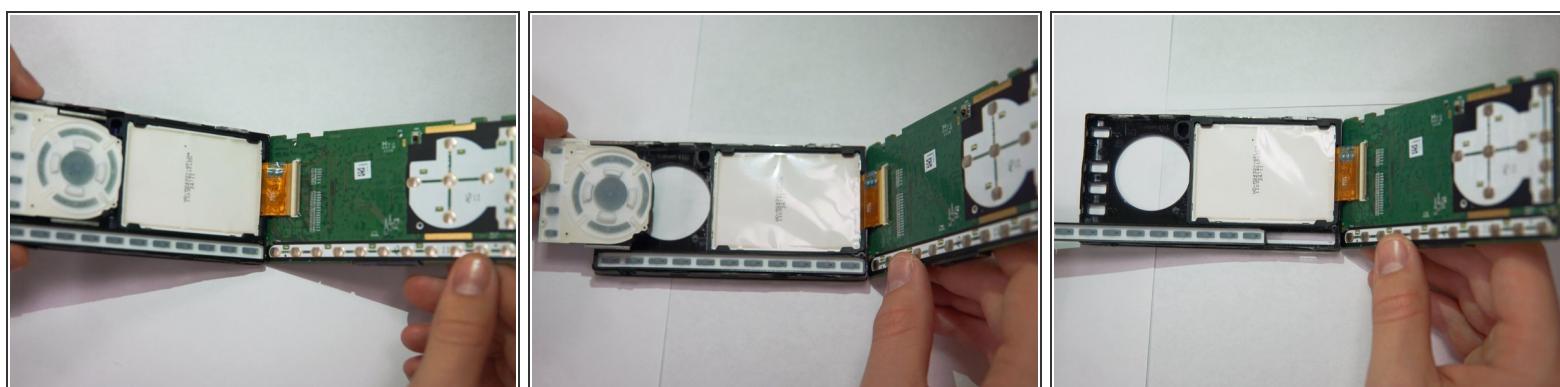

- Remove the buttons from the casing.

Step 5

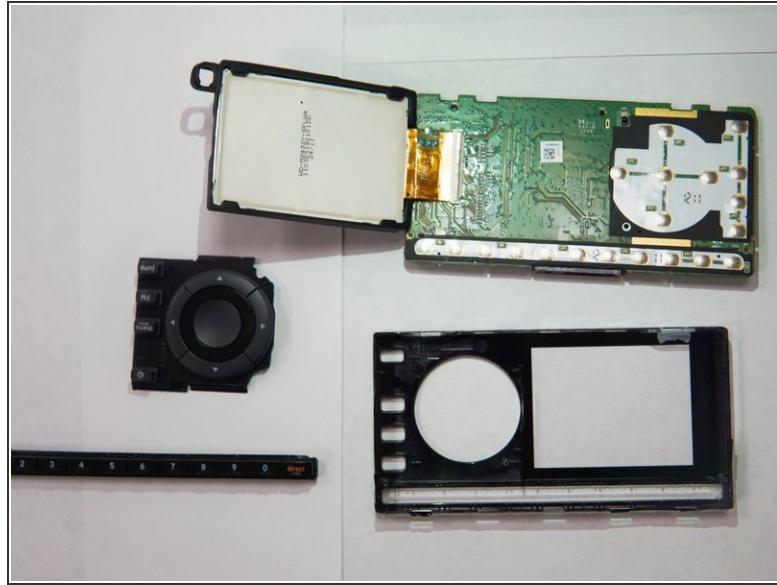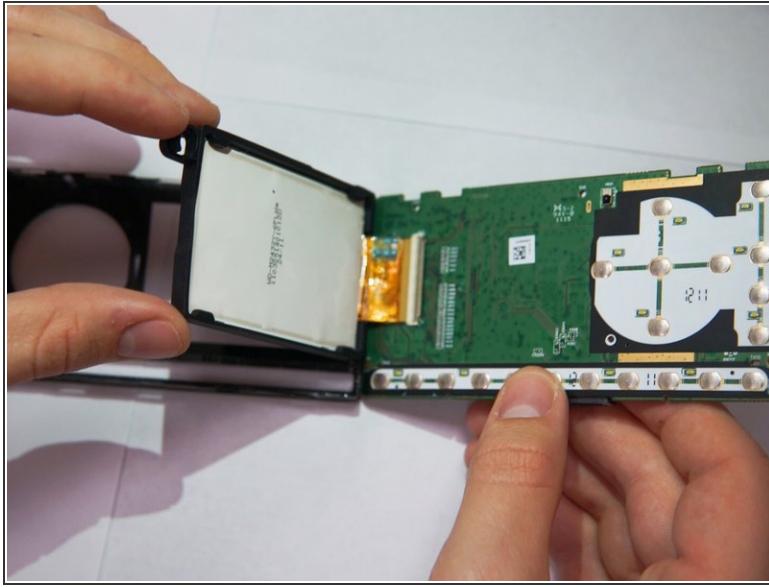

- Remove the motherboard, and the casing should be free.

To reassemble your device, follow these instructions in reverse order.