


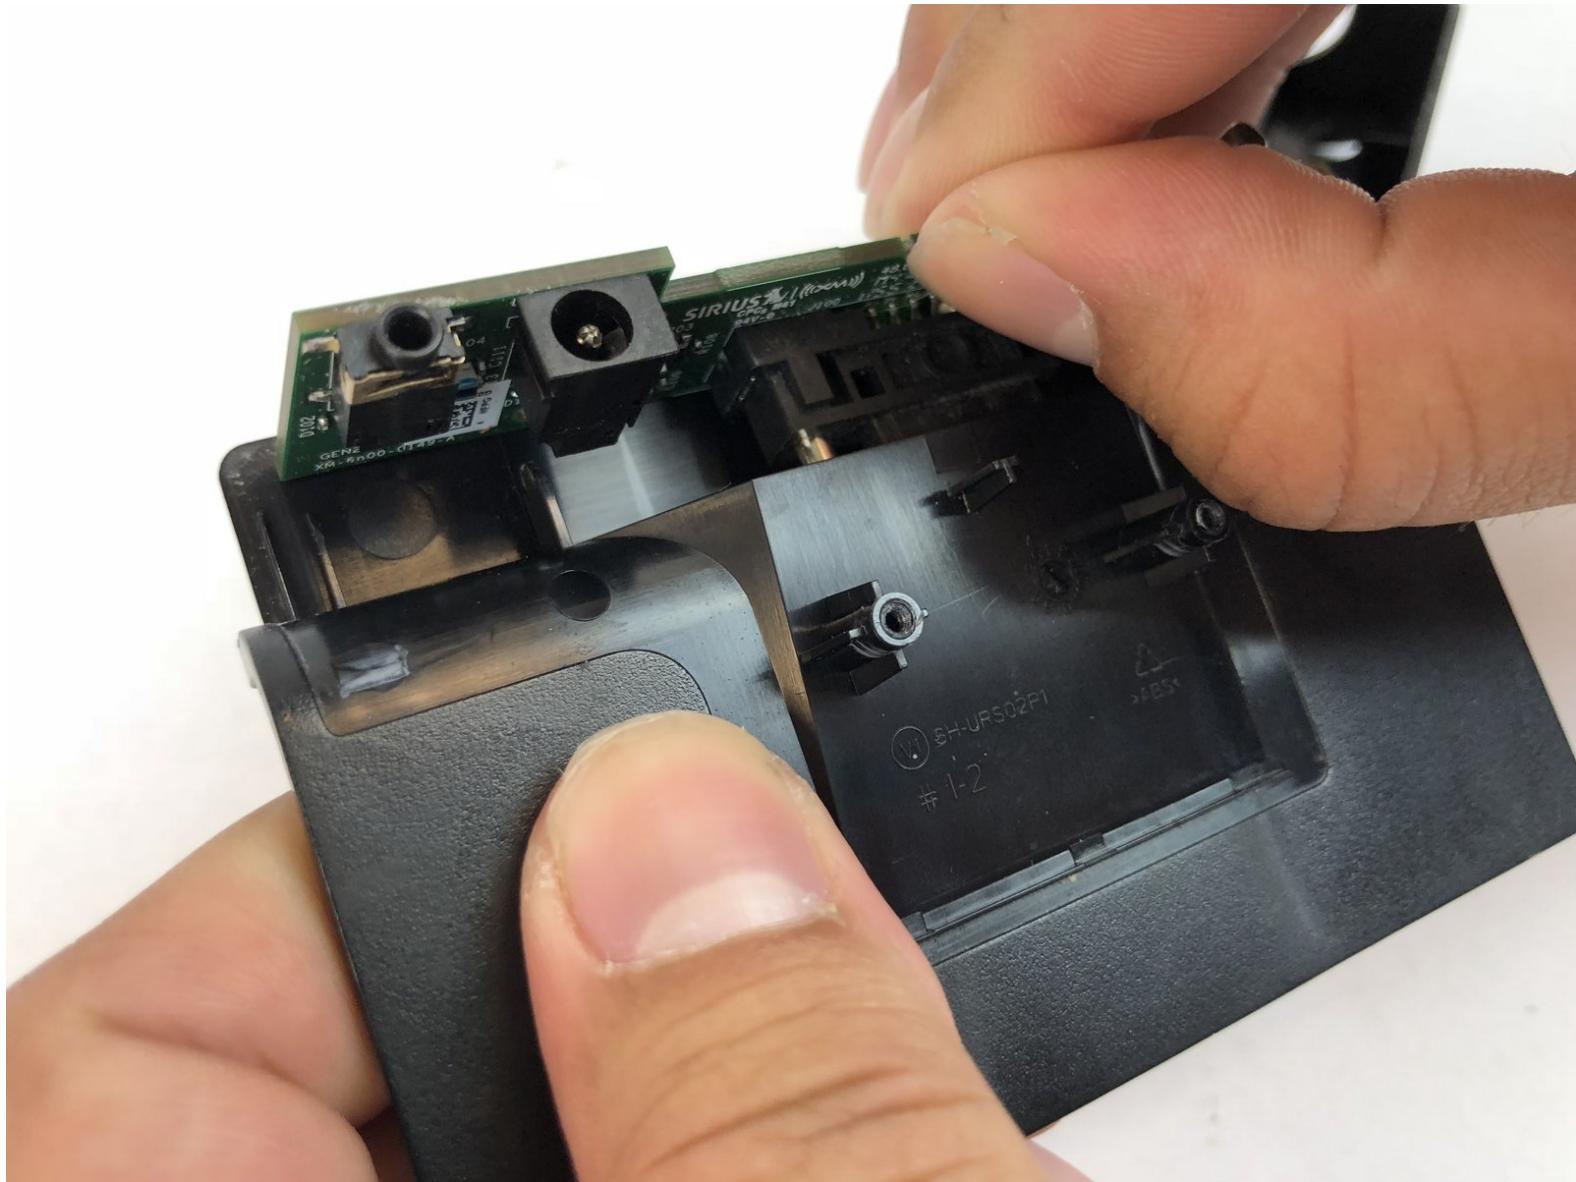

SiriusXM Onyx Plus Antennae/Powerport Replacement

How to replace the Antennae power port board in the docking station of a SiriusXM Onyx Plus radio.

Written By: Angel Rivera



This document was generated on 2019-09-22 11:23:51 AM (MST).


INTRODUCTION

How to replace the Antennae power port board in the docking station of a SiriusXM Onyx Plus radio.

TOOLS:


- T6 Torx Screwdriver (1)

Step 1 — Antennae/Powerport

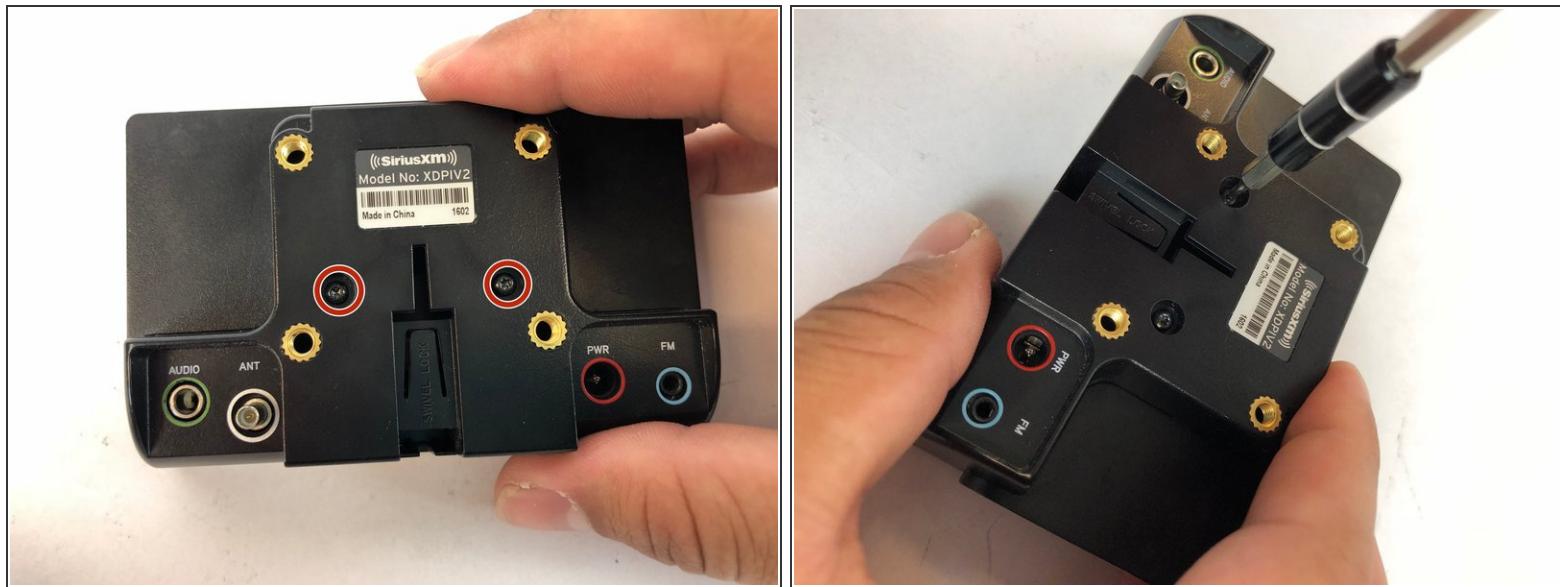


- Remove the two 7.6mm Torx T6 screws from the back of the docking station.

Step 2

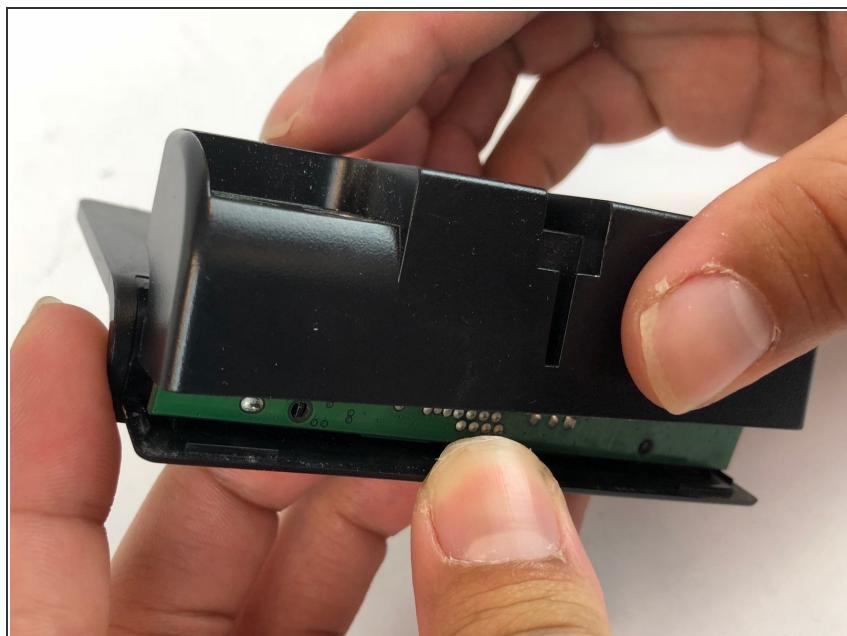

- Pull the back casing off.

Step 3

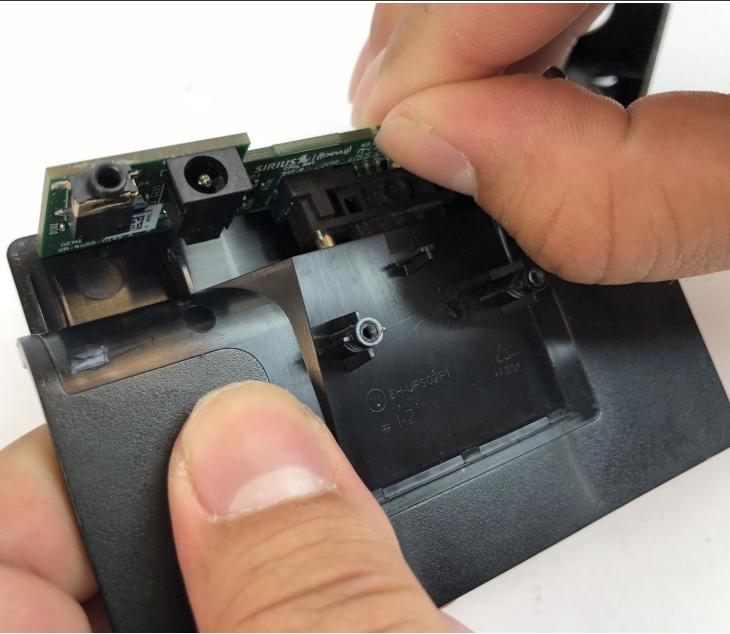

- Once apart, lift the docking station motherboard up from the two pins that are located on the interior of the front casing.

To reassemble your device, follow these instructions in reverse order.