



# SiriusXM Onyx Screen Replacement

How to replace your SiriusXM Onyx screen.

Written By: Thomas Zhang



## INTRODUCTION

The LED screen is attached to the motherboard inside the casing. This guide will show how to detach the screen from the motherboard for replacement.

### TOOLS:



- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)

## Step 1 — Motherboard




- Take the iFixit opening tool and place it between the crevice as shown.

## Step 2

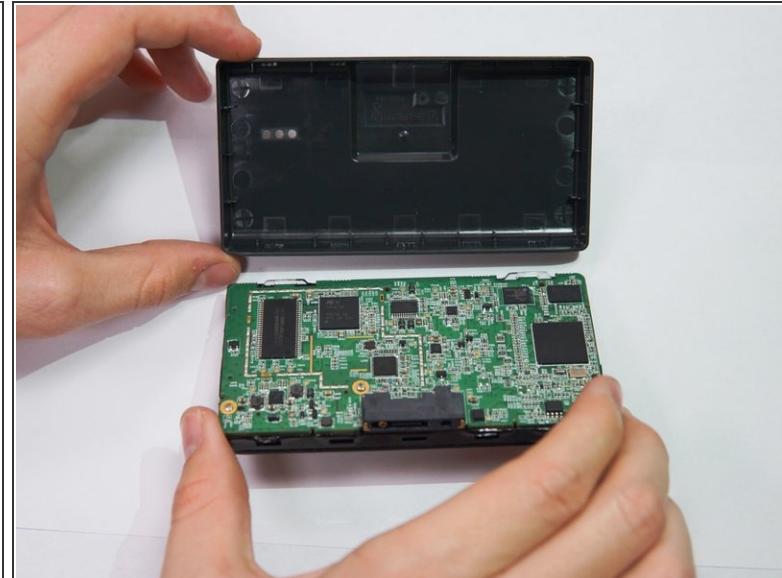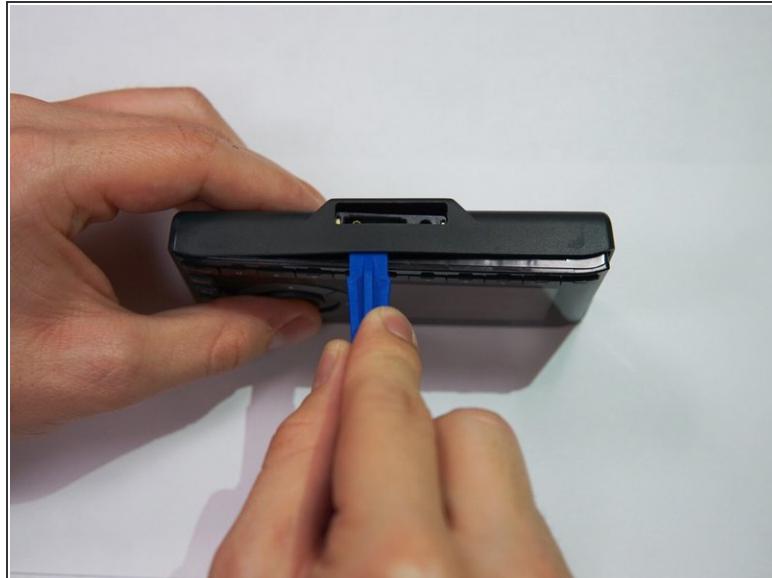


- Apply pressure to the iFixit opening tool, pushing down until the the plastic casing pops off.

## Step 3

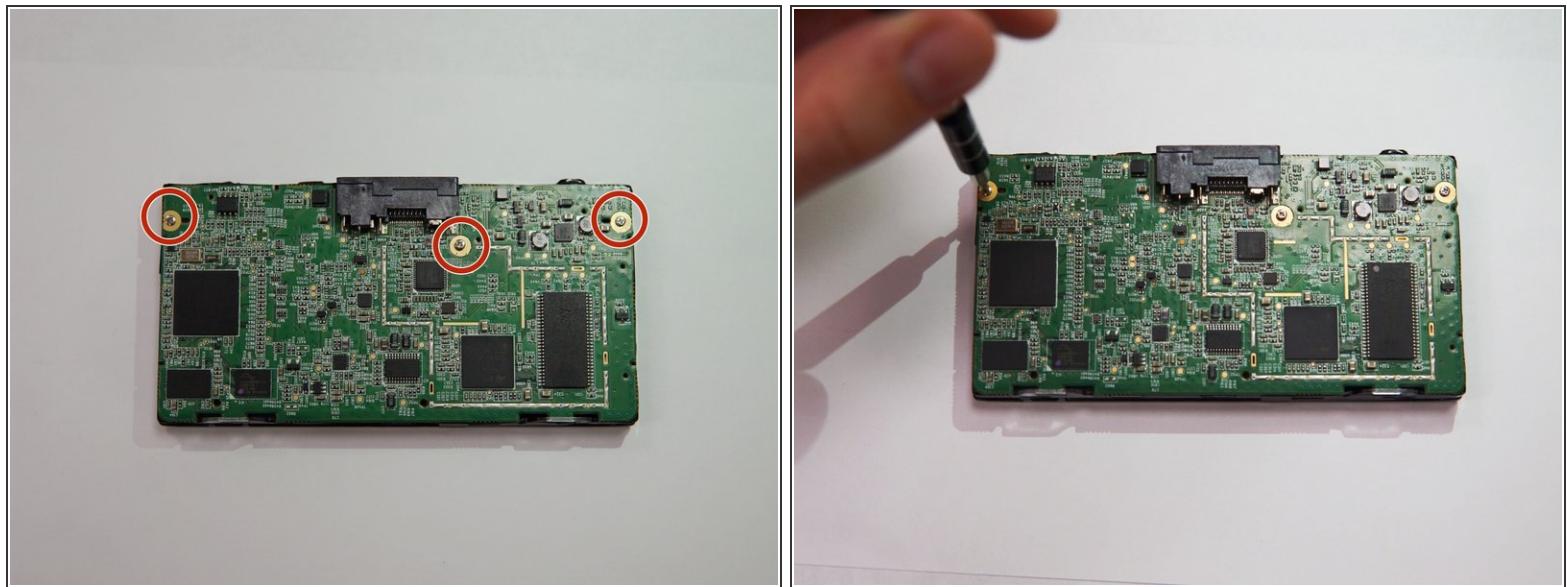



- Use the Phillips PH00 to remove the three marked screws.

## Step 4

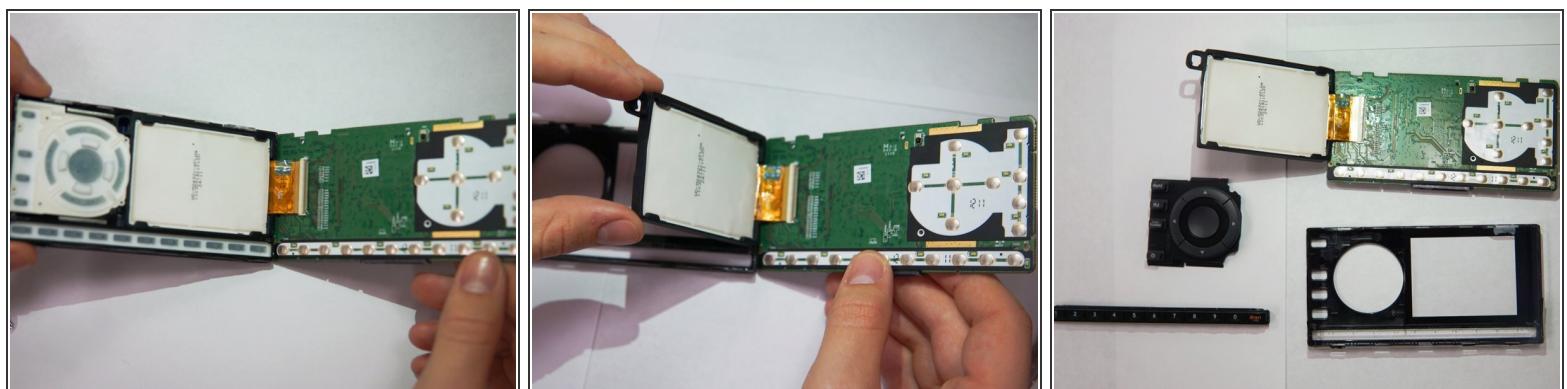

- Once the screws have been removed, the motherboard is free to come out.

## Step 5 — Screen

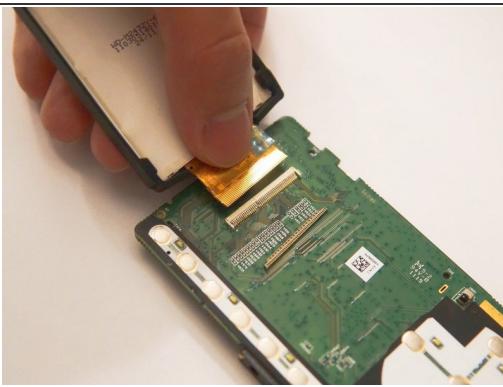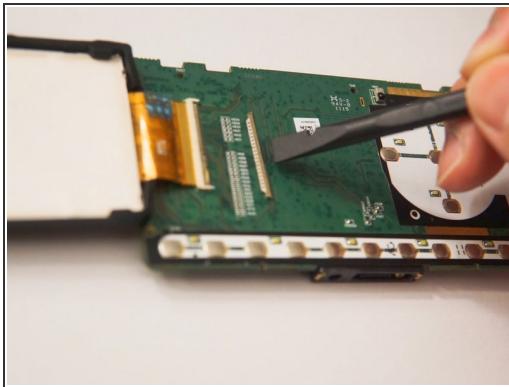

- Remove the plastic case in front of the socket using the spudger.
- Hold the screen and gently pull in the direction of the cable to separate screen from the socket.

To reassemble your device, follow these instructions in reverse order.