



Slide

This guide is made to help you disassemble the "slide" of this launcher.

Written By: Agente A-01



 **TOOLS:**

- Screwdriver (1)



Step 1 — Preparation



Keep in mind that there are many screws of varying length involved in the disassembly of this gun. It is important to group screws together by length to ensure proper reassembly.


Be sure that the device has been discharged and is unloaded before beginning the disassembly.

Step 2 — Remove

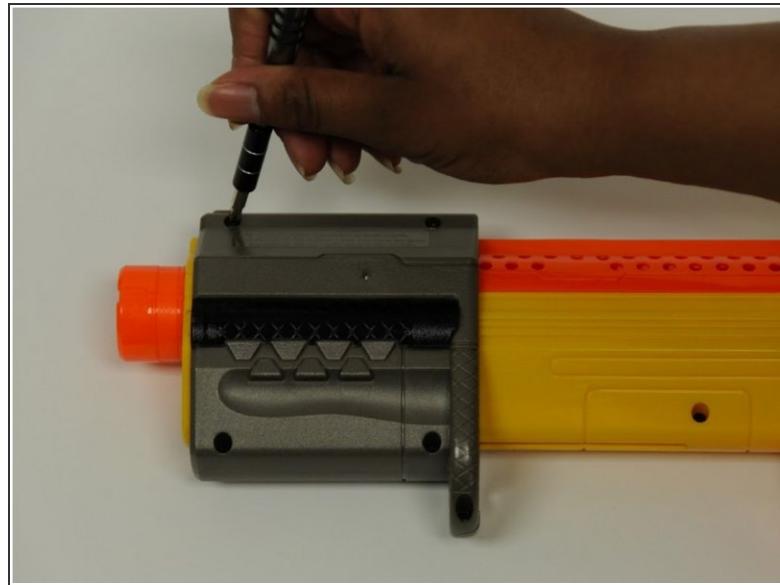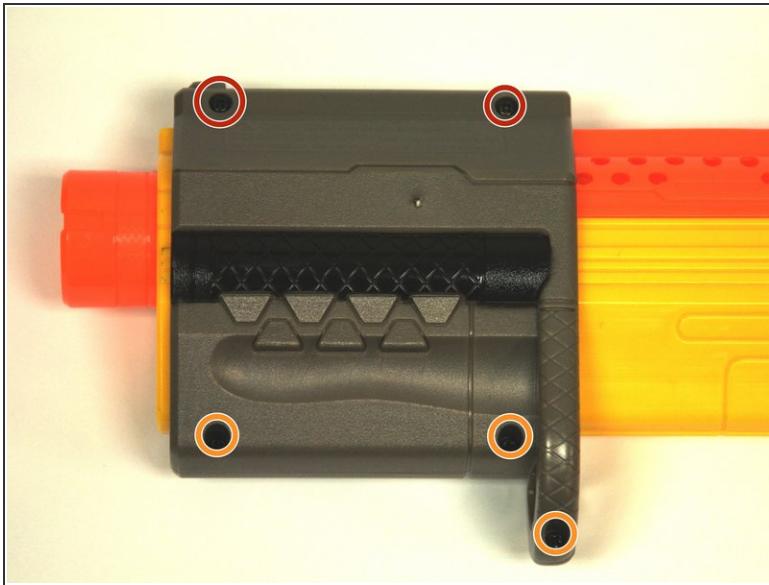

- Point the barrel of the device to the left. Remove the two 8mm philips head screws (the two top screws) holding the device slide together.
- Keep the barrel of the gun pointing to the left. Remove the three 10 mm philips head screws from the bottom of the device slide.

Step 3 — Separate the halves

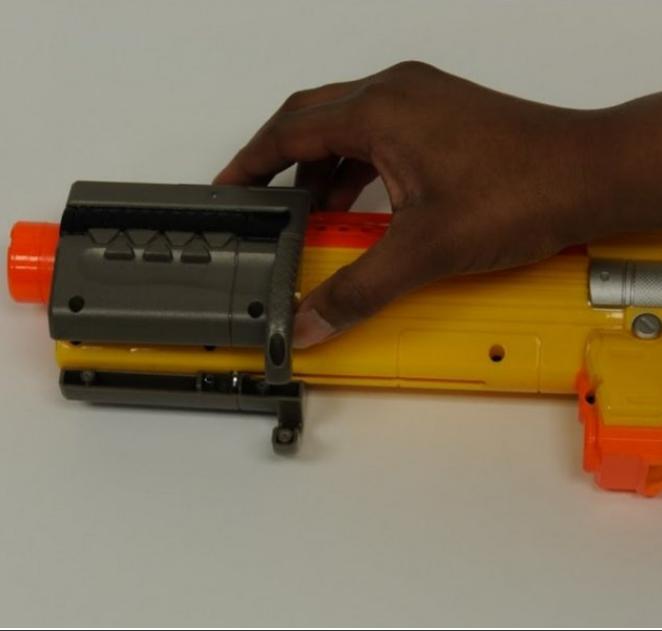

- Once all the screws are removed, separate the two halves of the device slide and put them aside.
-  Be sure to keep track of which screws correspond to the correct holes.

To reassemble your device, follow these instructions in reverse order.