




Slime Portable Air Compressor Motor Replacement

This guide will teach you how to replace in your Slime Portable Air Compressor.

Written By: Taylor Bratsch

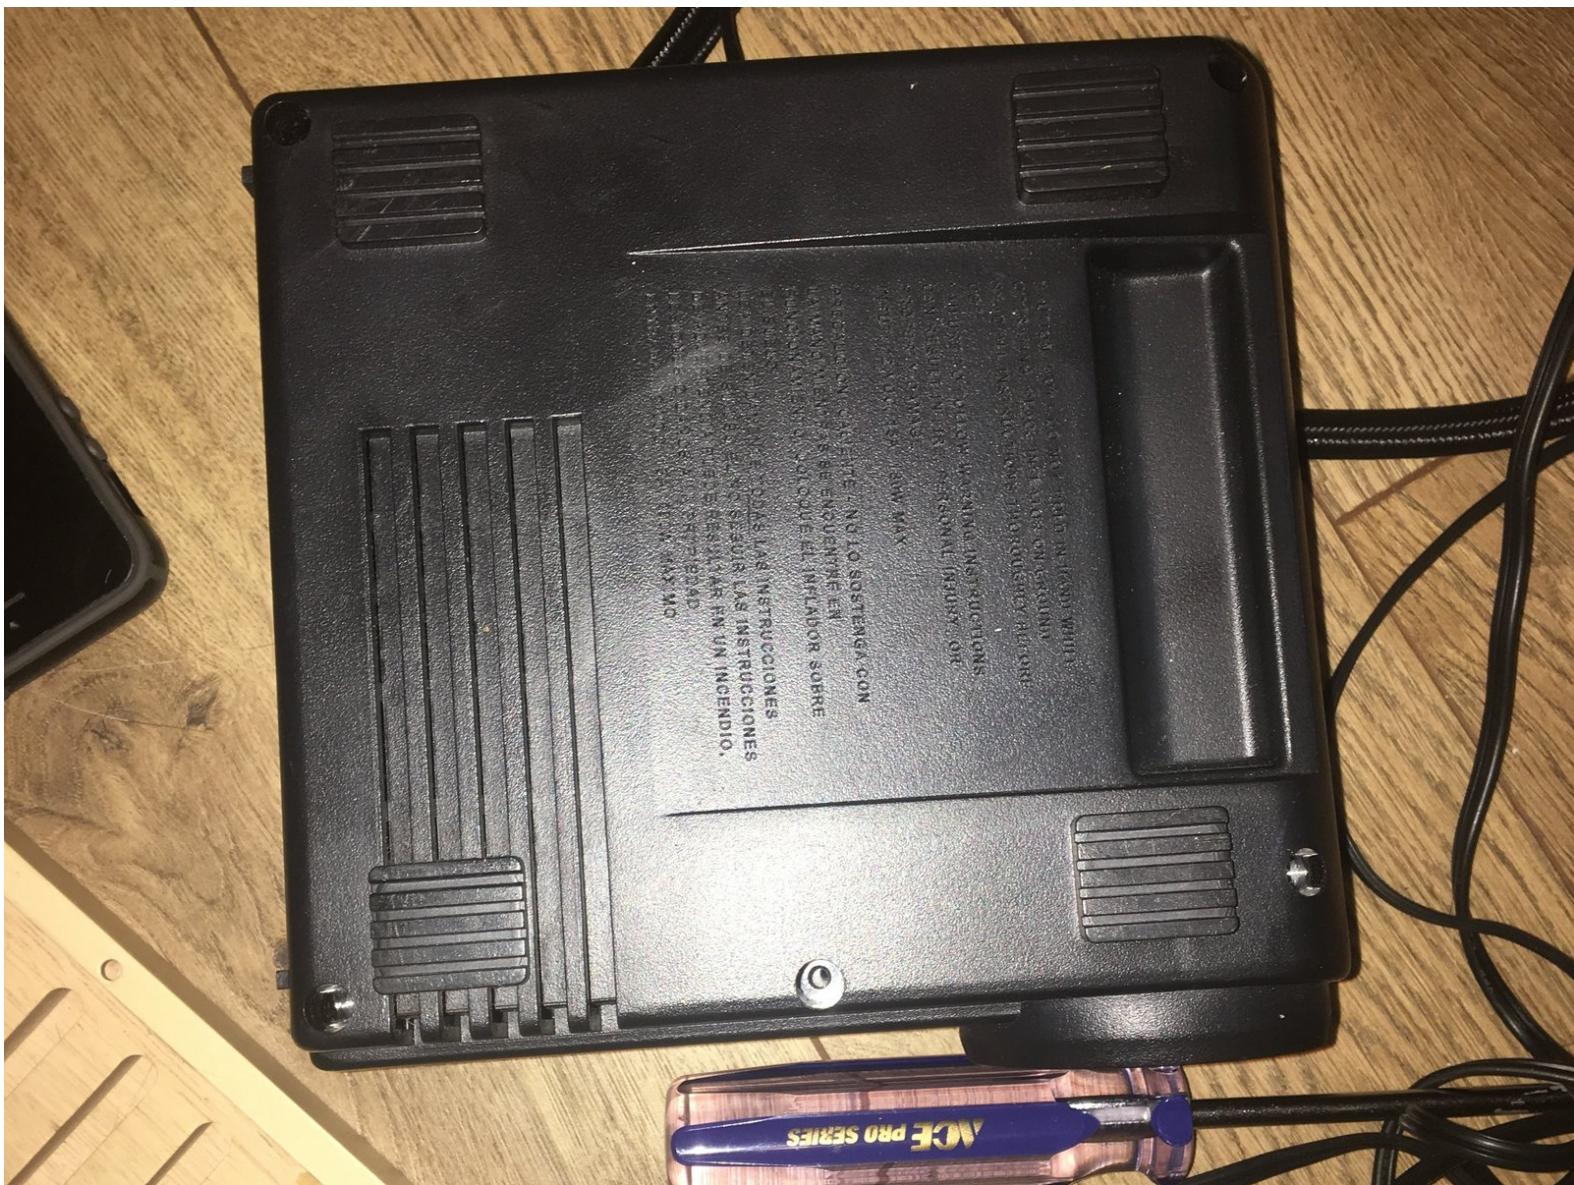


INTRODUCTION

This guide will teach you how to replace in your Slime Portable Air Compressor.

TOOLS:

- [Phillips #2 Screwdriver \(1\)](#)

Step 1 — Getting Started

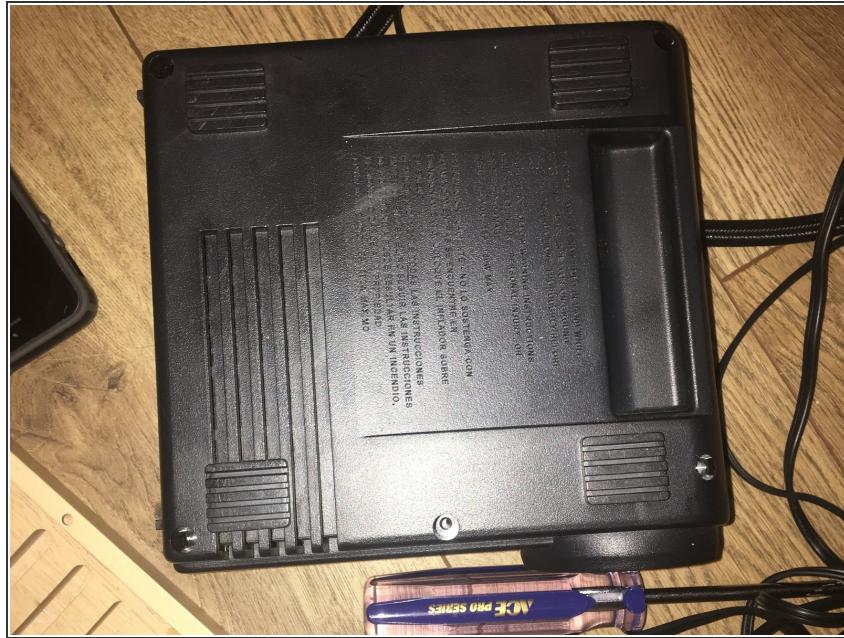

- Unscrew the back cover.

Step 2 — Remove the Cover



- Remove the back cover.


Step 3 — Remove the Light



- Remove the **light fixture** from the slot in the front.


 Be careful when removing the circuit board from the base so the wires don't break.

Step 4 — Remove the Motor Cover

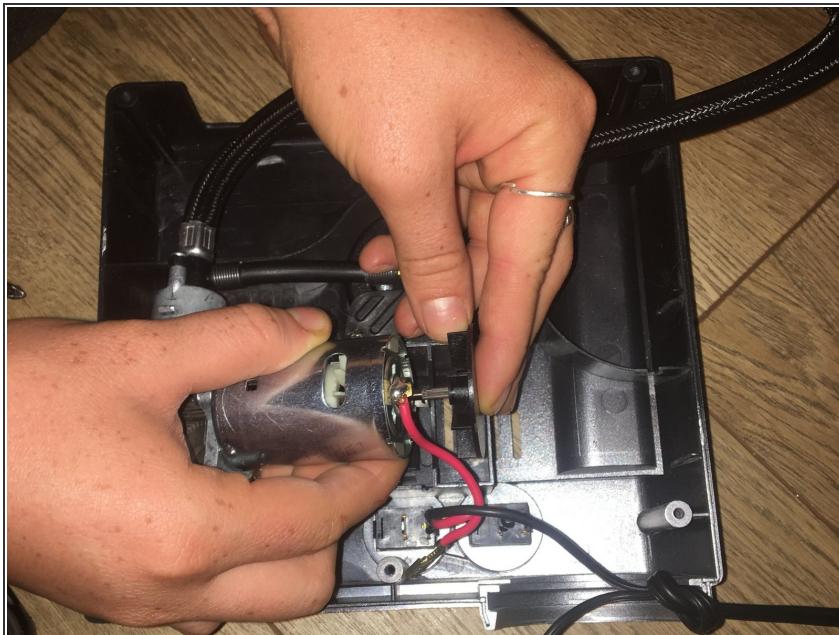

- Pull the black end cover on the motor off and set aside.


Step 5 — Remove the Gauge Cover

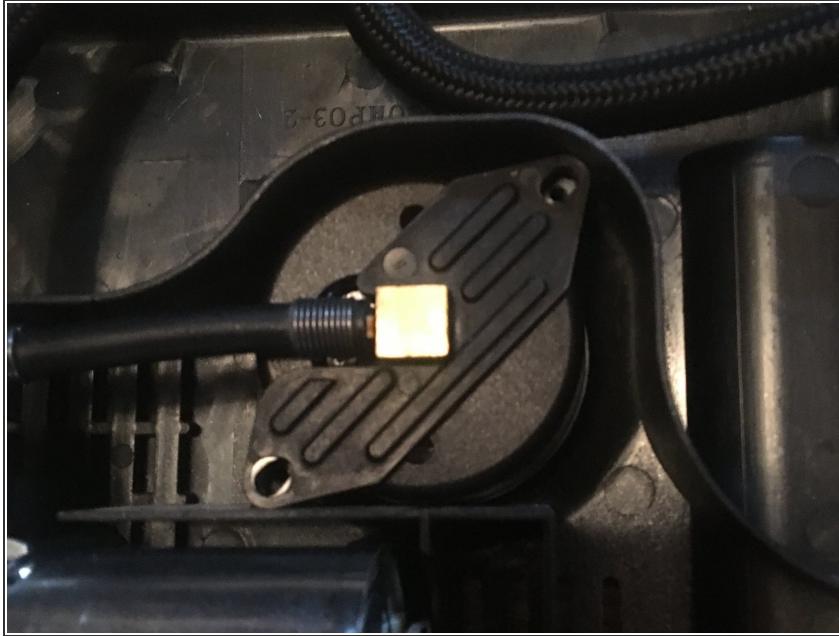

- Unscrew the gauge back cover and remove.

(i) Set the screws and the cover aside.

Step 6 — Remove Gauge

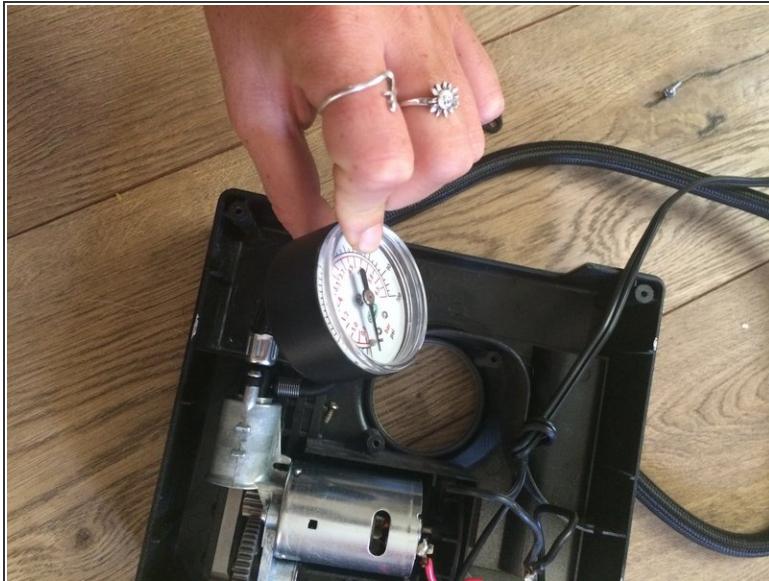

- Remove the pressure gauge.


Step 7 — Remove the Hose



- Remove the hose by unscrewing it from the motor.
- Set the pressure gauge and hose aside,


! Take care when removing the hose to hold on to the spring inside.

Step 8 — Remove the Motor

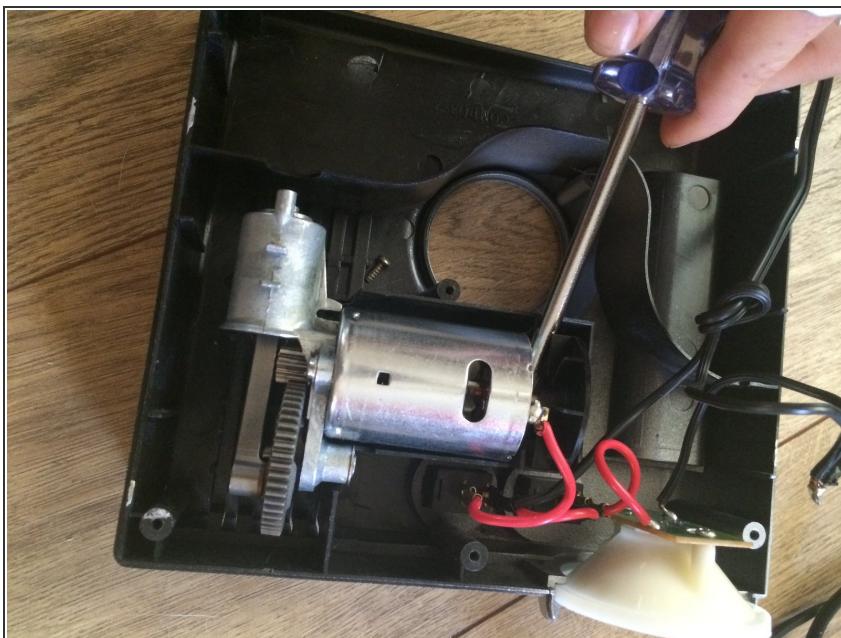

- Pry the motor up from the base.

Step 9 — Unplug the Motor

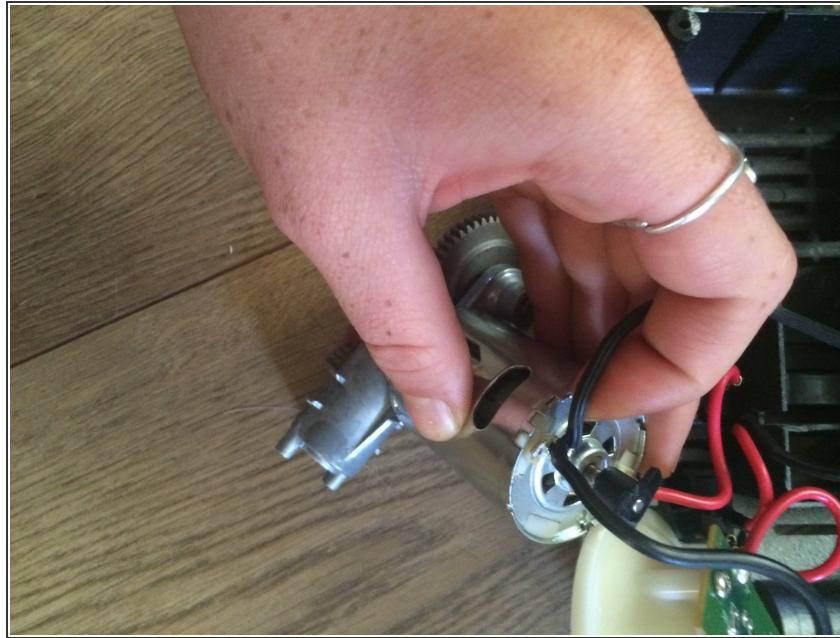

- Unplug the black cord connected to the top of the motor.
- Remove the motor.

Step 10 — Replace



- Replace the motor.

Step 11 — Reassemble



- Reassemble the air compressor and continue use.

To reassemble your device, follow these instructions in reverse order.