



# Small Engine Recoil Starter Replacement

This guide will show how to take apart and repair the small engine recoil starter on a lawn mower.

Written By: James Marmaud



## INTRODUCTION

This guide will show how to take apart and repair the small engine recoil starter on a lawn mower.

### TOOLS:

- Phillips #2 Screwdriver (1)
- Socket Set (1)

## Step 1 — Recoil Starter



- To begin the repair remove the protective casing. (This removal may vary with different lawnmowers.)

## Step 2



- Locate the recoil housing cap.

## Step 3




- Carefully remove the housing cap.  
(Removal may vary)

## Step 4



- After removing the recoil, unscrew the cap that holds the pulley to the recoil starter housing.

## Step 5

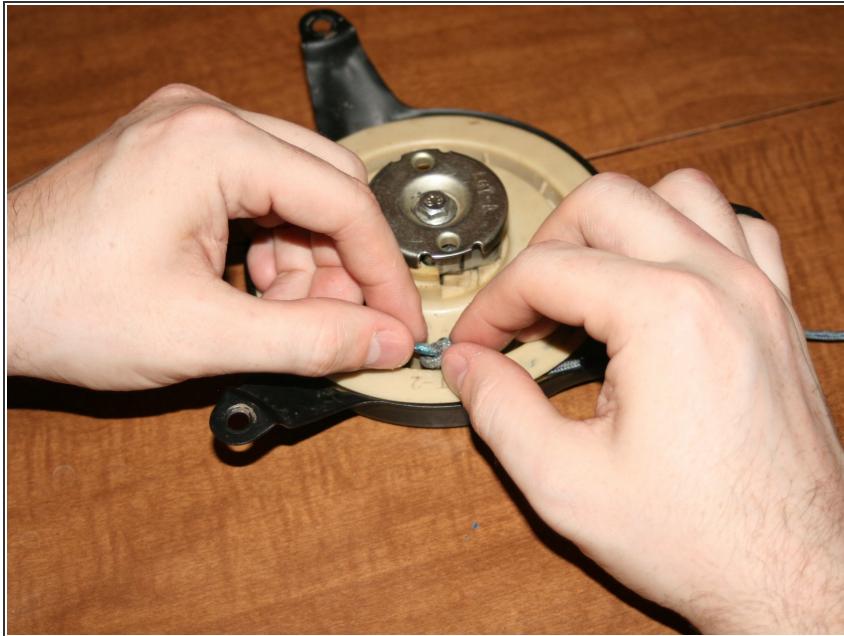


- Untie the knot in the rope and slide it out of the housing.

## Step 6



- With this particular model there is a middle lock piece. Use a socket wrench to unscrew and release the coil.

## Step 7

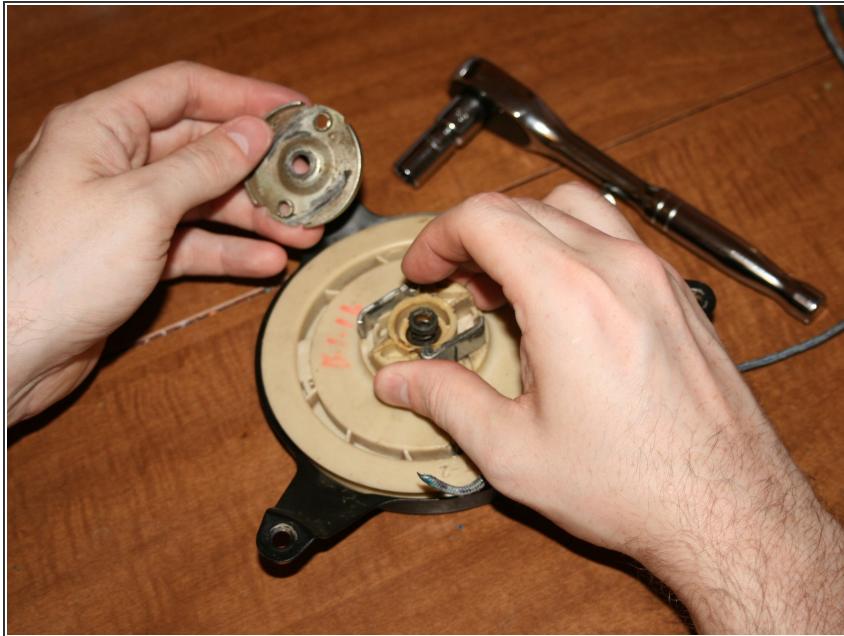

- Once unscrewed, remove the metal piece which releases the tension on the coil.

## Step 8



- At this point add the new coil to the housing base. Snap the coil into position where the old one was.

To reassemble your device, follow these instructions in reverse order.