



Sol Republic Deck Volume Buttons Replacement

In this replacement guide we will show users how they can replace the volume buttons on the SOL Republic Deck. The replacement guide will show how to replace the (-) button, but the (+) button will follow the same steps.

Written By: Rebekah Simmons




INTRODUCTION

The volume buttons on the speaker are two black buttons located on the front of the device. The volume up button, which increases the sound of the speaker, is on the right side shaped like a plus sign (+) and the volume down button, which decreases the sound of the speaker, is on the left side shaped like a minus sign (-).

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)


Step 1 — Volume Buttons

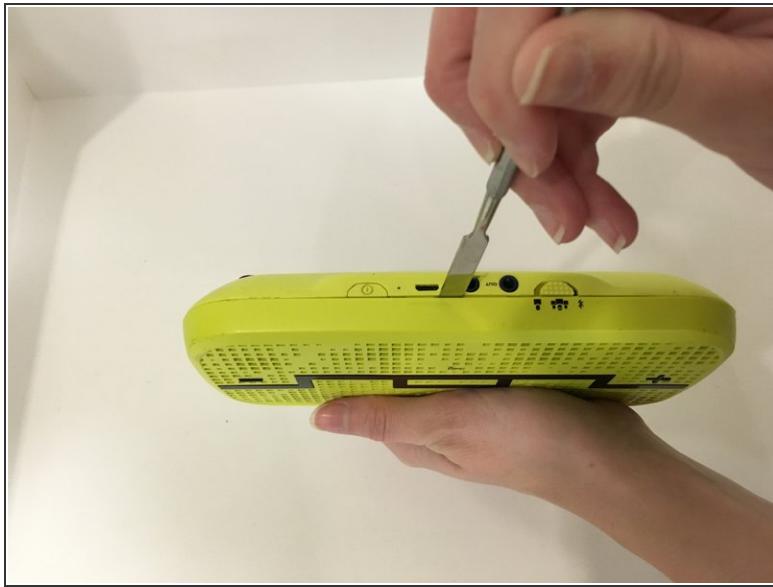

⚠ When working with electronics, it's important to choose a tool that's ESD-safe to avoid accidental damage to the device. The regular black nylon spudger or a plastic opening tool should be used whenever possible.


- To separate the front face plate from the bottom half of the speaker, insert a spudger into the the middle groove.
- Insert another spudger into the middle groove to hold the front plate up as you separate both plates on all sides. Use multiple opening tools to keep plates separated if necessary.

Step 2

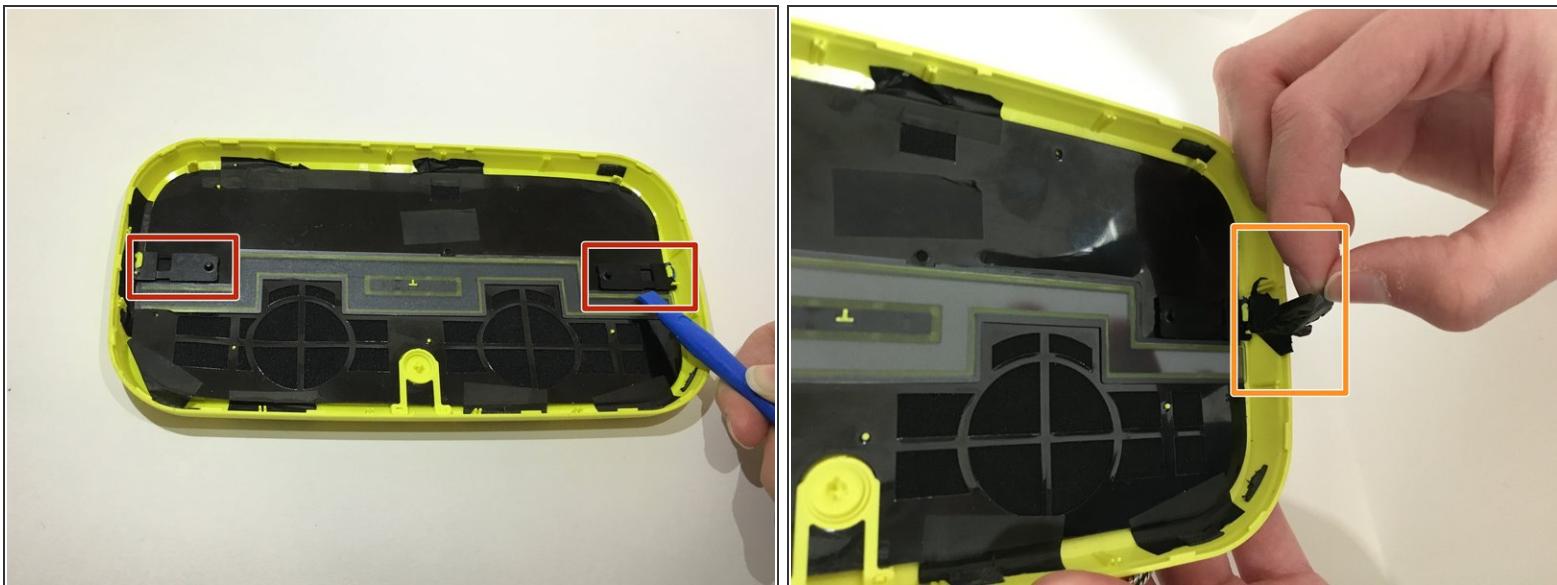

- Locate the black plastic volume buttons on each side of the back of the speaker face.
- A piece of black tape on the side panel may also be covering the yellow connector tip that holds the volume button in place. Remove the black tape if necessary.

Step 3

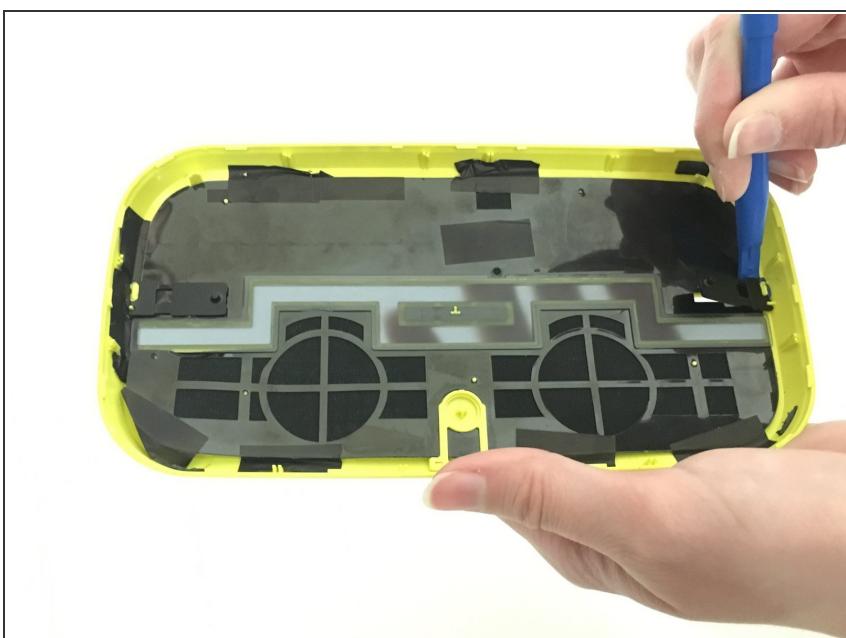

- Using the plastic spudger, pry the button from the front plate of the speaker. The volume button is connected to the speaker by a plastic tab that has blue glue holding it down. The entire volume button can be removed from the front plate by carefully using the spudger to lift it up until it comes off.

To reassemble your device, follow these instructions in reverse order.