



Solio Rocsta Internal Components Replacement

Use this guide to replace the solar panel and battery assembly.

Written By: Aimee Whiteside




INTRODUCTION

This guide shows you how to remove the battery and motherboard from the body of the Solio Rocsta.

TOOLS:


- [T7 Torx Screwdriver](#) (1)
- [T6 Torx Screwdriver](#) (1)
- [Spudger](#) (1)

Step 1 — Internal Components

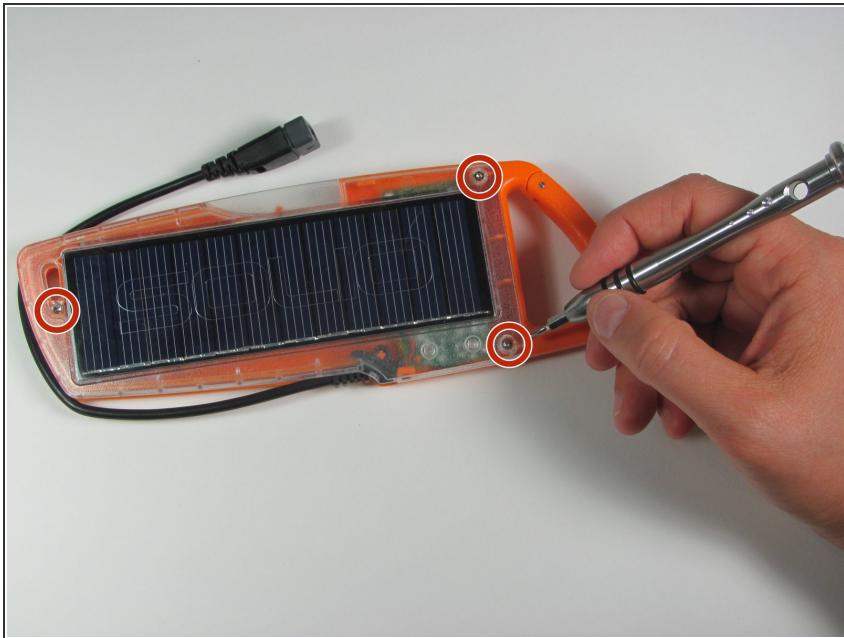


- Remove the three 7mm Torx T7 screws.

Step 2

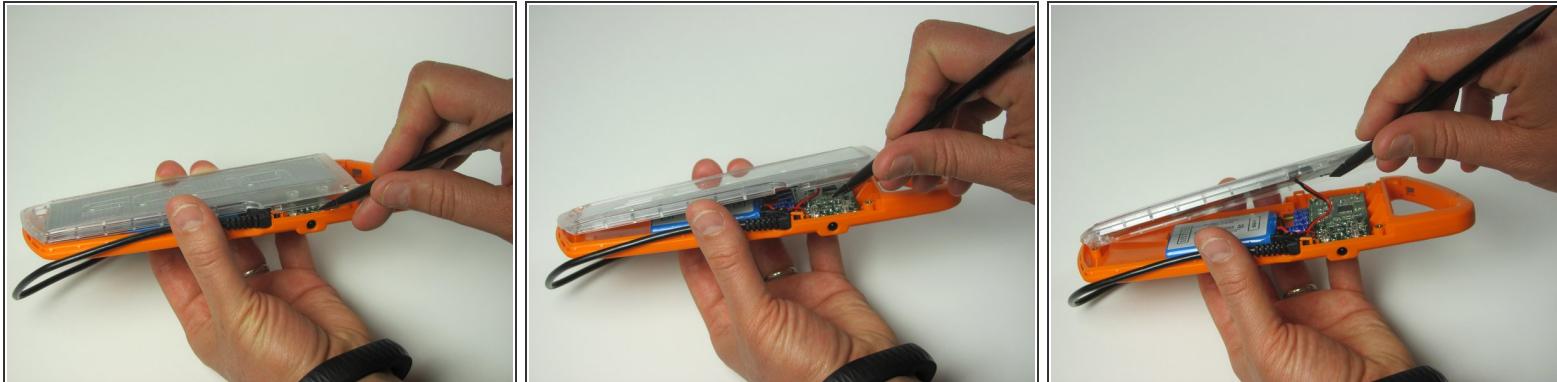

- Insert the flat end of the spudger between the top panel and the body.
- Use the spudger as a lever to carefully pry apart the two panels.
 - ⚠ As you pry, take care not to break the small orange clip holding the top to the body.
- Lift the panel above and away to disconnect the panel from the body.
 - ⚠ Be careful when lifting because you could break the wiring connecting the motherboard to the panel.


Step 3

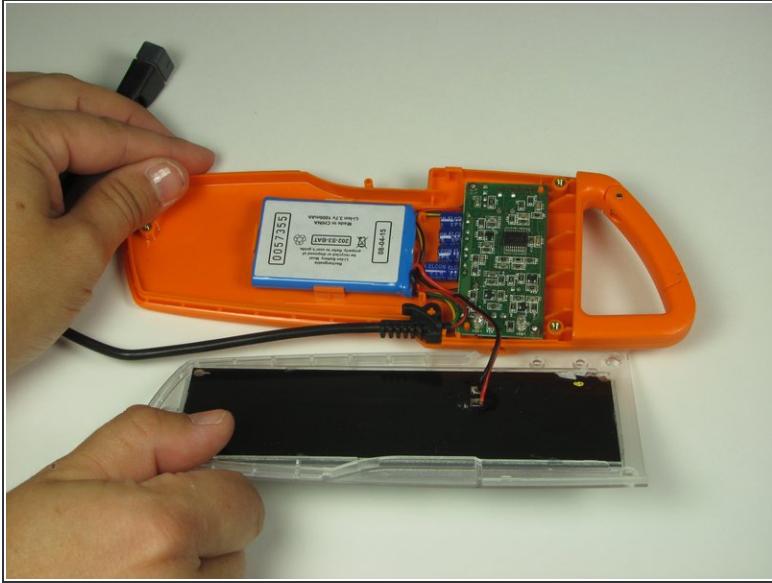

- Lift the panel off the body and set it next to the device.



 Remember to use caution when lifting because you could break the wiring connecting the motherboard to the panel.

Step 4

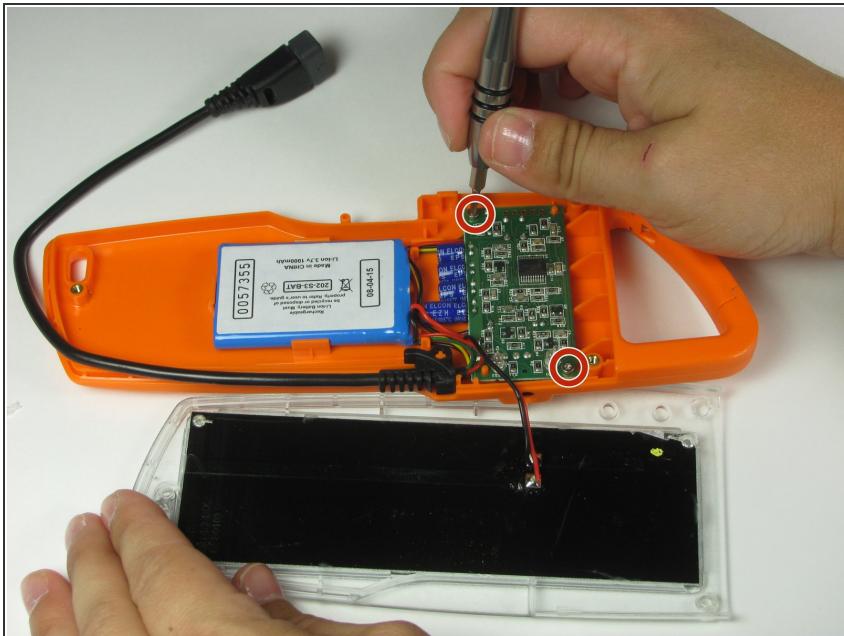


- Remove the two 6mm Torx T6 screws from the motherboard.

Step 5

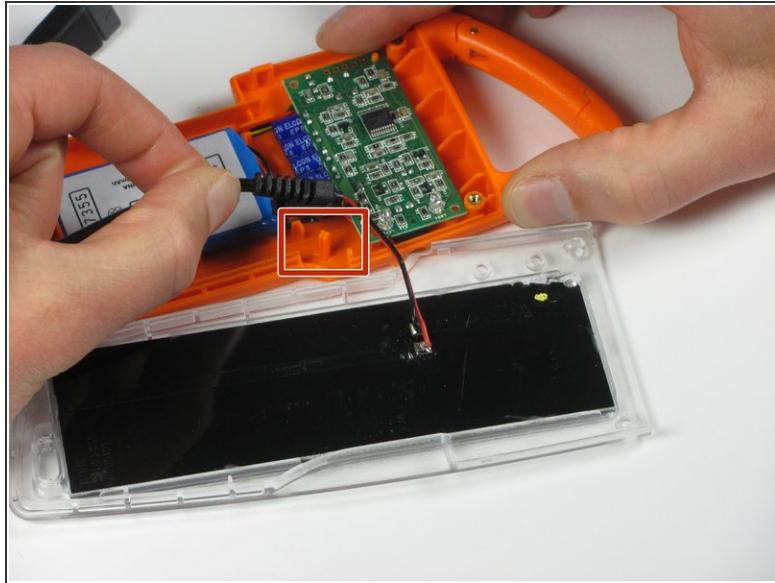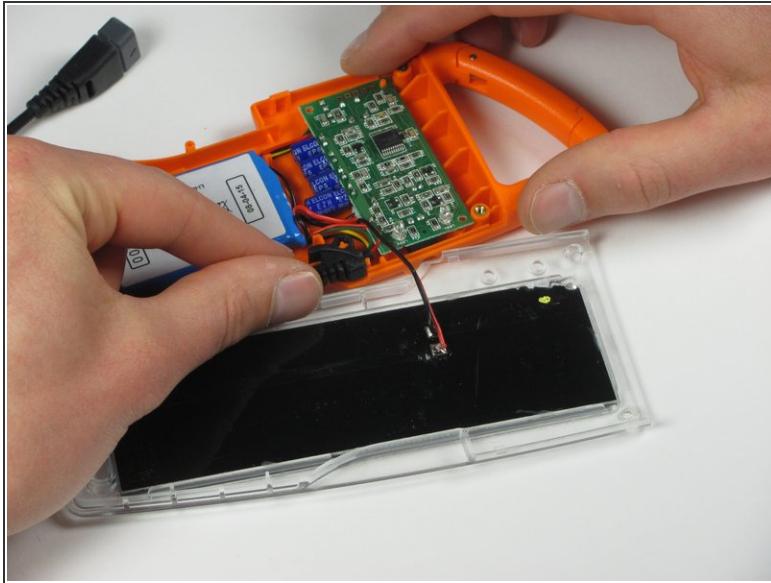

- Lift the end of the USB cord out of the body.
- The cord fits over an orange peg.

Step 6

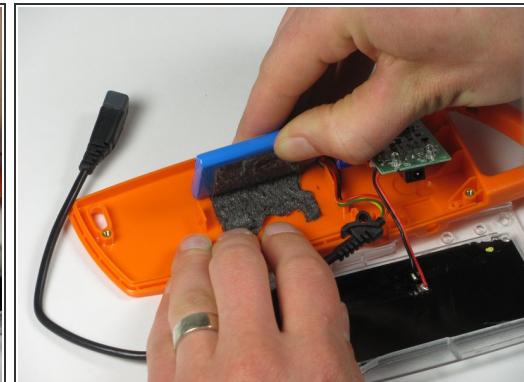

- Lift up the battery with your fingers or with the flat end of the spudger.
- *i* Be prepared to use force because the battery is adhered to the body.
- ⚠ Do not try to remove the battery completely because the wiring connects to the motherboard.

Step 7



- Remove the battery and the motherboard from the body.

To reassemble your device, follow these instructions in reverse order.