



# Sonos One Protective Cover Replacement

This guide will demonstrate how to detach and replace the protective metal housing for the Sonos One.

Written By: Marcus Glowa



## INTRODUCTION

This guide is for the replacement of the metal housing for the Sonos One.

Important: Accessing the internals of the Sonos One will void the factory warranty and make the unit rejected for factory repair, even if warranty is expired.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [T10 Torx Screwdriver](#) (1)

### PARTS:

- [None](#) (1)

## Step 1 — Protective Cover



- Disconnect all power cords.
- Remove the rubber foot and plastic screw guard on the bottom of the device using a plastic opening tool.

## Step 2



- Remove the four 10mm Torx T10 screws from the bottom of the speaker.

## Step 3



- Remove the bottom cover by squeezing the protective cover slightly while pushing up with your fingers.

## Step 4



ⓘ The protective cover clip is very thin and deforms easily.

- Remove the single 8mm Torx T10 screw and protective cover clip.

## Step 5



- Slide the protective cover upwards to remove.

To reassemble your device, follow these instructions in reverse order.