



# Sonos Play 1 Exterior Screen Replacement

If the screen protecting the speakers is damaged, use the guide to replace it (requires 54 bit driver kit, prying tools and precision tweezers).

Written By: Adan Camerino Macias



## INTRODUCTION

If the screen on the Sonos Play 1 is dented, cracked or damaged, it may interfere with audio performance and may cause damage to the speakers. In order to prevent damage to the speakers and increase the devices performance, the exterior screen protecting the internal housing of the speakers will need to be replaced. This guide will demonstrate this process of removing the screen.

## TOOLS:

- [iFixit Opening Tools](#) (1)
- [Metal Spudger](#) (1)
- [Tweezers](#) (1)
- [64 Bit Driver Kit](#) (1)

## Step 1 — Exterior Screen



- Remove the rubber footing from the bottom of the device. Pry it up from one end using one of the plastic opening tools.
- Once you pry open one end, use precision tweezers to remove rubber footing.

## Step 2



- Using a metal spudger, pry open a corner of the adhesive tape.
- Use precision tweezers to remove the adhesive tape.

## Step 3



- Remove the four 10 mm Torx security #10 screws that hold the base together.
- Remove the base by lifting it vertically away from the bulk of the device.

## Step 4



- Remove the 10 mm Torx security #10 screw that holds down the exterior screen.
- Using precision tweezers, remove the metal bracket.

## Step 5



- Remove the exterior screen by lifting it away from the bulk of the device.

To reassemble your device, follow these instructions in reverse order.