



Sonos Play 5 Teardown

I had ants nesting in my Play 5. My choices were burn it with fire, or tear it apart.

Written By: Tim U



INTRODUCTION

I had ants nesting in my Play 5. My choices were burn it with fire, or tear it apart.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Sonos Play 5 Teardown



- Pull the front bezel forward to remove. It's only secured by velcro

Step 2



- Gently peel the rubber base away from the edges to remove 6 phillips head screw.
- The base plate will lift straight up to reveal 3 metal stanchions. I believe these are the wireless antennas.