


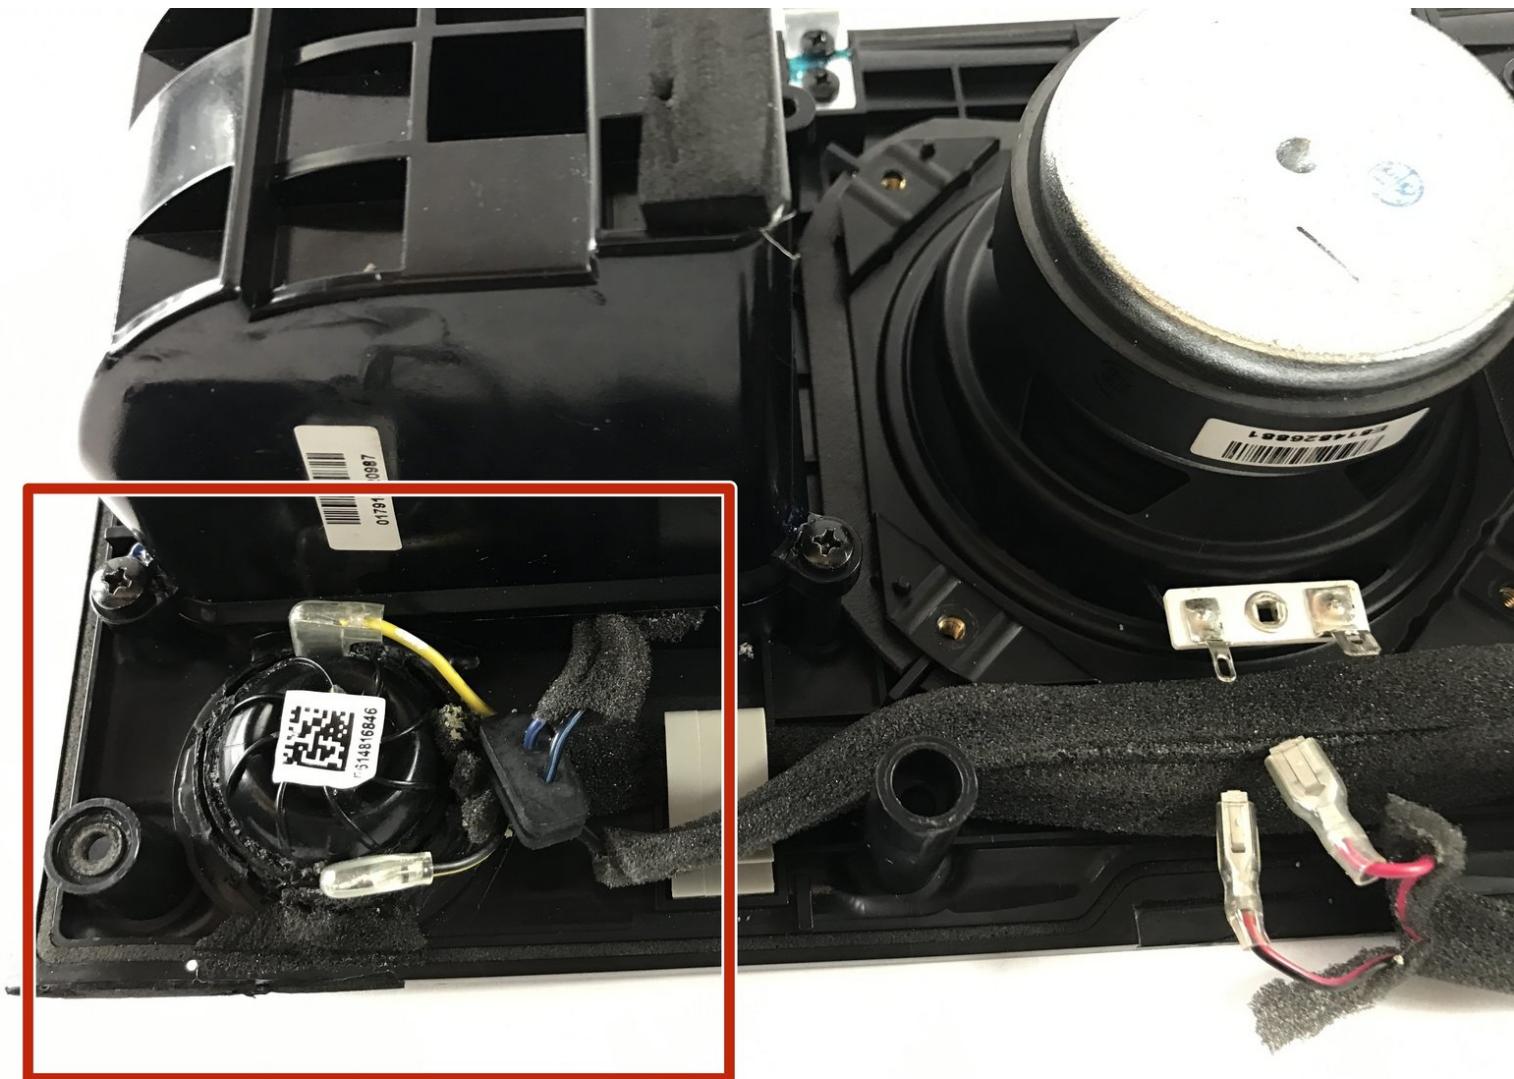

Sonos Play 5 Tweeter Replacement

How to replace Sonos Play 5 speaker tweeter.

Written By: Warren Girouard



INTRODUCTION

How to replace the Tweeter in a Sonos Play 5 speaker

TOOLS:

- **Phillips #2 Screwdriver** (1)
- **Heavy-Duty Spudger** (1)

Step 1 — Front Panel Assembly



- Disconnect any power to the speaker and wait a few minutes for the capacitors to fully discharge.
- Flip the speaker upside down.

i There may be a rubber foot covering the bottom screws (not included in picture). Remove this by pulling up from one of the corners using a spudger.

Step 2



- Remove eight 10mm Phillips #2 screws
- Remove the bottom panel by pulling upwards.

⚠ Be very gentle with the ends of the three antennas. They are very fragile.

Step 3



- Flip the device so that the grille is facing up.
- Locate the line on the right side of the speaker where the grill and the plastic meet, and place your plastic opening tool in the gap.
- Run the spudger along the gap, loosening the grille from the plastic. Repeat this process on the left side as well.
- Gently pull up on the grille, removing it from the front panel.

Step 4



- Remove the six 8mm Phillips #2 screws.
- Remove the two 10mm Phillips #2 screws.


Step 5



- Locate the line on the right side where the front panel and back panel meet. Place a plastic opening tool in the gap, and run it along the gap. Repeat this on the left side.
- Use the opening tool to lift the front plate. If a plastic tool is not providing enough leverage, use a metal opening tool.
- Gently pull up on the face plate to ensure it has been detached from the enclosure.


⚠ When pulling on the face plate be cautious because it is still connected by wires on the back of the plate.

Step 6

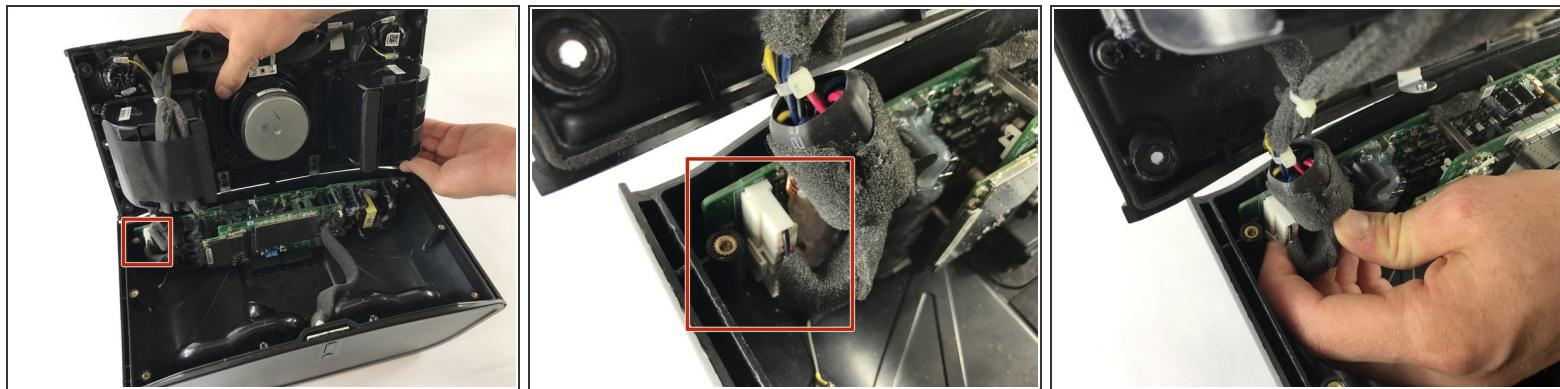



- Lift up the front panel, forming a 90 degree angle with the back panel. Locate the locate ten pin connector shown. This is the wire that connects the front panel to back panel.
- Press down on the small tab located on the connector. With the tab firmly pressed down, pull the connector out from its socket.
- The faceplate assembly is now fully detached from the rest of the speaker.

Step 7 — Tweeter

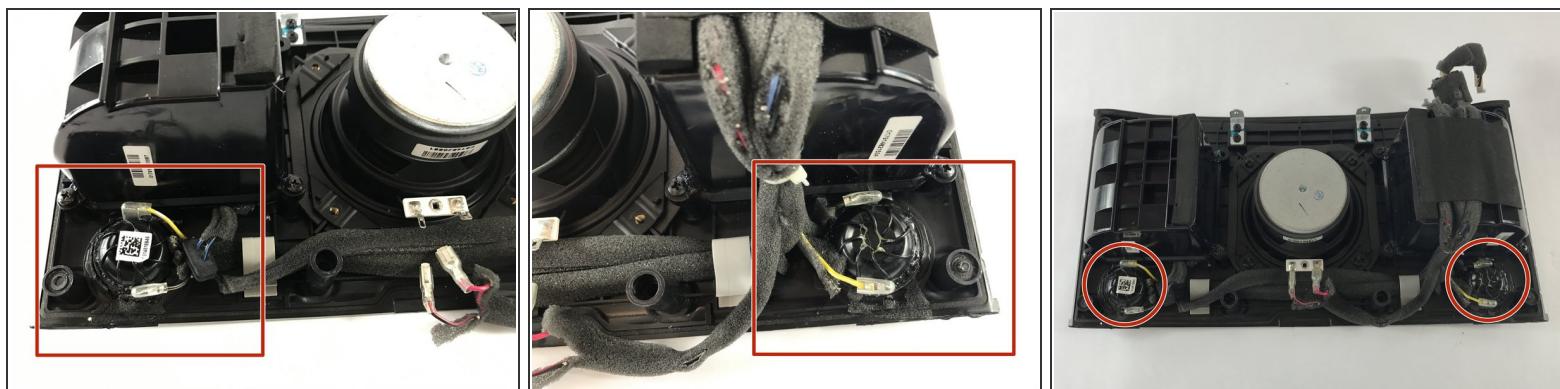


- Locate the Tweeters on the back of the front panel assembly.

Step 8

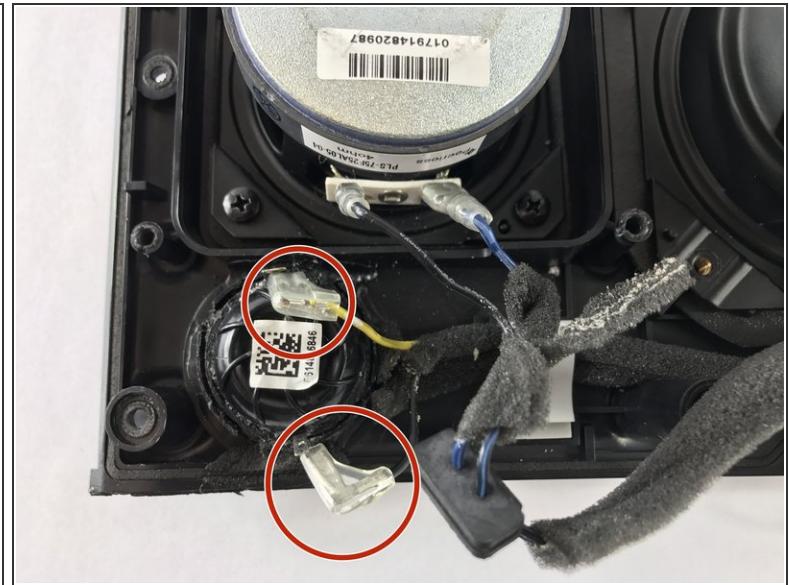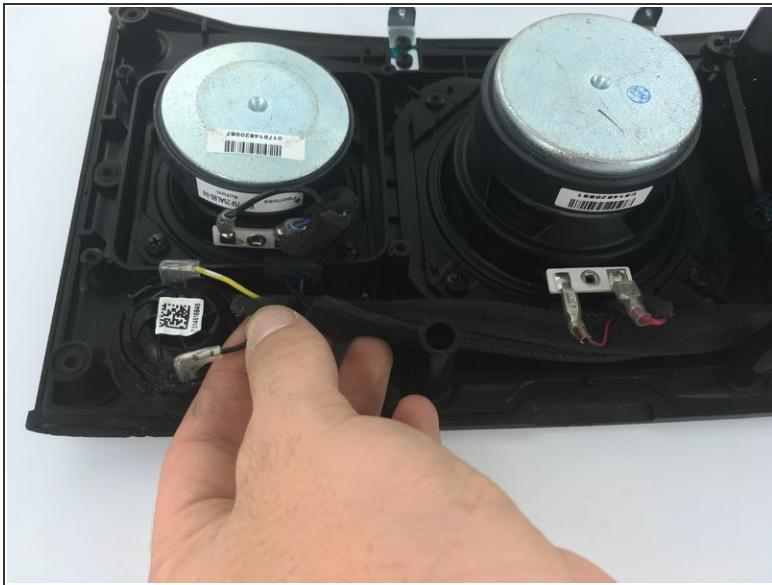

- Remove wires connected to the Tweeter.

Step 9

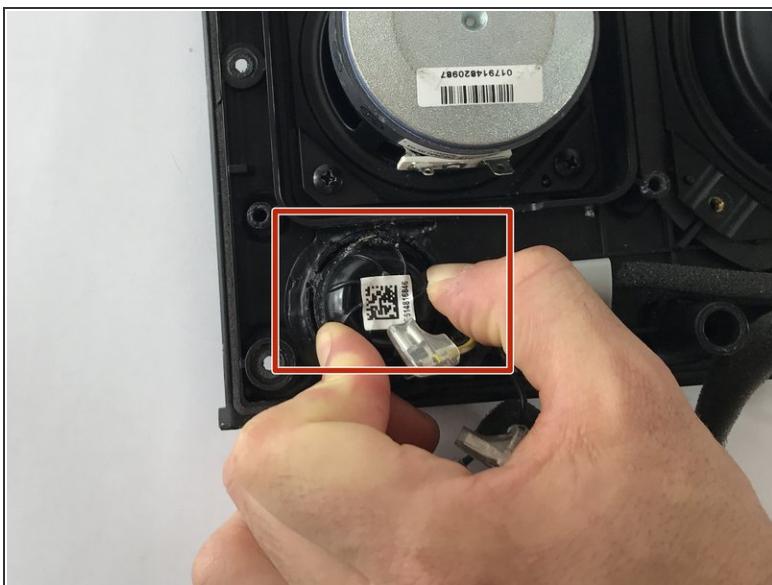

- Lightly push down on the tweeter and then twist it out gently counterclockwise.
- Gently lift the tweeter out.

To reassemble your device, follow these instructions in reverse order.