



Sony Action Cam HDR-AS15 Battery Replacement

If your camera will not turn on, consider replacing the battery. Here, you will learn how to replace the battery for the Sony HDR-AS15.

Written By: Justin Calean



INTRODUCTION

Sometimes batteries die. In this guide, we will show you how to replace the battery in the Sony Action Cam HDR-AS15. This is a relatively simple guide, not requiring the removal of any screws.

TOOLS:

- [Tweezers \(1\)](#)

Step 1 — Getting to the Battery



- To access the battery, push left on the rear cover of the action cam. The rear panel should easily slide to the side.

Step 2 — Removing the Battery Tray



- Open the rear panel outward to reveal the battery tray and memory card slot.
- Pinch the protruding bar next to the "Pull" text and slide the tray outwards.

Step 3 — Removing the Battery



- When the battery tray has been removed from the Action Cam, you can simply pull the battery out of the tray.

To reassemble your device, follow these instructions in reverse order.